

IMPORTANT

READ CAREFULLY BEFORE USE

KEEP SAFE TO CONSULT AT A LATER DATE



BOSCH



Translation of original operating instructions for BULLS Pedelecs for young people with BOSCH Purion on-board computer

Twenty 4 E, Twenty 6 EVO

22-26-1001, 22-26-1002

MY22B01 - 42_1.0_30.08.2021

Contents

| | | |
|----------|--|----|
| 1 | About these operating instructions | |
| 1.1 | Manufacturer | 12 |
| 1.2 | Laws, standards and directives | 12 |
| 1.3 | Language | 12 |
| 1.4 | For your information | 12 |
| 1.4.1 | Warnings | 12 |
| 1.4.2 | Markups | 12 |
| 1.5 | Type number and model | 13 |
| 1.6 | Frame number | 13 |
| 1.7 | Identifying the operating instructions | 13 |
| 1.8 | Aim of the operating instructions | 14 |
| 2 | Safety | |
| 2.1 | Residual risks | 15 |
| 2.1.1 | Risk of fire and explosion | 15 |
| 2.1.1.1 | Rechargeable battery | 15 |
| 2.1.1.2 | Overheated charger | 15 |
| 2.1.1.3 | Hot components | 15 |
| 2.1.2 | Electric shock | 16 |
| 2.1.2.1 | Damage | 16 |
| 2.1.2.2 | Water penetration | 16 |
| 2.1.2.3 | Condensation | 16 |
| 2.1.3 | Risk of a crash | 16 |
| 2.1.3.1 | Incorrect quick release setting | 16 |
| 2.1.3.2 | Incorrect tightening torque | 16 |
| 2.1.3.3 | Incorrect component | 16 |
| 2.1.4 | Risk of amputation | 16 |
| 2.1.5 | Key breaking off | 16 |
| 2.2 | Toxic substances | 17 |
| 2.2.1 | Brake fluid | 17 |
| 2.2.2 | Suspension oil | 17 |
| 2.2.3 | Lubrication oil | 17 |
| 2.2.4 | Defective battery | 17 |
| 2.3 | Requirements for riders | 17 |
| 2.4 | Vulnerable groups | 17 |
| 2.5 | Personal protective equipment | 17 |
| 2.6 | Safety guards | 17 |
| 2.7 | Safety markings and safety instructions | 18 |
| 2.8 | What to do in an emergency | 18 |
| 2.8.1 | Dangerous situation in road traffic | 18 |
| 2.8.2 | Leaked brake fluid | 18 |
| 2.8.3 | Battery vapours emitted | 19 |
| 2.8.4 | Battery fire | 19 |
| 2.8.5 | Oil and lubricant leaks from the rear frame damper | 19 |
| 2.8.6 | Oil and lubricant leaks from the fork | 19 |
| 3 | Description | |
| 3.1 | Proper use | 20 |
| 3.1.1 | Improper use | 21 |
| 3.1.2 | Permitted total weight (PTW) | 22 |
| 3.1.3 | Environmental requirements | 23 |
| 3.2 | Nameplate | 25 |
| 3.3 | Components | 26 |
| 3.3.1 | Overview | 26 |
| 3.3.2 | Chassis | 27 |

| | | |
|---------|---|----|
| 3.3.2.1 | Frame | 27 |
| 3.3.2.2 | Steering system | 27 |
| 3.3.2.3 | Steering headset | 27 |
| 3.3.2.4 | Stem | 27 |
| 3.3.2.5 | Handlebars | 28 |
| 3.3.2.6 | Fork | 28 |
| 3.3.3 | Suspension | 29 |
| 3.3.3.1 | Rigid fork | 29 |
| 3.3.3.2 | Suspension fork | 29 |
| 3.3.4 | Wheel | 33 |
| 3.3.4.1 | Tyres | 33 |
| 3.3.4.2 | Rim | 33 |
| 3.3.4.3 | Valve | 33 |
| 3.3.4.4 | Spoke | 34 |
| 3.3.4.5 | Spoke nipples | 34 |
| 3.3.4.6 | Hub | 34 |
| 3.3.5 | Braking system | 35 |
| 3.3.5.1 | Mechanical brake | 35 |
| 3.3.5.2 | Hydraulic brake | 35 |
| 3.3.5.3 | Disc brake | 36 |
| 3.3.6 | Seat post | 37 |
| 3.3.6.1 | Patent seat post | 37 |
| 3.3.6.2 | Suspension seat post | 37 |
| 3.3.7 | Mechanical drive system | 38 |
| 3.3.7.1 | Chain drive layout | 38 |
| 3.3.7.2 | Belt drive layout | 38 |
| 3.3.8 | Electric drive system | 39 |
| 3.3.8.1 | Motor | 39 |
| 3.3.8.2 | Rechargeable battery | 39 |
| 3.3.8.3 | Frame battery | 40 |
| 3.3.8.4 | Pannier rack battery | 40 |
| 3.3.8.5 | Integrated battery | 41 |
| 3.3.8.6 | Charger | 41 |
| 3.3.9 | Lighting | 41 |
| 3.3.10 | On-board computer | 42 |
| 3.4 | Description of controls and screens | 43 |
| 3.4.1 | Handlebars | 43 |
| 3.5 | On-board computer | 44 |
| 3.5.1 | Display | 44 |
| 3.5.1.1 | Indicator unit km/h or mph | 44 |
| 3.5.1.2 | Tachometer screen | 44 |
| 3.5.1.3 | Information display | 45 |
| 3.5.1.4 | Level of assistance | 45 |
| 3.5.1.5 | Riding light symbol | 45 |
| 3.5.1.6 | Maintenance indicator | 45 |
| 3.5.1.7 | Battery level indicator (on-board computer) | 45 |
| 3.5.2 | System message | 45 |
| 3.5.3 | Gear shift | 46 |
| 3.5.3.1 | SHIMANO derailleur gears | 46 |
| 3.5.4 | Hand brake | 47 |
| 3.5.5 | Battery level indicator (battery) | 48 |
| 3.5.5.1 | Battery level indicator (battery) | 48 |
| 3.6 | Technical data | 49 |
| 3.6.1 | Pedelec | 49 |
| 3.6.2 | Emissions | 49 |
| 3.6.3 | Bicycle lighting | 49 |
| 3.6.4 | BOSCH Intuvia on-board computer | 49 |
| 3.6.5 | USB port | 49 |
| 3.6.6 | Motor | 49 |

| | | |
|----------|---|----|
| 3.6.6.1 | BOSCH Active Line | 49 |
| 3.6.6.2 | BOSCH Active Line Plus | 50 |
| 3.6.7 | Rechargeable battery | 50 |
| 3.6.7.1 | BOSCH PowerPack 400 | 50 |
| 3.6.7.2 | BOSCH PowerPack 500 | 50 |
| 3.6.7.3 | BOSCH PowerTube 400 | 50 |
| 3.6.7.4 | BOSCH PowerTube 500 | 50 |
| 3.6.8 | Tightening torques | 51 |
| 4 | Transporting and storing | |
| 4.1 | Weight and dimensions for transportation | 53 |
| 4.2 | Designated handles, lifting points | 53 |
| 4.3 | Transportation | 54 |
| 4.3.1 | Using the brake transport securing system | 54 |
| 4.3.2 | Transporting the pedelec | 54 |
| 4.3.3 | Shipping a pedelec | 54 |
| 4.3.4 | Transporting the battery | 54 |
| 4.3.5 | Shipping the battery | 54 |
| 4.4 | Storing | 55 |
| 4.4.1 | Break in operation | 55 |
| 4.4.1.1 | Preparing a break in operation | 55 |
| 4.4.1.2 | Carrying out a break in operation | 55 |
| 5 | Assembly | |
| 5.1 | Unpacking | 56 |
| 5.2 | Required tools | 56 |
| 5.3 | Commissioning | 57 |
| 5.3.1 | Checking the battery | 57 |
| 5.3.2 | Preparing the battery | 58 |
| 5.3.2.1 | Retrofitting the PowerTube adapter | 58 |
| 5.3.2.2 | Fit battery cover onto Bosch PowerTube 625 battery (horizontal) | 60 |
| 5.3.2.3 | Fit battery cover onto Bosch PowerTube 500 battery (horizontal) | 61 |
| 5.3.3 | Preparing the wheel | 62 |
| 5.3.4 | Installing the wheel in the SUNTOUR fork | 63 |
| 5.3.4.1 | Screw-on axle (12AH2 and 15AH2) | 63 |
| 5.3.4.2 | 20 mm cross axle | 64 |
| 5.3.4.3 | Q-LOC quick release | 66 |
| 5.3.5 | Fitting the pedals | 67 |
| 5.3.6 | Checking the stem and handlebars | 68 |
| 5.3.6.1 | Checking the connections | 68 |
| 5.3.6.2 | Checking stem is firmly in position | 68 |
| 5.3.6.3 | Checking the headset backlash | 68 |
| 5.4 | Pedelec sale | 68 |
| 6 | Operation | |
| 6.1 | Risks and hazards | 69 |
| 6.2 | Tips for a greater range | 71 |
| 6.3 | Error message | 72 |
| 6.3.1 | On-board computer | 72 |
| 6.3.2 | Rechargeable battery | 75 |
| 6.4 | Instruction and customer service | 76 |
| 6.5 | Adjusting the pedelec | 76 |
| 6.5.1 | Preparing | 76 |
| 6.5.2 | Pedelec adjustment procedure | 77 |
| 6.5.3 | Determining the sitting position | 78 |
| 6.5.4 | Adjusting the saddle | 80 |
| 6.5.4.1 | Straightening the saddle | 80 |
| 6.5.4.2 | Adjusting the saddle height | 80 |

| | | |
|----------|---|-----|
| 6.5.4.3 | Setting the saddle height with the remote control | 81 |
| 6.5.4.4 | Adjusting the saddle position | 82 |
| 6.5.4.5 | Adjusting the saddle tilt | 82 |
| 6.5.4.6 | Checking saddle stability | 82 |
| 6.5.5 | Handlebars | 83 |
| 6.5.5.1 | Handlebar width | 83 |
| 6.5.5.2 | Hand position | 83 |
| 6.5.5.3 | Adjusting the handlebars | 83 |
| 6.5.6 | Stem | 84 |
| 6.5.6.1 | Adjusting the handlebar height with quick release | 84 |
| 6.5.6.2 | Setting the quill stem | 85 |
| 6.5.6.3 | Adjusting the Ahead stem | 85 |
| 6.5.6.4 | Adjusting the angle-adjustable stem | 86 |
| 6.5.7 | Ergonomic handles | 87 |
| 6.5.7.1 | Checking handlebar stability | 87 |
| 6.5.8 | Tyres | 88 |
| 6.5.9 | Brake | 89 |
| 6.5.9.1 | Brake handle position | 89 |
| 6.5.9.2 | Brake handle tilt angle | 89 |
| 6.5.9.3 | Determining the grip distance | 90 |
| 6.5.9.4 | Retracting the brake linings | 91 |
| 6.5.10 | Suspension | 92 |
| 6.5.11 | Fork sag | 92 |
| 6.5.11.1 | Adjusting the Suntour fork steel suspension | 93 |
| 6.5.11.2 | Adjusting the Suntour fork air suspension | 94 |
| 6.5.12 | Fork rebound damping | 95 |
| 6.5.12.1 | Adjusting the Suntour fork rebound damping | 96 |
| 6.5.13 | Lighting | 97 |
| 6.5.13.1 | Adjusting the lights | 97 |
| 6.5.14 | On-board computer | 99 |
| 6.5.14.1 | Changing the tachometer unit | 99 |
| 6.5.14.2 | Adjust display screen brightness | 99 |
| 6.5.14.3 | Displaying versions and type numbers | 99 |
| 6.6 | Accessories | 100 |
| 6.6.1 | Child seat | 100 |
| 6.6.2 | Trailer | 101 |
| 6.6.2.1 | Approval for trailer with Enviolo hub | 101 |
| 6.6.2.2 | Approval for trailer with ROHLOFF hub | 102 |
| 6.6.3 | Mobile holder | 102 |
| 6.6.4 | Tubeless and airless tyres | 102 |
| 6.6.5 | Suspension fork coil spring | 102 |
| 6.6.6 | Pannier rack | 102 |
| 6.6.7 | Panniers and cargo boxes | 102 |
| 6.7 | Personal protective equipment and accessories for road safety | 103 |
| 6.8 | Before each ride | 103 |
| 6.9 | Straightening the quickly adjustable stem | 104 |
| 6.10 | Using the pannier rack | 104 |
| 6.11 | Raising the kickstand | 105 |
| 6.12 | Using the saddle | 105 |
| 6.12.1 | Using the leather saddle | 105 |
| 6.13 | Using the pedals | 105 |
| 6.14 | Using the multifunctional handlebars or bar ends | 105 |
| 6.14.1 | Using leather handles | 105 |
| 6.15 | Using the bell | 105 |
| 6.16 | Using the battery | 106 |
| 6.16.1 | Frame battery | 106 |
| 6.16.1.1 | Removing the frame battery | 106 |
| 6.16.1.2 | Inserting the frame battery | 106 |
| 6.16.2 | Pannier rack battery | 106 |

| | | |
|----------|---|-----|
| 6.16.2.1 | Removing the pannier rack battery | 106 |
| 6.16.2.2 | Inserting the pannier rack battery | 106 |
| 6.16.3 | Integrated battery | 107 |
| 6.16.3.1 | Removing the integrated battery | 107 |
| 6.16.3.2 | Inserting the integrated battery | 107 |
| 6.16.4 | Charging the battery | 108 |
| 6.16.5 | Charging the dual battery | 108 |
| 6.16.5.1 | Charging process when two batteries are used | 108 |
| 6.16.5.2 | Charging process when one battery is used | 108 |
| 6.16.6 | Using double battery model with a single battery only | 109 |
| 6.16.7 | Waking the battery | 109 |
| 6.17 | Using pedelec with the electric drive system | 110 |
| 6.17.1 | Switching on the electric drive system | 110 |
| 6.17.2 | Switching off the electric drive system | 110 |
| 6.18 | On-board computer | 111 |
| 6.18.1 | Actions on the on-board computer | 111 |
| 6.18.2 | Switching on the on-board computer | 111 |
| 6.18.3 | Switching off the on-board computer | 111 |
| 6.18.4 | Using the riding light | 111 |
| 6.18.5 | Using the push assist system | 112 |
| 6.18.6 | Selecting the level of assistance | 112 |
| 6.18.7 | Using the journey information | 112 |
| 6.18.7.1 | Switching the journey information | 112 |
| 6.18.7.2 | Resetting the trip distance | 112 |
| 6.18.7.3 | Resetting the range | 112 |
| 6.18.8 | Replacing the battery | 113 |
| 6.18.9 | Using the USB port | 113 |
| 6.19 | Brake | 114 |
| 6.19.1 | Using the brake lever | 114 |
| 6.20 | Suspension and damping | 115 |
| 6.20.1 | Adjusting the Suntour compression adjuster | 116 |
| 6.21 | Gear shift | 117 |
| 6.21.1 | Using the derailleur gears | 117 |
| 6.22 | Parking | 118 |
| 6.22.1 | Screwing in the All Up handlebars | 118 |

7 Cleaning, servicing and maintenance

| | | |
|--------|------------------------------------|-----|
| 7.1 | Before each ride | 124 |
| 7.1.1 | Checking the guards | 124 |
| 7.1.2 | Checking the frame | 124 |
| 7.1.3 | Checking the fork | 124 |
| 7.1.4 | Checking the rear frame damper | 124 |
| 7.1.5 | Checking the pannier rack | 124 |
| 7.1.6 | Checking the guards | 124 |
| 7.1.7 | Checking wheel concentricity | 124 |
| 7.1.8 | Checking the quick releases | 124 |
| 7.1.9 | Checking the suspension seat post | 124 |
| 7.1.10 | Checking the bell | 125 |
| 7.1.11 | Checking the handles | 125 |
| 7.1.12 | Checking the USB cover | 125 |
| 7.1.13 | Checking the lighting | 125 |
| 7.1.14 | Checking the brake | 125 |
| 7.2 | After each ride | 126 |
| 7.2.1 | Cleaning the lights and reflectors | 126 |
| 7.2.2 | Cleaning the suspension fork | 126 |
| 7.2.3 | Caring for the suspension fork | 126 |
| 7.2.4 | Cleaning the pedals | 126 |
| 7.2.5 | Cleaning the brake | 126 |
| 7.2.6 | Cleaning the suspension seat post | 126 |

| | | |
|----------|--|-----|
| 7.2.7 | Cleaning the rear frame damper | 126 |
| 7.3 | Basic cleaning | 127 |
| 7.3.1 | On-board computer and control panel | 127 |
| 7.3.2 | Rechargeable battery | 127 |
| 7.3.3 | Motor | 127 |
| 7.3.4 | Frame, fork, pannier rack, guards and kickstand | 128 |
| 7.3.5 | Stem | 128 |
| 7.3.6 | Handlebars | 128 |
| 7.3.7 | Handles | 128 |
| 7.3.7.1 | Leather handles | 128 |
| 7.3.8 | Seat post | 128 |
| 7.3.9 | Saddle | 128 |
| 7.3.9.1 | Leather saddle | 129 |
| 7.3.10 | Tyres | 129 |
| 7.3.11 | Spokes and spoke nipples | 129 |
| 7.3.12 | Hub | 129 |
| 7.3.13 | Switching elements | 129 |
| 7.3.13.1 | Shifter | 129 |
| 7.3.14 | Cassette, chain wheels and front derailleur | 129 |
| 7.3.15 | Brake | 130 |
| 7.3.15.1 | Brake lever | 130 |
| 7.3.16 | Brake disc | 130 |
| 7.3.17 | Belt | 130 |
| 7.3.18 | Chain | 130 |
| 7.3.18.1 | Chain with all-round chain guard | 130 |
| 7.4 | Servicing | 131 |
| 7.4.1 | Frame | 131 |
| 7.4.2 | Fork | 131 |
| 7.4.3 | Pannier rack | 132 |
| 7.4.4 | Mudguard | 132 |
| 7.4.5 | Servicing the kickstand | 132 |
| 7.4.6 | Stem | 132 |
| 7.4.7 | Handlebars | 132 |
| 7.4.8 | Handle | 132 |
| 7.4.8.1 | Rubber handles | 132 |
| 7.4.8.2 | Leather handle | 133 |
| 7.4.9 | Seat post | 133 |
| 7.4.9.1 | Suspension seat post | 133 |
| 7.4.9.2 | Carbon seat post | 133 |
| 7.4.10 | Leather saddle | 133 |
| 7.4.11 | Hub | 133 |
| 7.4.12 | Spoke nipples | 133 |
| 7.4.13 | Rim | 133 |
| 7.4.14 | Gear shift | 134 |
| 7.4.14.1 | Rear derailleur articulated shafts and jockey wheels | 134 |
| 7.4.14.2 | Shifter | 134 |
| 7.4.15 | Pedal | 134 |
| 7.4.16 | Caring for the chain | 134 |
| 7.4.16.1 | Caring for the chain and all-round chain guard | 134 |
| 7.4.17 | Caring for the brake | 135 |
| 7.4.17.1 | Caring for the brake | 135 |
| 7.4.18 | Lubricating the eightpins seat post tube | 135 |
| 7.5 | Maintenance | 136 |
| 7.5.1 | Wheel | 136 |
| 7.5.1.1 | Checking the tyre pressure | 136 |
| 7.5.1.2 | Checking the tyres | 138 |
| 7.5.1.3 | Checking the rims | 139 |
| 7.5.1.4 | Checking the nipple holes | 139 |
| 7.5.1.5 | Checking the nipple well | 139 |

| | | |
|----------|--|-----|
| 7.5.1.6 | Checking the rim hooks | 139 |
| 7.5.1.7 | Checking the spokes | 139 |
| 7.5.2 | Checking the brake system | 140 |
| 7.5.2.1 | Checking the hand brake | 140 |
| 7.5.2.2 | Checking the hydraulic system | 140 |
| 7.5.2.3 | Checking the Bowden cables | 140 |
| 7.5.2.4 | Checking the disc brake | 141 |
| 7.5.2.5 | Checking the back-pedal brake | 142 |
| 7.5.2.6 | Checking the rim brake | 143 |
| 7.5.3 | Checking the lighting | 144 |
| 7.5.4 | Checking the stem | 145 |
| 7.5.5 | Check the handlebars | 145 |
| 7.5.6 | Checking the saddle | 145 |
| 7.5.7 | Checking the seat post | 145 |
| 7.5.8 | Checking the chain | 145 |
| 7.5.9 | Checking the chain and belt tension | 145 |
| 7.5.9.1 | Checking the derailleur gears | 146 |
| 7.5.9.2 | Checking the hub gear | 146 |
| 7.5.10 | Checking the gear shift | 146 |
| 7.5.10.1 | Electric gear shift | 146 |
| 7.5.10.2 | Mechanical gear shift | 146 |
| 7.5.10.3 | Checking the derailleur gears | 146 |
| 7.5.11 | Adjusting gear shift | 147 |
| 7.5.11.1 | ROHLOFF hub | 147 |
| 7.5.12 | Bowden-cable-operated gear shift, single-cable | 147 |
| 7.5.13 | Bowden-cable-operated gear shift, dual-cable | 147 |
| 7.5.14 | Bowden-cable-operated twist grip, dual-cable | 148 |
| 7.5.15 | Checking kickstand stability | 148 |

8 Maintenance

| | | |
|---------|--------------------------------------|-----|
| 8.1 | Initial inspection | 149 |
| 8.2 | Maintenance | 149 |
| 8.3 | Component-specific maintenance tasks | 149 |
| 8.4 | Carry out initial inspection | 152 |
| 8.5 | Maintenance instructions | 153 |
| 8.5.1 | Servicing the frame | 160 |
| 8.5.1.1 | Servicing the carbon frame | 160 |
| 8.5.2 | Checking the pannier rack | 160 |
| 8.5.3 | Servicing axle with quick release | 160 |
| 8.5.4 | Maintaining the stem | 161 |
| 8.5.5 | Servicing the gear hub | 161 |
| 8.5.5.1 | Adjusting the hub with cone bearing | 161 |
| 8.5.6 | Servicing the steering headset | 162 |
| 8.5.7 | Servicing the fork | 162 |
| 8.5.7.1 | Servicing the carbon suspension fork | 163 |
| 8.5.7.2 | Servicing the suspension fork | 163 |
| 8.5.8 | Servicing seat post | 164 |
| 8.5.8.1 | Servicing the carbon seat post | 164 |
| 8.5.8.2 | by.schulz suspension seat post | 165 |
| 8.5.8.3 | Suntour suspension seat post | 165 |
| 8.5.8.4 | eightpins NGS2 seat post | 166 |
| 8.5.8.5 | eightpins H01 seat post | 172 |
| 8.5.9 | Rear frame damper | 176 |
| 8.5.9.1 | FOX component-specific maintenance | 177 |

9 Troubleshooting, fault clearance and repair

| | | |
|-------|---|-----|
| 9.1 | Troubleshooting and fault clearance | 178 |
| 9.1.1 | Drive system or on-board computer does not start up | 178 |
| 9.1.2 | Error message | 178 |

| | | |
|-----------|---|-----|
| 9.1.3 | Errors in assistance function | 179 |
| 9.1.4 | Battery errors | 180 |
| 9.1.5 | On-board computer errors | 181 |
| 9.1.6 | Lighting does not work | 181 |
| 9.1.7 | Other errors | 182 |
| 9.2 | Repair | 183 |
| 9.2.1 | Original parts and lubricants | 183 |
| 9.2.2 | Replacing the lighting | 183 |
| 9.2.3 | Setting the front light | 183 |
| 9.2.4 | Checking tyre clearance | 183 |
| 10 | Recycling and disposal | |
| 10.1 | Removal of waste guidelines | 184 |
| 11 | Documents | |
| 11.1 | Assembly report | 186 |
| 11.2 | Maintenance log | 188 |
| 11.3 | Parts list | 192 |
| 11.3.1 | Twenty 6 EVO | 192 |
| 11.3.2 | Twenty4 E 24 | 194 |
| 11.4 | Charger operating instructions | 196 |
| 12 | Glossary | |
| 12.1 | Abbreviations | 208 |
| 12.2 | Simplified terms | 208 |
| 13 | Appendix | |
| I. | Translation of the original EC/EU Declaration of Conformity | 209 |
| II. | Declaration of conformity for incomplete machine | 210 |
| 14 | Keyword index | |

Thank you for your trust!

BULLS *pedelecs* are premium quality vehicles. You have made an excellent choice. Your specialist dealer will provide you with guidance and instruction and assemble your product. Your specialist dealer will also be happy to assist you in the future, whether you require maintenance, conversion or repair.

You are receiving these operating instructions with your new pedelec. Please take time to become familiar with your new pedelec. Use the tips and suggestions in the operating instructions. They will help you to enjoy your pedelec for a long time to come. We hope you have fun and wish you well on all of your rides!

Download the operating instructions onto your phone at the following link, so that you can use them when you are out riding:



www.bulls.de/service/downloads.

Copyright

© ZEG Zweirad-Einkaufs-Genossenschaft eG

Distribution or reproduction of these operating instructions and utilisation or communication of their content is prohibited unless expressly approved. Any infringement will render the offender liable for compensation. All rights reserved in the event that a patent, utility model or industrial design is registered.

Subject to internal changes

The information contained in these *operating instructions* are the approved technical specifications at the time of printing. In addition to the functions described here, software changes may be introduced to rectify errors and extend functions at any time.

Any significant changes are included in a new published version of the operating instructions. All changes to the operating instructions are published on the following website:

www.bulls.de/service/downloads.

Editing

Text and images:
ZEG Zweirad-Einkaufs-Genossenschaft eG
Longericher Strasse 2
50739 Köln, Germany

Translation

RKT Übersetzungs- und Dokumentations-GmbH
Bahnhofstrasse 27
78713 Schramberg, Germany

In case of any questions or problems regarding these operating instructions, please contact:

tecdoc@zeg.de

1 About these operating instructions

1.1 Manufacturer

ZEG Zweirad-Einkaufs-Genossenschaft eG
Longericher Strasse 2
50739 Köln, Germany

Tel.: +49 221 17959 0
Fax: +49 221 1795931
E-mail: info@zeg.de

1.2 Laws, standards and directives

The *operating instructions* comply with the essential requirements specified in:

- Machinery Directive 2006/42/EC
- Electromagnetic Compatibility Directive 2014/30/EU
- ISO 20607:2018 Safety of machinery – Instruction handbook – General drafting principles
- EN 15194:2018 Cycles – Electrically power assisted cycles – pedelec bicycles
- EN 11243:2016, Cycles – Pannier racks for bicycles – Requirements and test methods
- ISO 17100:2016-05 Translation Services – Requirements for translation services.

1.3 Language

The *original operating instructions* are written in German. A translation is invalid without the *original operating instructions*.

1.4 For your information

Different markings are used in the operating instructions to make them easier to read.

1.4.1 Warnings

Warnings indicate hazardous situations and actions. You will find three warnings in the operating instructions:



WARNING

May lead to serious or even fatal injuries if ignored. Medium-risk hazard.



CAUTION

May lead to minor or moderate injuries if ignored. Low-risk hazard.

Notice

May lead to material damage if ignored.

1.4.2 Markups

You will find ten text markups in the *operating instructions*:

| Stylised form | Use |
|---|---|
| <i>Italics</i> | Glossary term, first mention in section |
| <u>Underlined in blue</u> | Link |
| <u>Underlined in grey</u> | Cross references |
| ✓ | Requirements |
| ▶ | Instructions for actions without specific order |
| 1 | Instructions for actions in specified order |
| ⇒ | Result of the action |
| SPACED | Indicators on the display screen |
| • | Bulleted lists |
| <i>Only applies to pedelecs with this equipment</i> | A note beneath the heading indicates components which can be used as an option. |

Table 1: Markups

1.5 Type number and model

These operating instructions are an integral part of pedelecs with the type numbers:

| Type no. | Model | Pedelec type |
|------------|------------------|--------------------------|
| 22-26-1001 | Twenty 4 E 24" | Bicycle for young adults |
| 22-26-1002 | Twenty 6 EVO 26" | Bicycle for young adults |

Table 2: Type number, model and pedelec type

1.6 Frame number

Each frame has an individual frame number stamped on it (see Figure 2). The frame number can be used to associate the pedelec with the owner. The frame number is the most important identifier for verifying ownership.

1.7 Identifying the operating instructions

The operating instructions identification number is located in bottom left-hand corner of each page.

The identification number is composed of the document number, the version number and the release date.

| | |
|------------------------------|-----------------------------|
| Identification number | MY22B01 - 42_1.0_30.08.2021 |
|------------------------------|-----------------------------|

1.8 Aim of the operating instructions

These operating instructions are not a substitute for personal instruction by the specialist dealer supplying the bike. These operating instructions are an integral part of the pedelec. Therefore, if it is re-sold at a later time, they must be handed over to the subsequent owner.

These operating instructions are mainly designed for riders and operators of the pedelec.

Paragraphs with a white background are intended to enable non-professionals to make safe settings on the pedelec, use it, clean it and identify and eliminate any faults.



Sections intended for technical staff are highlighted in blue and marked with a spanner symbol.

These paragraphs aim to allow trained technical staff (bicycle mechatronics engineers, bicycle mechanics or similar) to carry out initial assembly, adjustment, maintenance and repair safely.

Technical staff also need to read all sections for riders and operators to ensure they can provide a better customer service.

All documents in Section 11 need to be filled out whenever any work is performed on the vehicle (assembly report, maintenance report).

| Section | | Rider | Specialist dealer |
|---------|-------------------------------------|--------------------------|--------------------------|
| 1 | About these instructions | <input type="checkbox"/> | <input type="checkbox"/> |
| 2 | Safety | <input type="checkbox"/> | <input type="checkbox"/> |
| 3 | Description | <input type="checkbox"/> | <input type="checkbox"/> |
| 4 | Transportation and storage | <input type="checkbox"/> | <input type="checkbox"/> |
| 5 | Assembly and installation | <input type="checkbox"/> | <input type="checkbox"/> |
| 6 | Operation | <input type="checkbox"/> | <input type="checkbox"/> |
| 7 | Cleaning and servicing | <input type="checkbox"/> | <input type="checkbox"/> |
| 8 | Maintenance | <input type="checkbox"/> | <input type="checkbox"/> |
| 9.1 | Troubleshooting and fault clearance | <input type="checkbox"/> | <input type="checkbox"/> |
| 9.2 | Repair | <input type="checkbox"/> | <input type="checkbox"/> |
| 10 | Disassembly and disposal | <input type="checkbox"/> | <input type="checkbox"/> |
| 11 | Documents | <input type="checkbox"/> | <input type="checkbox"/> |
| 12 | Glossary | <input type="checkbox"/> | <input type="checkbox"/> |
| 13 | Appendix | <input type="checkbox"/> | <input type="checkbox"/> |
| 14 | Keyword index | <input type="checkbox"/> | <input type="checkbox"/> |

Table 3: Target groups-section matrix

2 Safety

2.1 Residual risks

2.1.1 Risk of fire and explosion

2.1.1.1 Rechargeable battery

The safety electronics may fail if the batteries are damaged or faulty. The residual voltage can cause a short circuit. The battery may self-ignite and explode.

- ▶ Only use and charge the battery and accessories if they are in perfect condition.
- ▶ Never open or repair the battery.
- ▶ Batteries with external damage must be removed from service immediately.
- ▶ If a battery is dropped or struck, remove it from service and keep it under observation for at least 24 hours.

Faulty batteries are hazardous goods.

- ▶ Dispose of faulty batteries in the correct manner.
- ▶ Store battery in a dry place until disposal.
- ▶ Never store near flammable substances.

The battery is only protected from spray water. Penetration by water can cause a short circuit. The battery may self-ignite and explode.

- ▶ Never immerse battery in water.
- ▶ Put battery out of service if you suspect water has penetrated it.

Temperatures over 60 °C can also cause liquid to leak from the battery and the battery will become damaged. The battery may self-ignite and explode.

- ▶ Protect the battery against heat.
- ▶ Never store next to hot objects.
- ▶ Never expose battery to continuous direct sunlight.
- ▶ Avoid wide temperature fluctuations.

Chargers with excessive voltage damage batteries. This may cause a fire or an explosion.

- ▶ Only use approved batteries to charge.

Metal objects may interconnect the battery's electrical terminals. The battery may self-ignite and explode.

- ▶ Never insert paper clips, screws, coins, keys and other small parts into the battery.

2.1.1.2 Overheated charger

The charger heats up when charging the battery. If it is not allowed to cool down sufficiently, it can cause a fire or burns to the hands.

- ▶ Never use charger on a highly flammable surface.
- ▶ Never cover the charger during charging.
- ▶ Never leave battery unattended during charging.

2.1.1.3 Hot components

The brakes and the motor may become very hot during operation. There is a risk of burns or fire in case of contact.

- ▶ Never touch the brakes or the motor immediately after a ride.
- ▶ Never place the pedelec on a flammable surface, such as grass or wood, directly after use.

2.1.2 Electric shock

2.1.2.1 Damage

Damaged chargers, cables and plug connectors increase the risk of electric shock.

- ▶ Check the charger, cable and plug connector before each use. Never use a damaged charger.

2.1.2.2 Water penetration

If water penetrates into the charger, there is a risk of electric shock.

- ▶ Never charge the battery outdoors.

2.1.2.3 Condensation

Condensation may form in the charger and battery when the temperature changes from cold to hot, possibly causing a short circuit.

- ▶ Wait until both the charger and battery have warmed up to room temperature before connecting them.

2.1.3 Risk of a crash

2.1.3.1 Incorrect quick release setting

Excessively high clamping force will damage the quick release and cause it to lose its function. Insufficient clamping force will result in unfavourable transmission of force. This can cause components to break. This will cause a crash with injuries.

- ▶ Never fasten a quick release using a tool (e.g. hammer or pliers).
- ▶ Only use the clamping lever with the specified set clamping force.

2.1.3.2 Incorrect tightening torque

If a screw is fastened too tightly, it may break. If a screw is not fastened enough, it may loosen. This will cause a crash with injuries.

- ▶ Always observe the indicated tightening torque on the screw or in the *operating instructions*.

2.1.3.3 Incorrect component

The wheels are designed exclusively for use with rim brakes or disc brakes. The wheel may break if an incorrect brake is used. This will cause a crash with injuries.

- ▶ Never use the wheel with a different brake.

2.1.4 Risk of amputation

The brake disc in disc brakes is so sharp that it can cause serious injuries to fingers if they are inserted into the brake disc openings.

- ▶ Always keep fingers well away from the rotating brake discs.

2.1.5 Key breaking off

If you leave a key inserted when riding or transporting the pedelec, it may break off or the locking system may open accidentally.

- ▶ Remove the key from the battery lock.

2.2 Toxic substances

2.2.1 Brake fluid

Brake fluid may leak out after an accident or due to material fatigue. Brake fluid can be fatal if swallowed or inhaled.

- ▶ Never dismantle the brake system.
- ▶ Avoid contact with skin.
- ▶ Do not inhale vapours.

2.2.2 Suspension oil

Suspension oil in the fork and the rear frame damper is toxic to the touch, irritates respiratory tracts and can cause cancer, sterility and changes to the genetic make-up of germ cells.

- ▶ Never dismantle the rear frame damper or the suspension fork.
- ▶ Avoid skin coming into contact with suspension oil.

2.2.3 Lubrication oil

eightpins seat post lubrication oil is toxic if inhaled and can be fatal if swallowed.

- ▶ Never remove the eightpins seat post from the frame.
- ▶ Lubricate seat post in the open air or in a well-ventilated room only.
- ▶ Avoid skin coming into contact with lubrication oil. Wear nitrile gloves when lubricating, cleaning and servicing the vehicle.

2.2.4 Defective battery

Liquids and vapours may leak from damaged or faulty batteries. Excessively high temperatures may also cause liquids and vapours to leak from the battery. Such liquids and vapours can irritate the airways and cause burns.

- ▶ Never dismantle the battery.
- ▶ Avoid contact with skin.
- ▶ Do not inhale vapours.

2.3 Requirements for riders

The rider must have the required mental capacity and physical and motor skills to ride on public roads. A minimum age of 14 years is recommended.

2.4 Vulnerable groups

Keep batteries and the charger away from children and people with reduced physical, sensory or mental capacities or lacking in experience and knowledge.

If minors use the pedelec, a legal guardian must should provide them with comprehensive instructions.

2.5 Personal protective equipment

Wear a suitable helmet for your protection. The helmet must have a reflective strip or a light in a clearly visible colour.

Wear sturdy shoes.

Clothing should be retroreflective or as light as possible. Fluorescent materials are also suitable. High-visibility jackets and straps on your upper body ensure even greater safety. Never wear a skirt. Always wear trousers which reach down to your ankles instead.

2.6 Safety guards

Three safety guards protect riders against heat or moving parts:

- Chain or belt guards prevent clothing from being pulled into the drive train
- Mudguards protect against dirt and water splashing up from the road.
- Motor covers on the motor casing protect against heat.

- ▶ Never remove the guards.
- ▶ Check the guards on a regular basis.
- ▶ Take pedelec out of service if a guard is damaged or missing. Contact specialist dealer.

2.7 Safety markings and safety instructions

The pedelec and battery nameplates contain these safety markings and safety instructions:



| Symbol | Explanation |
|---|------------------------------------|
|  | General warning |
|  | Adhere to the instructions for use |

Table 4: Meaning of safety markings












| Symbol | Explanation |
|---|--|
|  | Read the instructions |
|  | Separate collection of electrical and electronic devices |
|  | Separate collection of ordinary and rechargeable batteries |
|  | Must not be thrown into fire (burning prohibited) |
|  | It is forbidden to open any batteries |
|  | Device of protection class II |
|  | Only suitable for use indoors |
|  | Fuse (device fuse) |
|  | EU conformity |
|  | Recyclable material |
|  | Protect from temperatures above 50 °C and direct sunlight |

Table 5: Safety instructions

2.8 What to do in an emergency

2.8.1 Dangerous situation in road traffic

- ▶ In the event of any hazards or dangers in road traffic, apply the brakes on the pedelec until it comes to a halt. The brake acts as an emergency stop system in such cases.

2.8.2 Leaked brake fluid

- ▶ Remove those affected from the danger area to fresh air.
- ▶ Never leave those affected unattended.
- ▶ Remove any clothing contaminated with brake fluid immediately.
- ▶ Never inhale vapours. Ensure sufficient ventilation.
- ▶ Wear gloves and safety glasses as protective equipment.
- ▶ Keep unprotected persons away.
- ▶ Take care with leaked brake fluid as it poses a slip hazard.
- ▶ Keep leaking brake fluid away from naked flames, hot surfaces and sources of ignition.
- ▶ Avoid contact with skin and eyes.

After inhalation

- ▶ Take in fresh air. Immediately consult a doctor in case of any discomfort.

After skin contact

- ▶ Wash affected skin with soap and water and rinse well. Remove contaminated clothing. Consult doctor in the event of pain or discomfort.

After contact with eyes

- ▶ Rinse eyes under flowing water for at least ten minutes with the lids open; also rinse under lids. Immediately consult a doctor in case of any pain or discomfort.

After swallowing

- ▶ Rinse out mouth with water. Never induce vomiting. Risk of aspiration.
- ▶ If a person is lying on their back and vomiting, place them in the recovery position. Seek medical advice immediately.

Environmental protection measures

- ▶ Never allow brake fluid to flow into the sewage system, water courses or groundwater.
- ▶ Notify the relevant authorities if fluid penetrates the ground, water courses or the sewage system.
- ▶ Dispose of leaked brake fluid in an environmentally responsible way in accordance with statutory regulations (see [Section 10.1](#)).
- ▶ The brake system must be repaired immediately if brake fluid leaks out. Contact specialist dealer.

2.8.3 Battery vapours emitted

Vapours may be emitted if the battery is damaged or used improperly. The vapours may cause respiratory tract irritation.

- ▶ Get into fresh air.
- ▶ Consult doctor in the event of pain or discomfort.

After contact with eyes

- ▶ Carefully rinse eyes with plenty of water for at least 15 minutes. Protect unaffected eye. Seek medical advice immediately.

After skin contact

- ▶ Remove any solid particles immediately.
- ▶ Rinse the affected area with plenty of water for at least 15 minutes. Then dab the affected skin gently. Do not rub dry.
- ▶ Remove contaminated clothing immediately.
- ▶ Immediately consult a doctor if there is any redness, pain or discomfort.

2.8.4 Battery fire

The safety electronics may fail if the battery is damaged or faulty. The residual voltage can cause a short circuit. The battery may self-ignite and explode.

- 1 Keep your distance if the battery becomes deformed or starts to emit smoke.
 - 2 If charging, remove the plug connector from the socket.
 - 3 Contact the fire service immediately.
- ▶ Use Class fire extinguishers to put out the fire.
 - ▶ Never extinguish damaged batteries with water or allow them to come into contact with water.

Inhaling vapours can cause intoxication.

- ▶ Stand on the side of the fire where the wind is blowing from.
- ▶ Use breathing apparatus if possible.

2.8.5 Oil and lubricant leaks from the rear frame damper

- ▶ Dispose of leaked oils and lubricants in an environmentally responsible way in accordance with statutory regulations (see [Section 10.1](#)).
- ▶ Contact specialist dealer.

2.8.6 Oil and lubricant leaks from the fork

- ▶ Dispose of leaked oils and lubricants in an environmentally responsible way in accordance with statutory regulations (see [Section 10.1](#)).

3 Description

3.1 Proper use

All check lists and instructions for actions in these operating instructions must be met. Approved accessories can be installed by specialist staff.

Use the pedelec when it is in perfect, proper working order only. National requirements may apply to the pedelec which the standard equipment may not meet. Different regulations apply across the country to the riding light, reflectors and other components when riding on public roads. The general laws and the

regulations for the prevention of accidents and environmental protection in the respective country of use must be adhered to.

The rechargeable batteries are designed to supply power to the pedelec motor only. Never use the batteries for other purposes.

Each pedelec is assigned a pedelec type, which determines its proper use, function and area of use.







| City and trekking bicycles | Child's bicycles/ bicycles for young adults | Mountain bikes | Racing bicycle | Cargo bike | Folding bicycle |
|--|---|--|--|---|--|
|  |  |  |  |  |  |
| <p>City and trekking bicycles are designed for comfortable, daily use and are suitable for riding on public roads.</p> | <p>Cycles for children and young adults are suitable for riding on public roads.</p> <p>Legal guardians must read the operating instructions before putting the bike into use. Tell children and young people what the operating instructions contain in a way appropriate to their age.</p> <p>Check the size of the pedelec every 3 months for orthopaedic reasons.</p> <p>Check compliance with the maximum permitted total weight (PTW) every 3 months.</p> | <p>Mountain bikes are designed for sports use. The design characteristics include a short wheelbase, a sitting position with the rider inclined towards the front, and a brake requiring low actuation force.</p> <p>Mountain bikes are sports bikes and not a means of transport. They require an adaptation period in addition to physical fitness. Learning how to ride a mountain bike takes practice, especially braking and riding around bends.</p> <p>The strain on hands, wrists, arms, shoulders, the neck and back is considerable. Inexperienced riders tend to brake too hard and lose control as a result.</p> | <p>Racing bikes are designed for fast rides on roads and paths with a good, undamaged road surface.</p> <p>Racing bikes are sports bikes and not a means of transport. Racing bikes are characterised by their lightweight structure and a design which is stripped to the minimum parts required for riding.</p> <p>The frame geometry and the layout of the operating elements are designed to allow the bike to be ridden at high speeds. Learning how to ride slowly, apply the brakes and get on and off the bike safely takes practice due to the frame design.</p> <p>The sitting position is athletic. The physical strain on hands, wrists, arms, shoulders, the neck and back is considerable. The sitting position requires a high level of physical fitness.</p> | <p>Cargo bikes are suitable for transporting loads on public roads on a daily basis.</p> <p>The transportation of loads requires skill and physical fitness in order to balance the additional weight. The very varied loading conditions and weight distributions require special practice and skill when braking and riding in bends.</p> <p>A longer period is required to adaptation to the length, width and turning circle. You need to be cautious when riding a cargo bike. You must pay attention to traffic on public roads and the condition of the route.</p> | <p>Folding bicycles are suitable for riding on public roads.</p> <p>Folding bikes can be folded together and thus save space when they are transported, e.g. in cars or on local transport.</p> <p>The folding function of the folding bicycle makes it necessary to use smaller wheels and longer brake cables and Bowden cables. Therefore, in case of an increased load, a reduction in riding stability and braking power, diminished comfort and reduced durability are to be expected.</p> |

Table 6: Proper use for each pedelec type

3.1.1 Improper use

Failure to adhere to the proper use poses a risk of personal injury and material damage. It is prohibited to use the pedelec in the following ways:

- when the electrical drive system has been manipulated
- riding with a damaged or incomplete pedelec
- riding over steps
- riding through deep water
- charging with an incorrect charger
- lending the pedelec to untrained riders
- carrying other people
- riding with excessive baggage
- riding with no hands
- riding on ice and snow
- improper servicing
- improper repair
- tough areas of use, such as professional competitions
- stunt riding or acrobatics.

| City and trekking bicycles | Child's bicycles/ bicycles for young adults | Mountain bikes | Racing bicycle | Cargo bike | Folding bicycle |
|---|---|---|---|---|---|
|  |  |  |  |  |  |
| City and trekking bicycles are not sports bicycles. If used for sports, the rider can expect reduced riding stability and diminished comfort. | Cycles for children and young adults are not toys. | Mountain bikes must be retrofitted with lighting, a bell and other fittings as specified by national laws and regulations before they are used on public roads. | Racing bikes must be retrofitted with lights, a bell and other fittings as specified by national laws and regulations before they are used on public roads. | Cargo bikes are not a touring or sports bicycle. | A folding bicycle is not a touring or sports bicycle. |

Table 7: Information on improper use

3.1.2 Permitted total weight (PTW)

The pedelec may only be loaded to its maximum permitted total weight (PTW).

The maximum permitted total weight is

- the weight of the fully assembled pedelec
- plus rider
- plus baggage

| Type no. | Model | PTW [kg] |
|------------|------------------|----------|
| 22-26-1001 | Twenty 4 E 24" | 100 |
| 22-26-1002 | Twenty 6 EVO 26" | 115 |

Table 8: Type number, model and PTW

3.1.3 Environmental requirements

You can ride the pedelec within a temperature range between -5 °C and +40 °C. The electric drive system is limited in its performance outside this temperature range.

| | |
|-----------------------|--------------|
| Operating temperature | -5... +40 °C |
|-----------------------|--------------|

During winter use, especially at temperatures below 0 °C, we recommend that you don't insert a battery charged and stored at room temperature into the pedelec until just before setting off. We recommend using thermal protection sleeves when riding longer distances in the cold.

Temperatures under -5 °C and over +40 °C must be avoided.

You must also keep within the following temperature ranges:

| | |
|------------------------------|---------------|
| Transportation temperature | +10... +40 °C |
| Storage temperature | +10... +40 °C |
| Work environment temperature | +15... +25 °C |
| Charging temperature | +10... +40 °C |

The nameplate contains symbols for the pedelec's area of use.

- Check what tracks and roads you may ride on before setting off for the first time.











| Area of use | City and trekking bicycles | Child's bicycles/ bicycles for young adults | Mountain bikes | Racing bicycle | Cargo bike | Folding bicycle |
|--|--|--|--|--|---|---|
| |  |  |  |  |  |  |
|  1 | Suitable for tarmacked and paved roads. | Suitable for tarmacked and paved roads. | | Suitable for tarmacked and paved roads. | Suitable for tarmacked and paved roads. | Suitable for tarmacked and paved roads. |
|  2 | Suitable for tarmacked roads, cycle paths and firm gravel paths and roads, and longer sections with moderate slopes and jumps up to 15 cm. | Suitable for tarmacked roads, cycle paths and firm gravel paths and roads, and longer sections with moderate slopes and jumps up to 15 cm. | Suitable for tarmacked roads, cycle paths and firm gravel paths and roads, and longer sections with moderate slopes and jumps up to 15 cm. | Suitable for tarmacked roads, cycle paths and firm gravel paths and roads, and longer sections with moderate slopes and jumps up to 15 cm. | | |
|  3 | | Suitable for tarmacked roads, cycle paths and easy to demanding off-road riding, sections with moderate slopes and jumps up to 61 cm. | Suitable for tarmacked roads, cycle paths and easy to demanding off-road riding, sections with moderate slopes and jumps up to 61 cm. | | | |
|  4 | | | Suitable for tarmacked roads, cycle paths and easy to demanding off-road riding, limited downhill use and jumps up to 122 cm. | | | |

Table 9: Area of use

The pedelec is unsuitable for the following areas of use:











| Area of use | City and trekking bicycles | Child's bicycles/ bicycles for young adults | Mountain bikes | Racing bicycle | Cargo bike | Folding bicycle |
|--|---|---|---|--|---|---|
| |  |  |  |  |  |  |
|  1 | Never drive off-road or perform jumps. | Never drive off-road or perform jumps. | | Never drive off-road or perform jumps. | Never drive off-road or perform jumps. | Never drive off-road or perform jumps. |
|  2 | Never drive off-road or perform jumps over 15 cm. | Never drive off-road or perform jumps over 15 cm. | Never drive off-road or perform jumps over 15 cm. | Never drive off-road or perform jumps over 15 cm. | | |
|  3 | | Never ride downhill or perform jumps over 61 cm. | Never ride downhill or perform jumps over 61 cm. | | | |
|  4 | | | Never traverse extremely difficult off-road terrain or perform jumps over 122 cm. | | | |

Table 10: Unsuitable terrain

3.2 Nameplate

The nameplate is situated on the frame. The precise position of the nameplate is shown in

[Figure 2](#). The nameplate contains thirteen pieces of information.

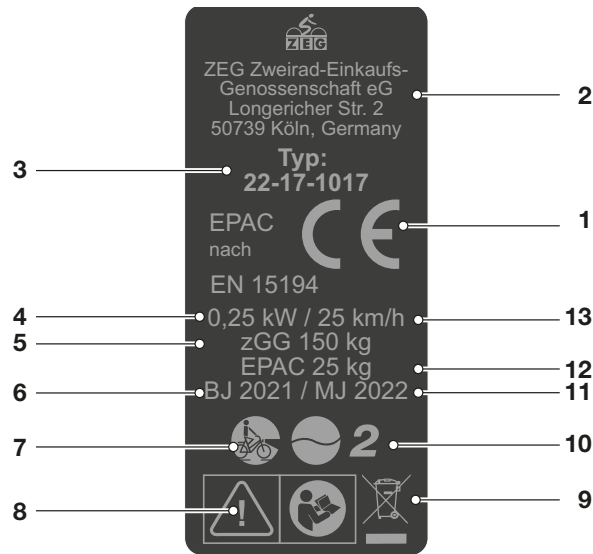


Figure 1: Example ZEG nameplate

| No. | Designation | Description | More information |
|-----|-------------------------------------|--|-----------------------------|
| 1 | CE marking | The manufacturer uses the CE marking to declare that the pedelec complies with applicable requirements. | |
| 2 | Manufacturer's contact details | You can contact the manufacturer at the address indicated. | Section 1.1 |
| 3 | Type number | All pedelec models have an eight-digit type number, which is used to specify the design model year, the type of pedelec and the version. | Section 1.5 |
| 4 | Maximum continuous power | The maximum continuous power is the greatest possible power for the electric motor output shaft over 30 minutes. | |
| 5 | Maximum permitted total weight | The maximum permitted total weight is the weight of the fully assembled pedelec with the rider plus baggage. | |
| 6 | Year of manufacture | The year of manufacture is the year in which the pedelec was manufactured. The production period is between June 2021 and June 2022. | |
| 7 | Pedelec type | Each pedelec is assigned a pedelec type, which determines its proper use, function and area of use. | Section 3.2 |
| 8 | Safety markings | Safety markings warn of hazards. | Section 2.6 |
| 9 | Disposal instructions | These instructions must be followed when disposing of the pedelec. | Section 10 |
| 10 | Area of use | The pedelec may only be ridden in authorised locations. | Section 3.6 |
| 11 | Model year | The model year refers to the first production year that the series-manufactured pedelec was produced in the version concerned. The year of manufacture is different to the model year in some cases. | |
| 12 | Weight of the ready-to-ride pedelec | The weight of the ready-to-ride pedelec is specified as a weight of 25 kg or above and refers to its weight at the time of purchase. Extra accessories need to be added to the weight. | Section 4.1 |
| 13 | Shut-off speed | The speed that the pedelec reaches at the moment when the current has dropped to zero or to the no-load current value. | |

Table 11: Explanation of information on the nameplate

3.3 Components

3.3.1 Overview



Figure 2: Pedelec viewed from right: BULLS Twenty 6 Evo used as example

| | | | |
|---|-------------|----|-----------------------|
| 1 | Front wheel | 9 | Kickstand |
| 2 | Fork | 10 | Chain |
| 3 | Handlebars | 11 | Frame number |
| 4 | Stem | 12 | Chain guard |
| 5 | Frame | 13 | Motor |
| 6 | Seat post | 14 | Pedal |
| 7 | Saddle | 15 | Battery and nameplate |
| 8 | Rear wheel | | |

3.3.2 Chassis

The chassis comprises two components:

- Frame and
- steering system.

3.3.2.1 Frame

The frame absorbs all forces which act on the pedelec from body weight, pedalling and the ground. The frame also acts as a carrier for most components.

The frame geometry determines the pedelec's ride performance.

3.3.2.2 Steering system

The steering system components are:

- Steering headset
- Stem
- Handlebars
- Fork.

3.3.2.3 Steering headset

The steering headset (also known as a bike headset or simply a headset) is the fork bearing system in the frame. A distinction is made between two different types:

- Conventional steering headsets for fork steerers with thread and
- Steering headsets for threadless fork steerers, what are known as headsets.

3.3.2.4 Stem

The stem is the connecting component between the handlebars and the fork steerer tube. The stem is used to adjust the handlebars to the rider. The stem is used to adjust the handlebar height and the gap between the handlebars and saddle (see Section 6.5.6).

Quickly adjustable stems

Quickly adjustable stems are an extension to the fork steerer. You can change the height and angle of quickly adjustable stems without any tools. Up to 3 settings can be adjusted, depending on the model:

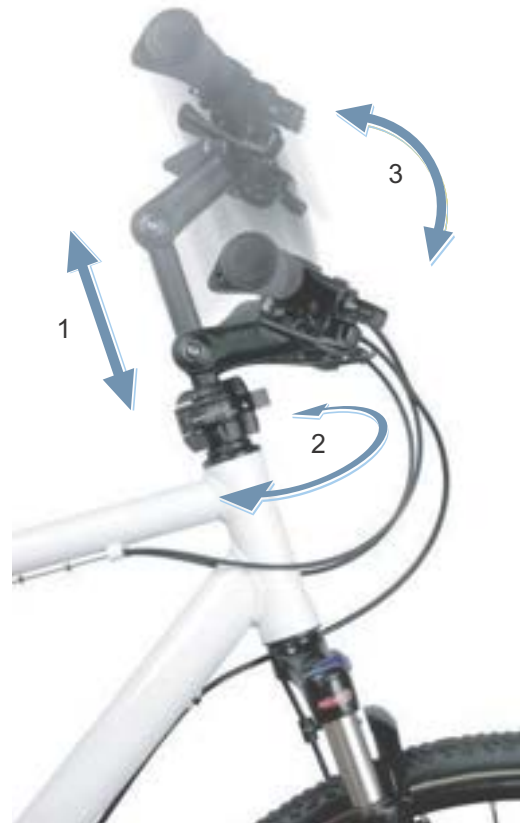


Figure 3: Example – BY.SCHULZ Speedlifter Twist Pro SDS

- 1 Height adjustment
- 2 Twist function
- 3 Stem angle adjustment.

Adjusting the height and stem angle increase ride comfort as different sitting positions can be adopted on longer rides. The twist function saves space when parking.

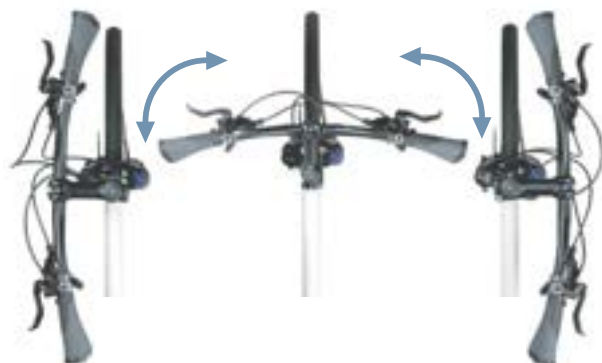


Figure 4: Twist function, using BY.SCHULZ as an example

3.3.2.5 Handlebars

The pedelec is steered using the handlebars. The handlebars are used to support the upper body and is the mount for most controls and displays (see Section 3.4.1).

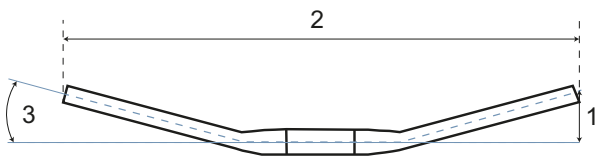


Figure 5: Handlebar dimensions

The main structural dimensions of handlebars are:

- 1 Rise (height)
- 2 Width
- 3 Backsweep

3.3.2.6 Fork

The stem and handlebars are attached to the top end of the fork steerer. The axle is fastened to the fork ends. The wheel is fastened to the axle.

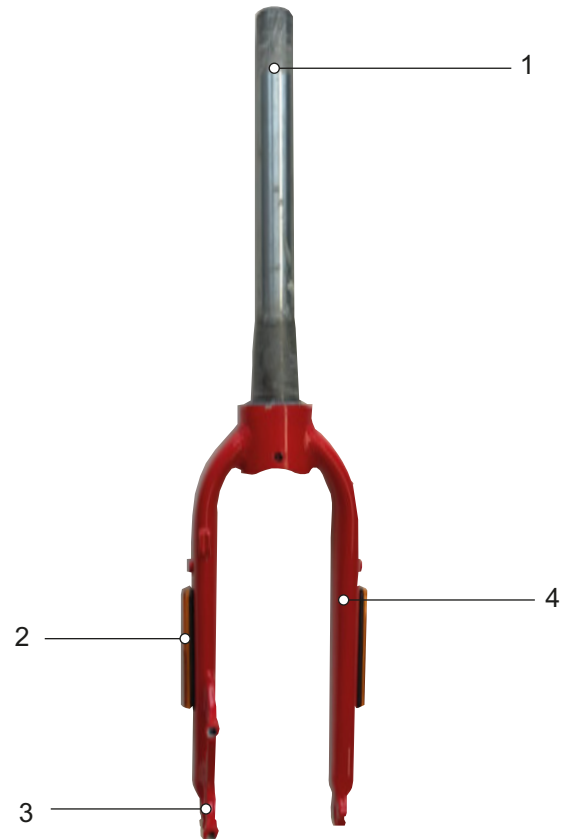


Figure 6: Overview of fork

- 1 Fork steerer
- 2 Side reflectors (optional)
- 3 Fork end
- 4 Fork leg

3.3.3 Suspension

Both forks and suspension forks are fitted in this model series.

3.3.3.1 Rigid fork

Rigid forks do not feature suspension. They transfer the used muscle and motor power to the road to optimum effect. Pedelects with rigid forks consume less energy on steep roads and have a greater range than pedelecs with suspension.

3.3.3.2 Suspension fork

A fork deflects when a steel spring, air suspension, or both suspension types act on it.

Unlike rigid forks, suspension forks improve contact with the ground and thus enhance comfort using two functions: suspension and damping. The suspension in a pedelec prevents an impact, such as one caused by a stone lying in the pedelec's path, from being channelled directly into the body via the fork. The impact is absorbed by the suspension system instead. This causes the suspension fork to compress.

After compressing, the suspension fork returns to its original position. If the bike has a damper, the damper will slow this movement down. It thus prevents the suspension system from springing back in an uncontrolled manner and the fork from oscillating up and down. Dampers which dampen compressive deflection movements, i.e. a compression load, are called compression dampers or compression dashpots.

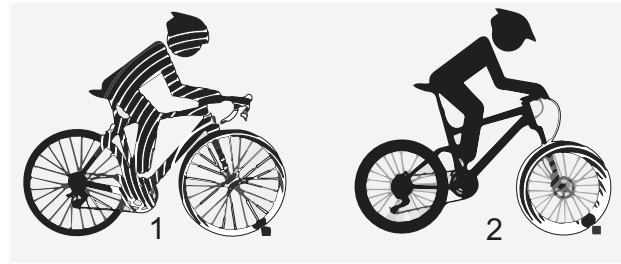


Figure 7: Without suspension (1) and with suspension (2)

Dampers which dampen rebound deflection movements, i.e. a rebound load, are called rebound dampers or dashpots.

The compression can be disabled in any suspension fork. A suspension fork will then behave like a rigid fork.

The stem and the handlebars are fastened to the fork steerer. The wheel is fastened to the axle.

Negative deflection (sag)

The negative deflection (sag) is the percentage of total deflection that is compressed by body weight, including equipment (such as a backpack), the seating position and frame geometry. Sag is not caused by riding. The pedelec rebounds at a controlled speed if it is

optimally adjusted. The wheel stays in contact with the ground when passing over bumps (blue line). The fork head, handlebars and body follow terrain (green line) when riding over bumps. The suspension motion is predictable and controlled.

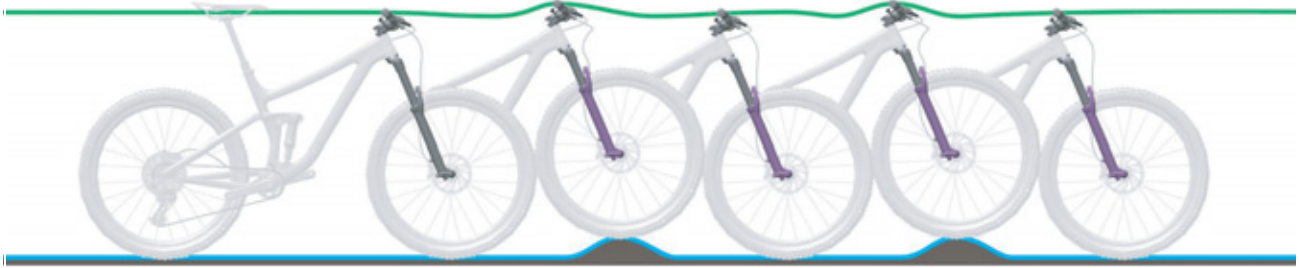


Figure 8: Optimum fork riding performance

When optimally adjusted, the fork counteracts deflection on hilly terrain and stays higher in its

deflection range. This makes it easier to maintain speed when riding over hilly sections of terrain.



Figure 9: Optimum fork riding performance on hilly terrain

When optimally adjusted, the fork deflects quickly and unhindered when the bike hits bumps and absorbs a bump. Traction is retained (blue line).

The fork responds quickly to the bump. The headset and handlebars rise slightly when absorbing a bump (green line).



Figure 10: Optimum fork riding performance over bumps

Rebound damping

Only applies to pedelecs with this equipment

Rebound damping defines the speed at which the suspension rebounds after being loaded.

Rebound damping controls the suspension fork extension and rebound speed, which, in turn, has an impact on traction and control.

Rebound damping can be adjusted to body weight, spring stiffness, deflection, the terrain and the rider's preferences.

If the air pressure or spring stiffness increases, the extension and rebound speeds also increase.

Rebound damping needs to be increased to achieve an optimal setting if the air pressure or spring stiffness are increased.

The damper rebounds at a controlled speed if the fork is optimally adjusted. The wheel stays in contact with the ground when passing over bumps (blue line).

The fork head, handlebars and body follow terrain (green line) when riding over bumps. The suspension motion is predictable and controlled.



Figure 11: Optimum fork riding performance

Suspension fork compression adjustment

Only applies to pedelecs with this equipment

The compression adjuster allows the rider to make quick adjustments to the fork's suspension behaviour to adapt to the changes in terrain. It is intended for adjustments made during the ride.

The compression adjuster controls the compression lifting speed or the rate at which the fork deflects slow impacts. The compression adjuster affects the absorption of bumps and its efficiency when weight shifts or during transitions,

cornering and uniform impacts caused by bumps, and when braking. When optimally adjusted, the fork counteracts deflection, stays higher in its deflection range and helps to maintain speed while riding on hilly parts of terrain. The fork deflects quickly and unhindered when the bike hits a bump and absorbs the bump. Traction is retained (blue line).



Figure 12: Optimum performance on hilly terrain

Steel suspension fork structure

The stem and the handlebars are fastened to the fork steerer. The wheel is fastened to the axle.

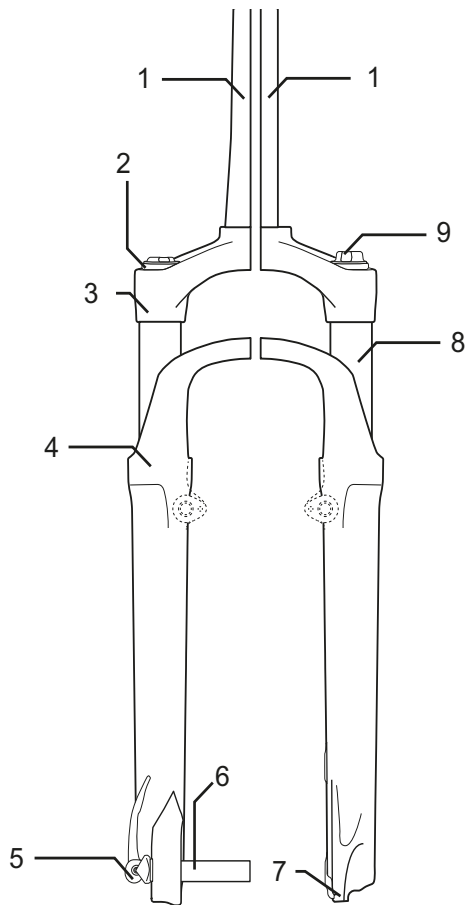


Figure 13: Suntour steel suspension fork as an example

- | | |
|---|--------------------|
| 1 | Fork steerer |
| 2 | Sag setting wheel |
| 3 | Crown |
| 4 | Dust seal |
| 5 | Q-Loc |
| 6 | Axle |
| 7 | Fork end |
| 8 | Stanchion |
| 9 | Compression damper |

Air suspension fork structure

Depending on the model, the air suspension fork has either

- an air suspension assembly group (orange) and/or
- a compression damper assembly (blue) and/or
- a rebound damper assembly group (red)

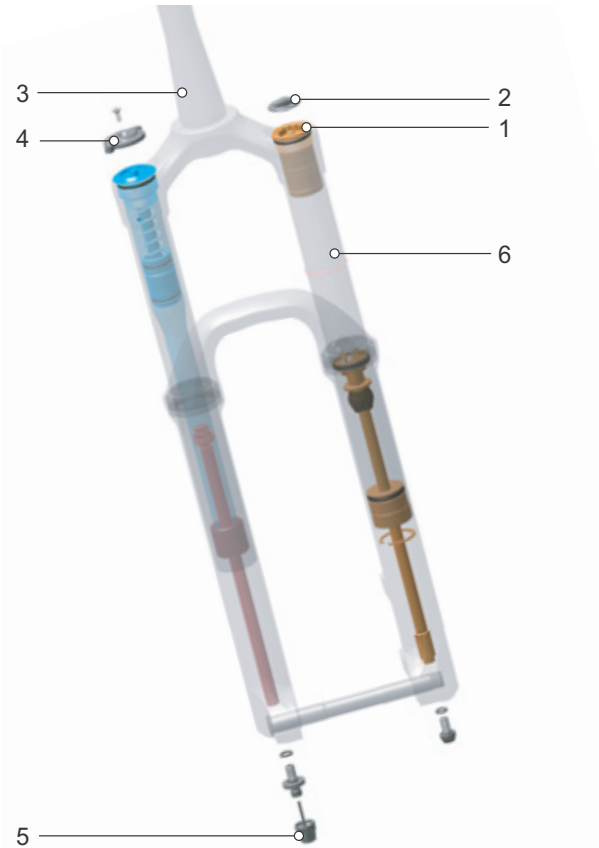


Figure 14: Internal structure of air suspension fork

- | | |
|---|-------------------|
| 1 | Air valve |
| 2 | Air valve cap |
| 3 | Fork steerer |
| 4 | Sag setting wheel |
| 5 | Rebound adjuster |
| 6 | Stanchion |

3.3.4 Wheel

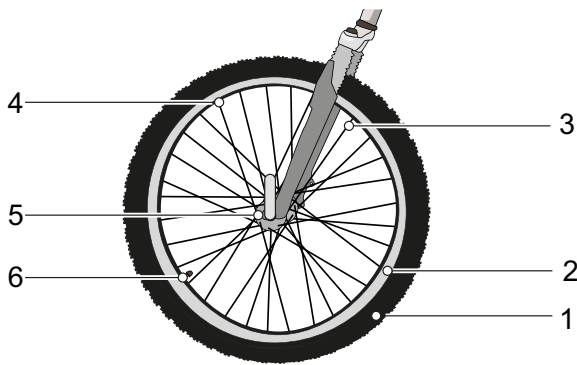


Figure 15: Visible wheel components

- | | |
|---|---------------|
| 1 | Tyres |
| 2 | Rim |
| 3 | Spoke |
| 4 | Spoke nipples |
| 5 | Hub |
| 6 | Valve |

The wheel comprises the *wheel* itself, an inner tube with a valve and a tyre.

3.3.4.1 Tyres

The tyre forms the outer section of the wheel. Tyres differ in their tread, depending on their intended use.

Tread

The tread has little influence on riding characteristics on a smooth road. In this case, the grip between the road and tyre is mainly due to the rolling friction between the rubber and the road surface.

Unlike cars, a pedelec will not aquaplane. The tread contact is much smaller and the contact pressure much higher. Theoretically, aquaplaning will not occur until speeds of 200 km/h are reached.

However, the tread is highly important on terrain. In this case, the tread creates an interlock with the ground. This is the only way possible to transmit the driving, braking and steering forces. The tread can also help improve control on dirty road surfaces.

If a tyre with a deep tread is used on asphalt, this may make an unpleasant noise when the brakes are used. In such a case, the specialist dealer needs to replace the tyre with a new one with a shallow tread.



Figure 16: Example: Information on tyres

Tyre pressure

The permitted pressure range is indicated on the side of the tyre. It is indicated in psi or bars.

The tyre is only able to support the pedelec if there is adequate tyre pressure. The tyre pressure must be adjusted to the rider and then checked on a regular basis.

Tyre size

The tyre size pressure range is indicated on the side of the tyre.

3.3.4.2 Rim

The rim is the metal profile on a wheel which holds the tyre, tube and rim band together. The rim is joined to the hub with spokes.

In rim brakes, the outer surface of the rim is used to brake.

3.3.4.3 Valve

Each wheel has a valve. Air is pumped into the tyre via the valve. There is a valve cap on each valve. The screw-on valve cap keeps out dust and dirt.

The pedelec has either:

- a conventional valve
- a Presta valve or
- a Schrader valve.

Dunlop valve

The Dunlop valve, also known as a conventional valve, is the valve in most widespread use. The valve insert can be replaced easily and air can be let out very quickly.



Figure 17: Dunlop valve

Presta valve

The Presta valve, also known as the French valve (FV) or Sclaverand valve, is the narrowest variant of all valves. The Presta valve requires a smaller hole in the rim, which is why it is especially suitable for the narrow rims on racing bikes. It is about 4 to 5 g lighter than a Dunlop or Schrader valve.



Figure 18: Presta valve

Schrader valve

The Schrader valve can be pumped at filling stations. Older and easy bicycle pumps are unsuitable for filling tyres via a Schrader valve.



Figure 19: Schrader valve

3.3.4.4 Spoke

A spoke is a rod that connects the hub to the rim. The bent end of the spoke which is hooked into the hub is called the spoke head. A thread between 10 mm and 15 mm is attached to the other end of the spoke.

3.3.4.5 Spoke nipples

Spoke nipples are screw elements with an internal thread which fits onto the spoke thread. Fitted spokes are tensioned by tightening the spoke nipples. This straightens the wheel uniformly.

3.3.4.6 Hub

The hub is located in the centre of the wheel. The hub is connected to the rim and tyre with the spokes. An axle runs through the hub, connecting the hub with the fork at the front and with the frame at the rear.

The hub's main task is to transfer the pedelec's force of weight to the tyres. Special hubs on the rear wheel perform additional functions. There is a distinction between five types of hub:

- Hubs without additional features
- Brake hub, see Back-pedal brake
- Gear hub, also known as a hub gear
- Generator hub, see Hub dynamo
- Motor hub.

3.3.5 Braking system

A pedelec's brake system is primarily operated using the brake lever on the handlebars.

- If the left brake handle is pulled, the brake on the front wheel is applied.
- If the right brake handle is pulled, the brake on the rear wheel is applied.

The brakes are used as an emergency stop system and bring the bicycle to a halt quickly and safely in the event of an emergency.

The brake is applied using the brake lever either

- with the brake lever and shift cable (mechanical brake) or
- with the brake lever and hydraulic brake cable (hydraulic brake).

3.3.5.1 Mechanical brake

The brake lever is connected with the brake via a wire inside the shift cable (also known as a Bowden cable).



Figure 20: Bowden cable structure

3.3.5.2 Hydraulic brake

The brake fluid is in a closed hose system. If the brake lever is pulled, the brake fluid transfers pressure to the brake on the wheel.

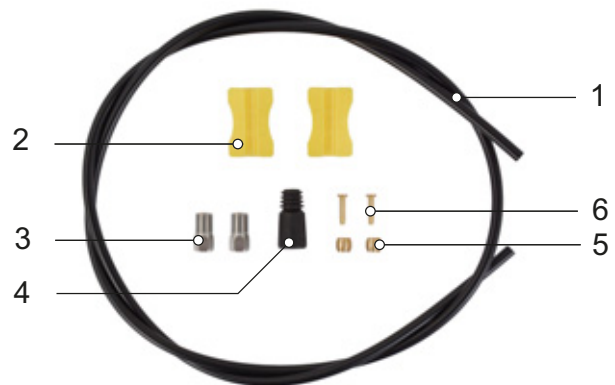


Figure 21: Components in a brake cable

- | | |
|---|-------------|
| 1 | Brake cable |
| 2 | Cable clip |
| 3 | Union nut |
| 4 | Cover cap |
| 5 | Knob |
| 6 | Insert pin |

3.3.5.3 Disc brake

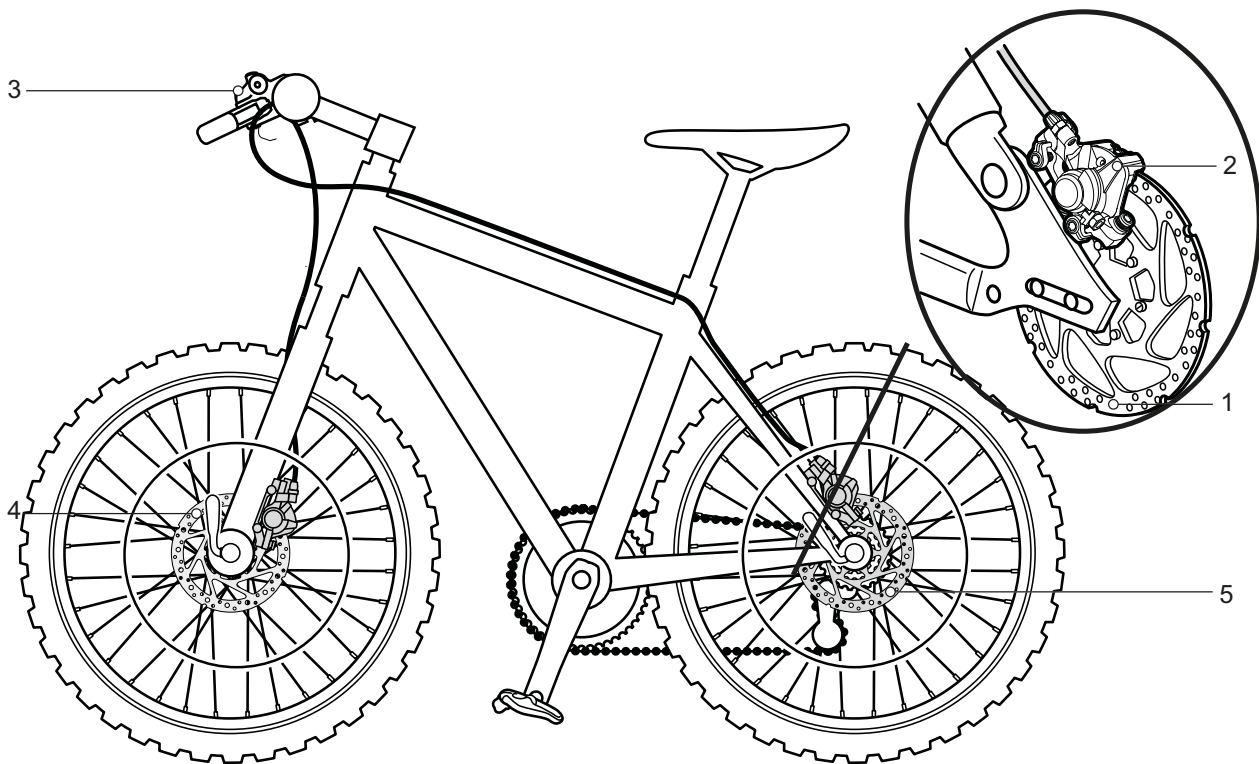


Figure 22: Brake system with disc brake – example

- 1 Brake disc
- 2 Brake calliper with brake linings
- 3 Handlebars with brake lever
- 4 Front wheel brake disc
- 5 Rear wheel brake disc

On a pedelec with a disc brake, the brake disc is screwed permanently to the wheel *hub*.

You increase brake pressure by pulling the *brake lever*. The brake fluid is used to transfer pressure through the brake cables to the cylinders in the brake calliper. The braking force is boosted by a speed reduction and applied to the brake linings. These apply the brake disc mechanically. If the *brake lever* is pushed, the brake linings are pressed against the brake disc and the wheel movement is decelerated until it comes to a stop.

3.3.6 Seat post

Seat posts are not designed to fasten the saddle but also to adjust exactly to the optimum sitting position. The seat post can:

- adjust the seat height in the seat tube
- adjust the saddle horizontally with a clamping mechanism and
- adjust the saddle angle by swivelling the entire saddle clamping mechanism.

Retractable seat posts feature a remote control on the handlebars, which can be used to lower the seat post – at a traffic light, for example – and raise it again.

3.3.6.1 Patent seat post



Figure 23: Example of ergotec patent seat post with either one or two seat clamping screws

Patent seat posts have a rigid link between the saddle and the post. Patent seat posts which are angled more markedly towards the rear are called offset seat posts. Offset seat posts provide a greater distance between the saddle and the handlebars.

In patent saddle posts, the saddle is attached to the head with one or two saddle clamping screws. It is recommended to lubricate the thread in these screws to ensure sufficient tension when tightening the screw.

Patent saddle posts are fastened into the seat tube with either a quick release or a screwable clamp.

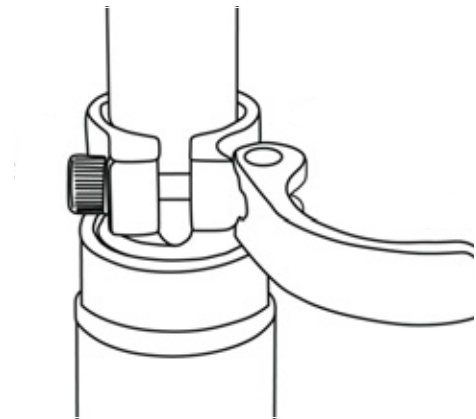


Figure 24: Example of a quick release

3.3.6.2 Suspension seat post

Spring-loaded seat posts can reduce shock after one-time hard impacts, thus improving ride comfort significantly. However, suspension seat posts are not able to compensate for bumps in the road.

If the seat post is the only suspension element, the entire vehicle is a non-suspended mass. This has an unfavourable effect on loaded touring bikes or pedelecs with child trailers.

Suspension seat posts feature small, heavy-duty slide bearings, guides and articulated joints. If they are not lubricated on a regular basis, the sensitive response behaviour diminishes considerably, causing excessive wear.

The pre-tensioning in non-damped suspension seat posts must be adjusted in such a way that the suspension seat post does not deflect with just body weight. This prevents the suspension seat post from deflecting and bobbing intermittently at higher pedalling frequencies or if the rider pedals irregularly.

The spring stiffness can be set lower with damped suspension seat posts, thus making use of the negative deflection.

3.3.7 Mechanical drive system

The pedelec is driven by muscle power, just like a bicycle.

The force which is applied by pedalling in the direction of travel drives the front chain wheel. The chain or belt transmits the force onto the rear chain wheel and then onto the rear wheel.

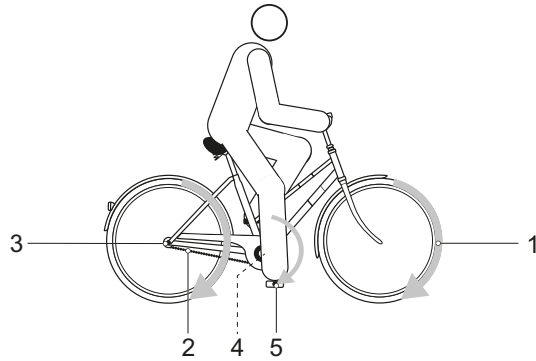


Figure 25: Diagram of mechanical drive system

- | | |
|---|----------------------------------|
| 1 | Direction of travel |
| 2 | Chain or belt |
| 3 | Rear chain wheel or belt pulley |
| 4 | Front chain wheel or belt pulley |
| 5 | Pedal |

The pedelec is equipped with either a chain or belt drive.

3.3.7.1 Chain drive layout



Figure 26: Chain drive with derailleur gears

- | | |
|---|------------------|
| 1 | Front derailleur |
| 2 | Rear derailleur |
| 3 | Chain |

A chain drive is compatible with:

- Back-pedal brake,
- Hub gear or
- Derailleur gears

3.3.7.2 Belt drive layout



Figure 27: Belt drive

- | | |
|---|-------------------|
| 1 | Front belt pulley |
| 2 | Rear belt pulley |
| 3 | Belt |

A belt drive is compatible with:

- Back-pedal brake and
- Hub gear

A belt drive is not compatible with derailleur gears.

3.3.8 Electric drive system

The pedelec has an electric drive system in addition to a mechanical one.

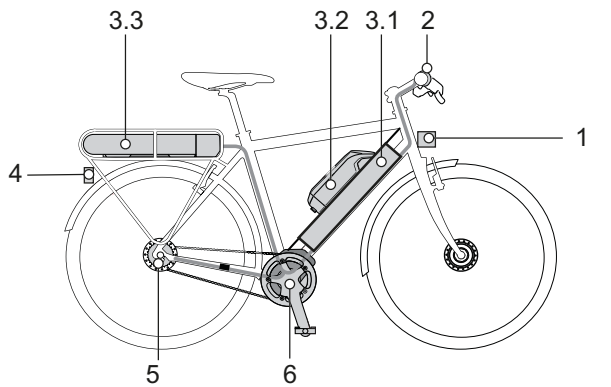


Figure 28: Diagram of an electric drive system with electric components

- | | |
|-----|--|
| 1 | Front lamp |
| 2 | On-board computer |
| 3.1 | Integrated battery and/or |
| 3.2 | Frame battery and/or |
| 3.3 | Pannier rack battery |
| 4 | Rear light |
| 5 | Electric gear shift (alternative) |
| 6 | Motor |
| 7 | A charger which is designed for the battery. |

3.3.8.1 Motor

As soon as the muscle power required for pedalling passes a certain level, the motor is activated gently and assists the pedalling motion. The pre-set level of assistance determines the motor output.

The motor switches off automatically as soon as the rider no longer pedals, the temperature is outside the permitted range, there is an overload or the shut-off speed of 25 km/h has been reached.

A push assist system can be activated. The speed depends on the selected gear. The motor continues to drive the pedelec as long as the rider presses the push assist button on the handlebars. The speed can be a maximum of 6 km/h in this case. The electric drive system stops when the push assist button is released.

The pedelec does not have a separate emergency shut-off button. In the event of an emergency, the motor can be stopped by removing the on-board computer. The mechanical brakes are used as an emergency stop system and bring the bicycle to a halt quickly and safely in the event of an emergency.

3.3.8.2 Rechargeable battery

BOSCH batteries are lithium ion batteries which are developed and manufactured to the latest technical standards. Each individual cell is protected by a steel cup and encased in a plastic battery housing. These batteries meet and exceed applicable industrial safety standards. The battery has an interior electronic protection circuit, which is specifically designed for the charger and the pedelec. The battery temperature is monitored at all times. The battery is protected against deep discharge, overcharging, overheating and short circuit. In the event of a hazard, a protective circuit switches the battery off automatically.

The battery has a high energy content when charged. The code of practice for their safe handling is found in Section 2 Safety and Section 6.9 Rechargeable battery in the operating instructions. If the electric drive system is not used for 10 minutes and no button has been pressed on the on-board computer or the control panel, the electric drive system and the battery are automatically switched off to save energy.

The type and duration of operating conditions have a significant effect on the battery life. Just like any other lithium-ion battery, the battery will age naturally if it is not being used. The battery's service life can be extended if the battery is well maintained and stored at the correct temperature. The charging capacity will decrease with age, even if the battery is serviced properly. If the operating time is severely shortened after charging, this is a sign that battery has reached the end of its useful life.

Battery performance is reduced when the temperature drops since this increases electrical resistance. As a result, you can expect the range to be shorter than normal in winter. We recommend using thermal protection sleeves when riding longer distances in the cold.

Each battery has its own lock.

3.3.8.3 Frame battery

Three different types of frame batteries can be fitted:



Figure 29: Overview of frame battery

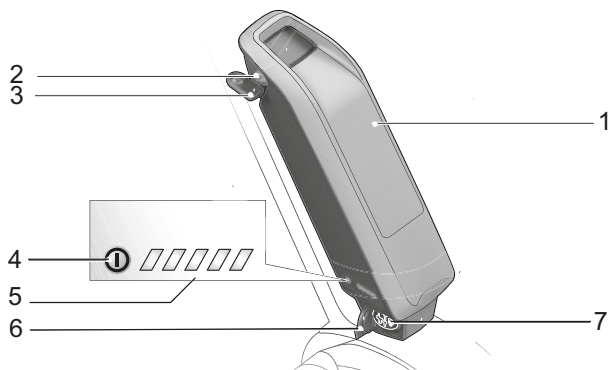


Figure 30: Details of frame battery

- 1 Battery housing
- 2 Battery lock
- 3 Battery key
- 4 On-off button (battery)
- 5 Battery level indicator (battery)
- 6 Charging port cover
- 7 Charging port

3.3.8.4 Pannier rack battery

Three different types of pannier rack batteries can be fitted:

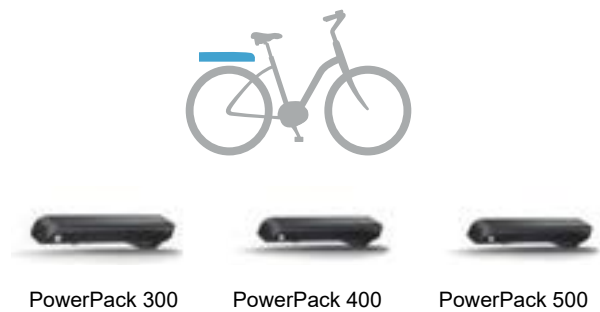


Figure 31: Overview of pannier rack battery

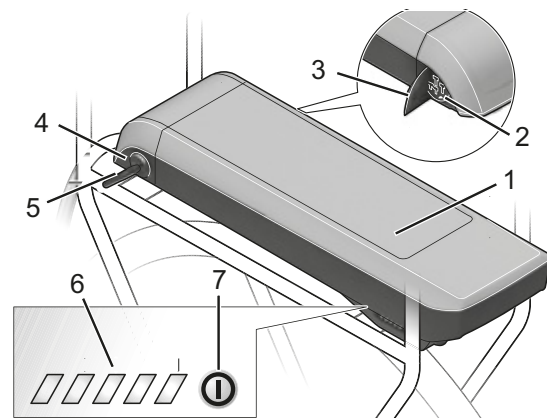


Figure 32: Details of pannier rack battery

- 1 Battery housing
- 2 Charging port
- 3 Charging port cover
- 4 Battery lock
- 5 Battery key
- 6 Battery level indicator (battery)
- 7 On-Off button (battery)

3.3.8.5 Integrated battery

Four different types of pannier rack batteries can be fitted:

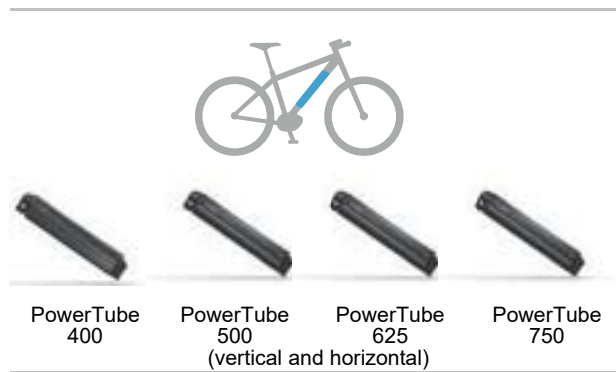


Figure 33: Overview of integrated battery

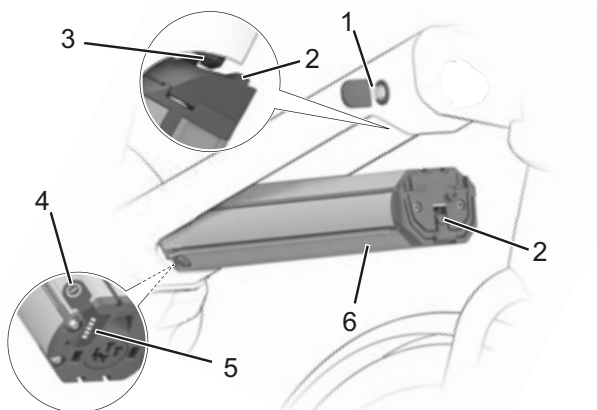


Figure 34: Integrated battery in detail

- 1 Battery key
- 2 Retainer guard
- 3 Securing hook
- 4 On-off button (battery)
- 5 Battery level indicator (battery)
- 6 Battery housing

3.3.8.6 Charger

Each pedelec is supplied with a charger. As a general rule, any BOSCH charger may be used:

- The 2 A compact charger
- The 4 A standard charger
- The 6 A fast charger

Observe the operating instructions in the Section 11.4 Documents.

3.3.9 Lighting

When the riding light is activated, the front light and the rear light are switched on together.

3.3.10 On-board computer

The pedelec has a BOSCH Purion on-board computer.

The on-board computer controls the drive system and shows the journey data on the display screen.

The battery powers the on-board computer. The on-board computer also has two internal non-rechargeable coin cells. This ensures that the electric drive system can be switched on using the on-board computer.



Figure 35: BOSCH Purion on-board computer

3.4 Description of controls and screens

3.4.1 Handlebars

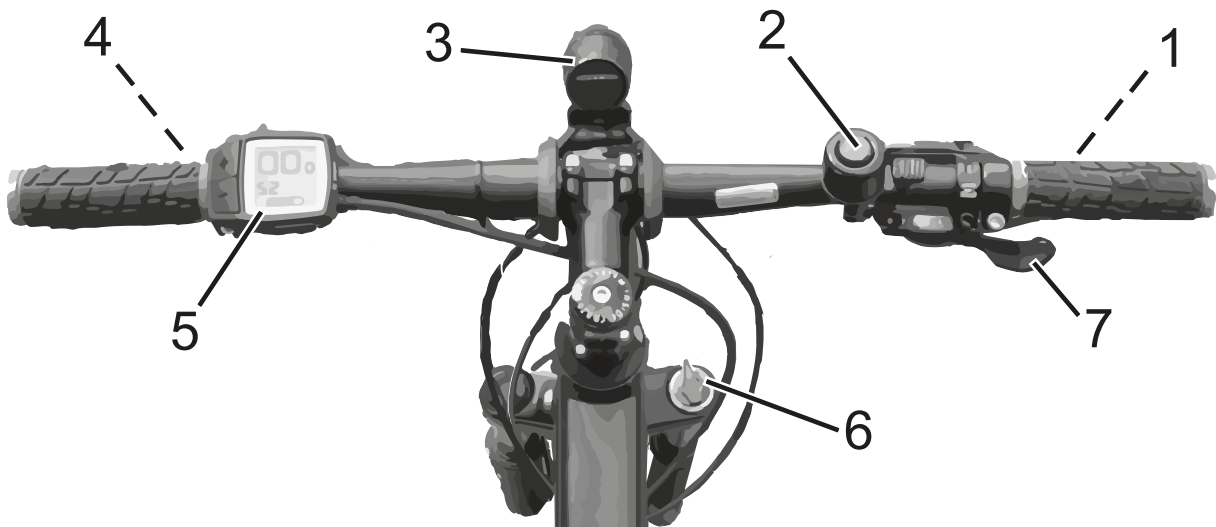


Figure 36: Detailed view of handlebars from sitting position, example

- | | | | |
|---|------------------------|---|-------------------|
| 1 | Rear wheel hand brake | 5 | On-board computer |
| 2 | Bell | 6 | Lockout |
| 3 | Headlight | 7 | Shifter |
| 4 | Front wheel hand brake | | |

3.5 On-board computer

The on-board computer is operated using four buttons on its casing.

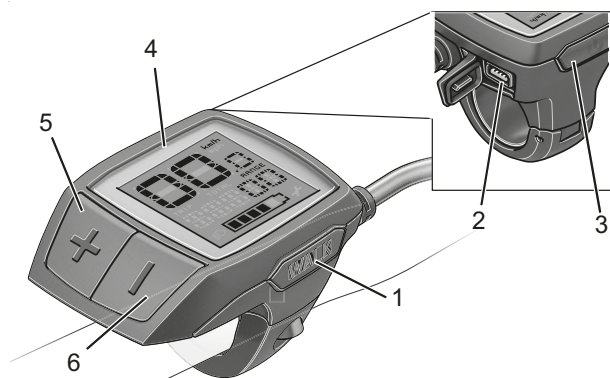


Figure 37: BOSCH Purion on-board computer layout

| | Symbol | Use |
|---|-------------|-------------------------|
| 1 | WALK | Push assist button |
| 2 | | USB port |
| 3 | | On-Off button (display) |
| 4 | | Display |
| 5 | + | Plus button |
| 6 | - | Minus button |

Table 12: Operating elements overview

3.5.1 Display

The display has nine on-screen indicators:

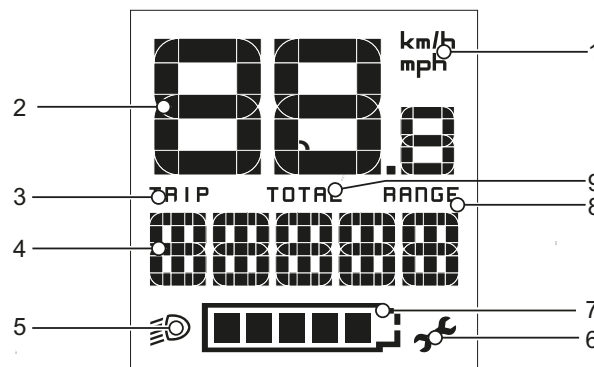


Figure 38: Display overview

- 1 Indicator for km/h or mph (see Section 3.8.1.1)
- 2 Tachometer indicator (see Section 3.8.1.2)
- 3 TRIP indicator (see Section 3.8.1.3)
- 4 Level of assistance indicator or Function indicator (see Section 3.8.1.4)
- 5 Riding light symbol indicator (see Section 3.8.1.5)
- 6 Maintenance indicator (see Section 3.8.1.6)
- 7 Battery level indicator (on-board computer) (see Section 3.8.1.7)
- 8 RANGE indicator (see Section 3.8.1.3)
- 9 TOTAL indicator (see Section 3.8.1.3)

3.5.1.1 Indicator unit km/h or mph

The speed can be displayed in km/h or mph. You can choose between the units in the system settings.

3.5.1.2 Tachometer screen

The tachometer indicator shows the current speed at all times.

3.5.1.3 Information display

The display shows one of three types of information. The displayed information can be changed.

| Display | Function |
|---------|---|
| TRIP | Distance travelled since the last RESET |
| TOTAL | Total distance travelled (cannot be changed) |
| RANGE | Estimated range of the available battery charge, calculated based on the most recent manner of riding |

Table 13: Information display


3.5.1.4 Level of assistance

The higher the selected level of assistance is, the more the drive system assists with pedalling. eMTB mode is available for Performance Line CX drives. In eMTB mode, the assistance factor and the torque are dynamically adjusted depending on the pedalling force applied to the pedals. If the pedelec has been configured with “eMTB mode”, “eMTB mode” appears briefly when the SPORT level of assistance is selected.

| Level of assistance | Use |
|--|---|
| OFF | When the drive system is switched on, the motor assistance is switched off. The pedelec can be used like a normal bicycle by simply pedalling. The push assist system cannot be activated |
| ECO | Limited assistance with maximum efficiency for maximum range |
| TOUR | Constant assistance, for long-range tours |
| SPORT/eMTB | |
| SPORT | Powerful assistance for sports rides on mountainous routes and on urban roads |
| eMTB available in combination with motors: BDU250P CX, BDU365, BDU450 CX and BDU480 CX motors | Optimum assistance on any terrain, sporty start-up, improved dynamics and maximum performance |
| TURBO | Maximum assistance up to high pedalling frequencies, for sports riding |

Table 14: Overview of levels of assistance

3.5.1.5 Riding light symbol

 The riding light symbol is shown when the riding light is on.

3.5.1.6 Maintenance indicator

Indicates that maintenance is required.

3.5.1.7 Battery level indicator (on-board computer)

The battery level indicator displays the pedelec battery level, not the level for the on-board computer's internal battery. If the on-board computer is removed from its mount, the last battery level displayed is saved. Each bar in the battery symbol on the screen represents 20% capacity.



 
| Symbol | Meaning |
|--|--|
|  | The battery is fully charged. |
|  | The battery needs to be recharged. |
|  | The LEDs on the battery level indicator have gone out. The capacity for drive assistance has been used up and assistance is gently switched off. The remaining capacity is reserved for lighting and the on-board computer. The screen flashes. The pedelec battery capacity is sufficient to provide 2 more hours of lighting. Other electrical loads, such as automatic gears and charging of external devices connected to the USB port, are not taken into account here. |

Table 15: Overview of battery level indicator

3.5.2 System message

The drive system monitors itself continuously and if an error is detected, it is indicated by a system message. The system may switch off automatically depending on the type of error.

You will find more information and a table containing all system messages in Section 6.2.

3.5.3 Gear shift

3.5.3.1 SHIMANO derailleur gears

Only applies to vehicles with this equipment

The gear shift is on the right of the handlebars.
The gear shift has one or two shifters.

SHIMANO SL-M315 gear shift

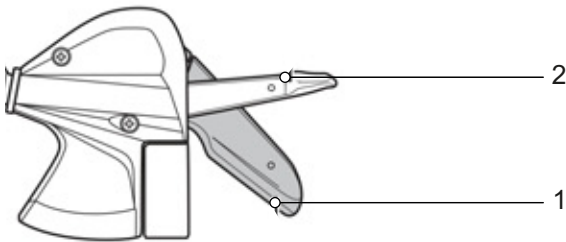


Figure 39: Example of SHIMANO SL-M315

- 1 Shifter A
- 2 Shifter B

SHIMANO SL-M3100 gear shift

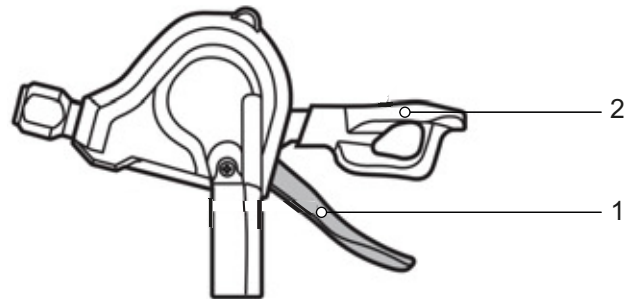


Figure 40: Example of SHIMANO SL-M3100

- 1 Shifter A
- 2 Shifter B (optional)

3.5.4 Hand brake

There is a hand brake on the left and right of the handlebars.

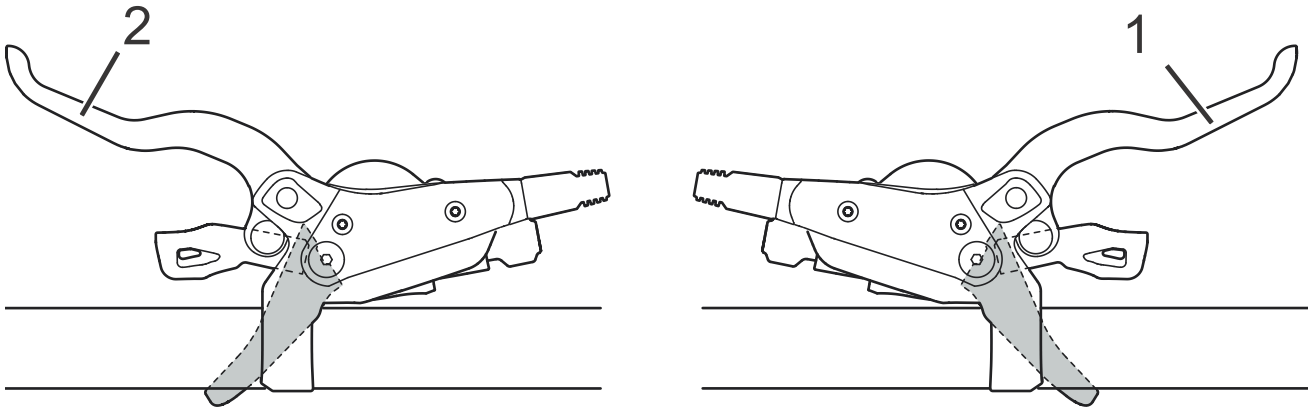


Figure 41: Front wheel (2) and rear (1) brake levers – Shimano brake used as an example

- The left-hand brake controls the front wheel brake.
- The right-hand brake controls the rear wheel brake.

3.5.5 Battery level indicator (battery)

Each battery has its own level indicator:

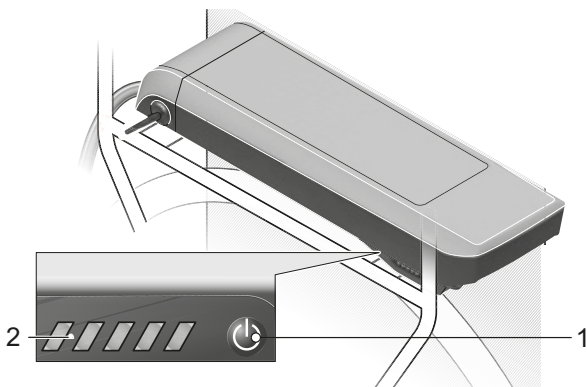


Figure 42: Position of charge level indicator on pannier rack battery

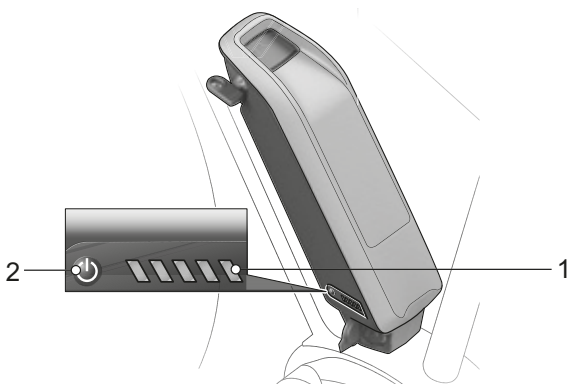


Figure 43: Position of charge level indicator on seat tube battery

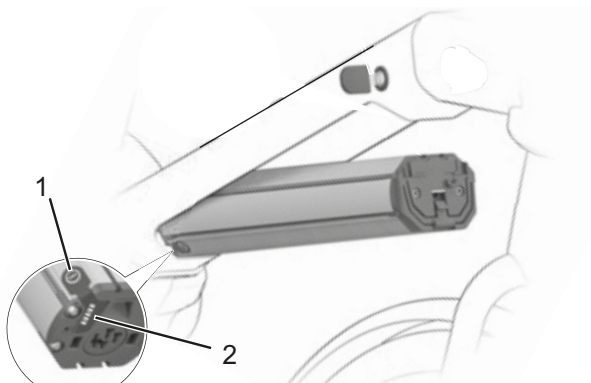


Figure 44: Position of charge level indicator on integrated battery

- 1 On-Off button (battery)
- 2 Battery level indicator (battery)

3.5.5.1 Battery level indicator (battery)

The five green LEDs on the battery level indicator show the charge level when the battery is switched on. Each LED represents 20% of battery capacity.

| LED 1,2,3,4,5 | Battery level |
|---------------|---------------|
| ● ● ● ● ● | 100...80% |
| ● ● ● ● ○ | 79...60% |
| ● ● ● ○ ○ | 59...40% |
| ● ● ○ ○ ○ | 39...20% |
| ● ○ ○ ○ ○ | 19...15% |
| ○ ○ ○ ○ ○ | 5...0% |

Figure 45: Battery level indicator

Symbols:



All five LEDs will light up when the battery is fully charged. The charge level for the activated battery is also shown on the on-board computer.

If the battery level falls below 5%, all the LEDs on the operating status and battery level indicator will go out.

The battery level is still shown on the on-board computer.

3.6 Technical data

3.6.1 Pedelec

| | |
|---------------------|-----------------|
| Power output/system | 250 W (0.25 kW) |
| Shut-off speed | 25 km/h |

Table 16: Pedelec technical data

3.6.2 Emissions

| | |
|--|------------------------|
| A-weighted emission sound pressure level | < 70 dB(A) |
| Total vibration level for the hands and arms | < 2.5 m/s ² |
| Highest effective value of weighted acceleration for the entire body | < 0.5 m/s ² |

Table 17: Emissions from the pedelec*

*The safety requirements as per Electromagnetic Compatibility Directive 2014/30/EU have been met. The pedelec and the charger can be used in residential areas without restriction.

3.6.3 Bicycle lighting

| | |
|----------------|--------|
| Voltage about | 12 V |
| Maximum output | |
| Front light | 17.4 W |
| Rear light | 0.6 W |

Table 18: Bicycle lighting

3.6.4 BOSCH Intuvia on-board computer

| | |
|--|----------------|
| Internal lithium ion battery | 3.7 V, 230 mAh |
| Operating temperature | -5... +40 °C |
| Storage temperature | -10... +40 °C |
| Charging temperature | 0... +40 °C |
| Protection class (with USB cover closed) | IPx54 |
| Weight about | 0.15 kg |

Table 19: Technical data for BOSCH Intuvia on-board computer, BUI255

3.6.5 USB port

| | |
|------------------|-------------|
| Charge voltage | 5 V |
| Charging current | Max. 500 mA |

Table 20: USB port technical data

3.6.6 Motor

3.6.6.1 BOSCH Active Line

| | |
|--------------------------|---------------|
| Maximum continuous power | 250 W |
| Max. torque | 40 Nm |
| Nominal voltage | 36 V DC |
| Protection class | IP54 |
| Weight about | 2.9 kg |
| Operating temperature | -5... +40 °C |
| Storage temperature | -10... +40 °C |

Table 21: Technical data for BOSCH Active Line motor, BDU310

3.6.6.2 BOSCH Active Line Plus

| | |
|--------------------------|---------------|
| Maximum continuous power | 250 W |
| Max. torque | 50 Nm |
| Nominal voltage | 36 V DC |
| Protection class | IP54 |
| Weight about | 3.2 kg |
| Operating temperature | -5... +40 °C |
| Storage temperature | -10... +40 °C |

Table 22: Technical data for BOSCH Active Line Plus motor, BDU350

3.6.7 Rechargeable battery

3.6.7.1 BOSCH PowerPack 400

| | |
|--------------------------------------|----------------|
| Nominal voltage | 36 V |
| Nominal capacity | 11 Ah |
| Energy | 400 Wh |
| Weight | 2.5/ 2.6 kg |
| Protection class | IP54 |
| Operating temperature | -5 °C... 40 °C |
| Storage temperature | +10... +40 °C |
| Permitted charging temperature range | 0 °...40 °C |

Table 23: Technical data for BOSCH PowerPack 400 battery, BBS265 and BBR265

3.6.7.2 BOSCH PowerPack 500

| | |
|--------------------------------------|---------------|
| Nominal voltage | 36 V |
| Nominal capacity | 13.4 Ah |
| Energy | 500 Wh |
| Weight | 2.6/ 2.7 kg |
| Protection class | IP54 |
| Operating temperature | -5... +40 °C |
| Storage temperature | +10... +40 °C |
| Permitted charging temperature range | 0... +40 °C |

Table 24: Technical data for BOSCH PowerPack 500, BBS275 and BBR275 batteries

3.6.7.3 BOSCH PowerTube 400

| | |
|--------------------------------------|---------------|
| Nominal voltage | 36 V |
| Nominal capacity | 11 Ah |
| Energy | 400 Wh |
| Weight | 2.9 kg |
| Protection class | IP54 |
| Operating temperature | -5... +40 °C |
| Storage temperature | +10... +40 °C |
| Permitted charging temperature range | 0... +40 °C |

Table 25: Technical data for BOSCH PowerTube 400, BBP282 and BBP283 vertical batteries

3.6.7.4 BOSCH PowerTube 500

| | |
|--------------------------------------|---------------|
| Nominal voltage | 36 V |
| Nominal capacity | 13.4 Ah |
| Energy | 500 Wh |
| Weight | 2.9 kg |
| Protection class | IP54 |
| Operating temperature | -5... +40 °C |
| Storage temperature | +10... +40 °C |
| Permitted charging temperature range | 0... +40 °C |

Table 26: Technical data for PowerTube 500, BBP280 horizontal and BBP281 vertical BOSCH batteries

3.6.8 Tightening torques

| Model | Tightening torque | Screw |
|--|---|--|
| On-board computer | | |
| SC-E5003 Attachment screw | 0.8 Nm | 3 mm hex bit |
| Shifter | | |
| SHIMANO DEORE SL-M4100 Attachment screw | 3 Nm | 4 mm hex bit |
| SHIMANO DEORE SL-M5100 Attachment screw | 3 Nm | 4 mm hex bit |
| SHIMANO DEORE SL-M6100 Attachment screw | 3 Nm | 4 mm hex bit |
| SHIMANO DEORE XT SL-M8100 Attachment screw | 3 Nm | 4 mm hex bit |
| SHIMANO DEORE XT SL-M8130 Attachment screw | 3 Nm | 4 mm hex bit |
| SHIMANO SLX SL-M7100 Attachment screw | 3 Nm | 4 mm hex bit |
| SHIMANO XTR SL-M9100 Attachment screw | 3 Nm | 4 mm hex bit |
| Seat post operating lever | | |
| eightpins Attachment screw | 2.5 Nm | 4 mm hex bit |
| Bowden cable fastener | 5 Nm | 3 mm hex bit |
| Axle | | |
| Conventional axle nut | 35...40 Nm* | |
| SUNTOUR screw-on axle 12AH2 Axle Securing screw | 8...10 Nm 5...6 Nm | 6 mm hex bit 5 mm hex bit |
| SUNTOUR screw-on axle 15AH2 Axle Securing screw | 8...10 Nm 5...6 Nm | 6 mm hex bit 5 mm hex bit |
| Handlebars | | |
| Clamping screw, conventional | 5...7 Nm* | |
| Seat post | | |
| by.schulz, G1 M8 seat clamping screw M5 fixing grub screws | 20...24 Nm 3 Nm | 2.5 mm hex bit |
| by.schulz, G2 M6 seat clamping screw M5 fixing grub screws | 12...14 Nm 3 Nm | 2.5 mm hex bit |
| eightpins NGS2 Seat post axle Slipper clutch Valve cap Postpin axle Rear clamping screw (saddle) M5 attachment screw for outer sleeve | 8 Nm 18 Nm 0.5 Nm 8 Nm 8 Nm 0.5 Nm | 6 mm hex bit 3 mm hex bit 5 mm hex bit 5 mm hex bit 3 mm hex bit 3 mm hex bit |

Table 27: Tightening torques and bits

| | | |
|---|---|--|
| eightpins H01 Seat post axle Slipper clutch Valve cap Postpin axle Rear clamping screw (saddle) M5 attachment screw for outer sleeve | 8 Nm 18 Nm 0.5 Nm 8 Nm 8 Nm 0.5 Nm | 6 mm hex bit 3 mm hex bit 5 mm hex bit 5 mm hex bit 3 mm hex bit 3 mm hex bit |
| LIMOTEC LimoDP Seat post clamping screw Saddle clamping screw | 6...7 Nm 7...9 Nm | |
| SUNTOUR suspension seat post Seat clamping screw M5 fixing grub screws | 15...18 Nm 3 Nm | 2.5 mm hex bit |
| Pedals | | |
| Pedal, conventional | 33...35 Nm | 15 mm spanner |

Table 27: Tightening torques and bits

*if there is no other data on the component

4 Transporting and storing

4.1 Weight and dimensions for transportation

Weight and dimensions during transportation.

| Type no. | Frame | Box dim. [cm] | Weight** [kg] | Shipping weight [kg] |
|------------|-------|------------------|------------------|-------------------------|
| 22-26-1002 | 32 | # | # | # |
| | 37 | # | # | # |
| 22-26-1001 | 32 | # | # | # |

Table 28: Type number, model and pedelec type

* Vehicle weight without battery

Not yet available when the instructions were produced

4.2 Designated handles, lifting points

The box does not have any handles.

4.3 Transportation



Crash caused by unintentional activation

There is a risk of injury if the drive system is activated unintentionally.

- ▶ Remove the battery.

4.3.1 Using the brake transport securing system

Applicable for pedelec disc brakes only.



Oil leak if no transport securing device

The brake securing device prevents the brakes from being applied accidentally during transportation or shipment. This could cause irreparable damage to the brake system or an oil leak, which will harm the environment.

- ▶ Never push the brake lever when the wheel has been dismantled.
 - ▶ Always use the transport securing system when transporting or shipping.
-
- ▶ Insert the **transport securing devices** between the brake linings.
- ⇒ Transport securing device is squeezed between the two linings and prevents undesired sustained braking which can cause brake fluid to leak out.

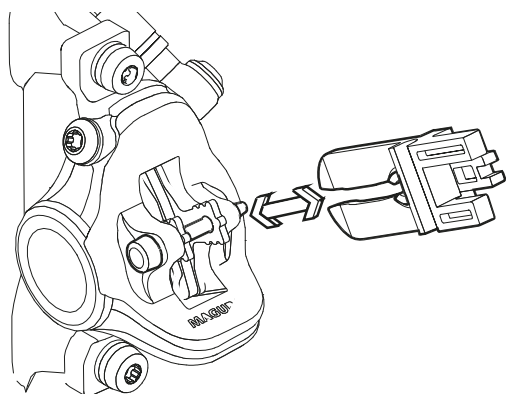


Figure 46: Fastening the transport securing device

4.3.2 Transporting the pedelec

Bicycle rack systems which use the handlebars or frame to hold the pedelec in an upside-down position exert inadmissible forces on its components during transportation. This can cause the supporting parts to break.

- ▶ Never use bicycle rack systems which use the pedelec's handlebars or frame to hold it in an upside-down position. The specialist dealer will give a consultation on correct selection and safe use of a rack system.
- ▶ Take into account the weight of the ready-to-use pedelec when transporting it.
- ▶ Protect the electrical components and connections on the pedelec from the weather conditions with suitable protective covers.
- ▶ Transport the battery in a dry, clean position where it is protected from direct sunlight.

4.3.3 Shipping a pedelec

- ▶ When shipping the pedelec, we recommend that you have the specialist dealer place it in proper packaging.

4.3.4 Transporting the battery

Batteries are subject to hazardous goods regulations. Undamaged batteries may be transported by private persons in road traffic.

Commercial transport requires compliance with regulations concerning packaging, labelling and the transportation of hazardous goods. Open contacts must be covered and the battery securely packaged.

4.3.5 Shipping the battery

The battery is considered a hazardous good and only trained persons may pack and ship a battery. Contact specialist dealer.

4.4 Storing

- ▶ Store pedelec, on-board computer, battery and charger in a clean, dry place where they are protected from sunlight. Do not store outdoors to ensure a long service life.

| | |
|-------------------------------------|---------------|
| Optimum pedelec storage temperature | +10... +20 °C |
|-------------------------------------|---------------|

Table 29: Storage temperature for batteries and the pedelec

- ✓ Temperatures under -10 °C or over +40 °C must generally be avoided.
- ✓ Storage at about 10 °C to 20 °C is beneficial to a long battery life.
- ✓ Store pedelec, on-board computer, battery and charger separately.

4.4.1 Break in operation

Notice

The battery discharges when not in use. This can cause irreparable damage to the battery.

- ▶ The battery must be recharged every 6 months.

The battery may become damaged if it is connected permanently to the charger.

- ▶ Never connect the battery to the charger permanently.

The on-board computer battery discharges when it is not in use. This can cause irreparable damage to it.

- ▶ Recharge the on-board computer battery for at least 1 hour every 3 months.

- ▶ Remove the on-board computer from its mount if the pedelec is not going to be used for up to four weeks. Store the on-board computer away safely in a dry environment at room temperature.
- ▶ If the pedelec is removed from service for longer than four weeks, you need to prepare it for a break in operation.

4.4.1.1 Preparing a break in operation

- ✓ Remove the rechargeable battery from the pedelec.
- ✓ Charge battery to 30%–60%.
- ✓ The pedelec needs to be cleaned with a damp cloth and preserved with wax spray. Never wax the friction surfaces of the brake.
- ✓ Before longer periods without use, it is recommended to have the specialist dealer carry out an inspection and basic cleaning and apply preservative agent.

4.4.1.2 Carrying out a break in operation

- 1 Store the pedelec, battery and charger in a dry, clean environment. We recommend storing them in uninhabited rooms with smoke alarms. Dry locations with an ambient temperature between 10 °C and 20 °C are ideal.
- 2 Recharge the on-board computer battery for at least 1 hour every 3 months.
- 3 Check the battery level after 6 months. If only one LED on the battery level indicator lights up, recharge the battery to between 30% and 60%.



5 Assembly

WARNING

Risk of eye injury

Problems may arise if components are set incorrectly. They may cause serious injuries to the face.

- ▶ Always wear safety glasses to protect eyes when assembling pedelecs.

CAUTION

Crash and crushing hazard caused by unintentional activation

There is a risk of injury if the drive system is activated unintentionally.

- ▶ Remove the battery.

- ✓ Assemble the pedelec in a clean, dry environment.
- ✓ The *work environment* temperature should be between 15 °C and 25 °C.
- ✓ The fitting stand used must be approved for a maximum weight of least 30 kg.

5.1 Unpacking

The packaging material consists mainly of cardboard and plastic film.

- ▶ Dispose of the packaging in accordance with the regulatory requirements (see Section 10).
- ⇒ Pedelecs are fully assembled in the factory for test purposes and then dismantled for transportation. The pedelec is 95% to 98% pre-assembled.

Scope of delivery

| | |
|--------------------------|--|
| <input type="checkbox"/> | 1 pre-assembled pedelec |
| <input type="checkbox"/> | 1 front wheel |
| <input type="checkbox"/> | 2 pedals |
| <input type="checkbox"/> | 2 quick releases (optional) |
| <input type="checkbox"/> | 1 charger |
| <input type="checkbox"/> | 1 set of operating instructions on CD. |
| <input type="checkbox"/> | 1 battery (supplied separately from the pedelec) |

5.2 Required tools

The following tools are required to assemble the pedelec:

| | |
|--|--|
| | Knife |
| | Ring spanners 8 mm, 9 mm, 10 mm, 13 mm, 14 mm and 15 mm |
| | Torque wrench Working range 5–40 Nm |
| | by.Schulz handlebars: TORX® bits: 4 mm, 5 mm and 6 mm If not: Hexagon bits: 4 mm, 5 mm and 6 mm |
| | Hexagon socket spanner 2 mm, 2.5 mm, 3 mm, 4 mm, 5 mm, 6 mm and 8 mm |
| | Spline nut socket T25 |
| | Cross-recess screwdriver |
| | Slotted-head screwdriver |

Table 30: Tools required for assembly



5.3 Commissioning

Only trained specialist staff may perform initial commissioning since initial commissioning of the pedelec requires special tools and specialist knowledge.

Experience has shown that a pedelec which has not yet been sold is automatically handed to customers as soon as it appears ready to ride.

- ▶ It makes sense to prepare each pedelec so that it is fully ready for use immediately after being assembled.
- ▶ The assembly report (see Section [11.2](#)) describes all safety-relevant inspections, tests and maintenance tasks.
- ▶ All assembly work must be completed to ensure the pedelec is ready to ride.
- ▶ Complete an assembly report to document quality assurance (see Section 11.1).

5.3.1 Checking the battery

The battery must be checked before it is charged for the first time.

- ▶ Press the **On-Off button (battery)**.
- ⇒ If none of the LEDs on the battery level indicator light up, the battery may be damaged.
- ⇒ The battery may be fully charged if at least one, but not all, of the LEDs on the battery level indicator is lit up.



5.3.2 Preparing the battery

5.3.2.1 Retrofitting the PowerTube adapter

Only applies to pedelecs with this equipment

A PowerTube Adapter 400 or 500 needs to be retrofitted to use a BOSCH PowerTube 625 battery.

- 1 Use a TORX® T25 wrench to undo the screws in the battery mount.



Figure 47: Undoing screws on battery mount

- 2 Use a ratchet to remove the two 4 mm hexagon screws in the PowerTube adapter. If you don't have a ratchet, you can use a hexagonal key to remove the screws.



Figure 48: Removing the 4 mm hexagon screws

- 3 Use a ratchet to remove the two 4 mm hexagon screws in the PowerTube adapter.

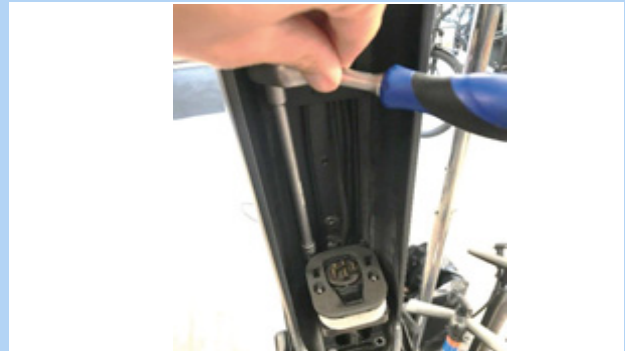


Figure 49: Removing hexagon screws

- 4 Pull out the PowerTube adapter.



Figure 50: Pulling out the PowerTube adapter

- 5 Use adapter plates to adjust the distance if necessary.



Figure 51: Fitted adapter plates



- 6 Use a TORX® T25 wrench to fasten the screws into the battery mount.

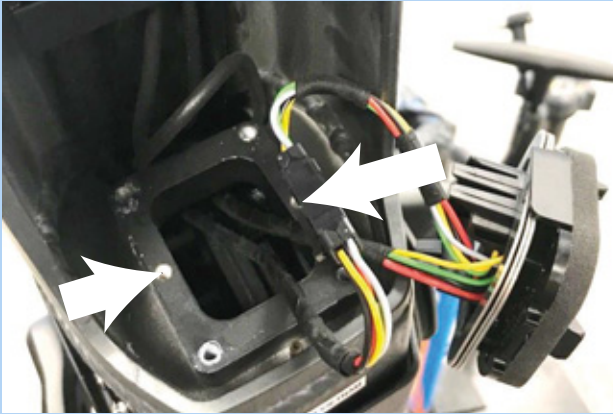


Figure 52: Fastening the battery mount



5.3.2.2 Fit battery cover onto Bosch PowerTube 625 battery (horizontal)

Only applies to pedelecs with this equipment

- 1 Detach the upper interface (lock side) from the BOSCH PowerTube 625 battery with a TORX® T20 wrench.



Figure 53: Detaching the upper interface

- 2 Screw the battery mounting plate to the BOSCH the PowerTube 625 battery with original BOSCH screws (M4 × 8 T20). In doing so, ensure that the removal tab faces the front of the battery.



Figure 54: Fitting the mounting plate

- 3 Press to push the battery cover onto the battery. In doing so, ensure that the battery On-Off switch fits through its designated slot in the cover.

⇒ The battery cover will lock into the fitting grooves on the battery.



Figure 55: Pushing the battery cover onto battery

⇒ The battery can now be inserted into the frame.



5.3.2.3 Fit battery cover onto Bosch PowerTube 500 battery (horizontal)

Only applies to pedelecs with this equipment

- 1 Detach the upper interface (lock side) from the BOSCH PowerTube 625 battery with a TORX® T20 wrench.



Figure 56: Detaching the upper interface

- 2 Fasten the PowerTube extension to the BOSCH PowerTube 500 battery using the two M4 x 8 T20 screws supplied. In doing so, ensure that the closed side faces the front of the battery (towards On-Off switch). The smooth upper surface of the PowerTube extension must face upwards, away from the battery.



Figure 57: Fitting the PowerTube extension

- 3 Screw the battery mounting plate onto the PowerTube extension with original BOSCH screws (M4 × 8 T20). To do so, use the PowerTube extension screw plate as a counter support. When positioning the extension, ensure that the removal tab faces the front of the battery.



Figure 58: Fastening the battery mounting plate

- 4 Press to push the battery cover onto the battery. In doing so, ensure that the battery On-Off switch fits through its designated slot in the cover.

⇒ The battery cover will lock into the fitting grooves on the battery.



Figure 59: Pushing the battery cover onto battery

⇒ The battery can now be inserted into the frame.



5.3.3 Preparing the wheel

There is an arrow on the sides of the tyres with the inscription ROTATION to show the direction of rotation. The inscription says DRIVE on older tyres. The rotation direction arrow indicates the recommended direction of rotation. On road tyres, the direction of rotation is mainly for optical reasons.



Figure 60: Rotation direction arrow

The direction of rotation is much more important on off-road terrain because the tread creates an interlock with the ground. While the rear wheel needs to transmit the drive forces, the front wheel is responsible for transmitting braking and steering forces. Drive and braking forces have different directions of action. This is why some tyres are mounted on the front and rear wheels in opposite directions. On these tyres, there are two rotation direction arrows:

- The FRONT rotation direction arrow indicates the recommended direction of rotation for the front wheel.
- The REAR rotation direction arrow indicates the recommended direction of rotation for the rear wheel.



Figure 61: Rotation direction arrow on MTB tyres

- ▶ The rotation direction arrow must point in the direction of travel when the wheel is placed in the fork.
- ▶ There are also non-directional tyre profiles with no rotation direction arrow.



5.3.4 Installing the wheel in the SUNTOUR fork

Only applies to Suntour forks with this equipment

5.3.4.1 Screw-on axle (12AH2 and 15AH2)

Only applies to Suntour forks with this equipment

✓ Before installing the wheel, ensure that the O-ring is in the right position on the thread piece.

- 1 Insert the front wheel into the fork ends.
- 2 Insert the axle into the hub on the drive side.

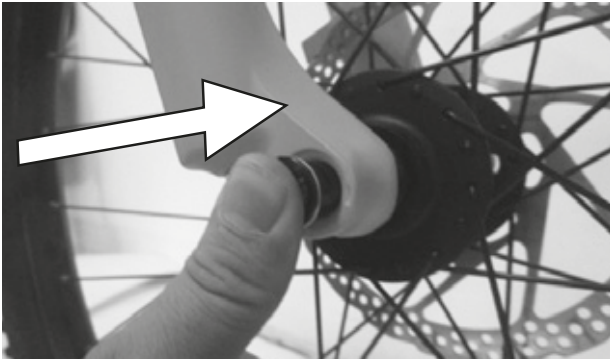


Figure 62: Inserting the axle in the direction of the arrow

- 3 Use a 6 mm hex key to tighten the axle using between 8 and 10 Nm. The axle thread must be visible.



Figure 63: Tighten the axle in the direction of the arrow

- 4 Insert the securing screw on the non-drive side.



Figure 64: Pushing the quick release lever into the axle

- 5 Tighten the securing screw with a 5 mm hex key using between 5 and 6 Nm.



Figure 65: Tightening the securing screw

⇒ The wheel is now fitted.



5.3.4.2 20 mm cross axle

Only applies to Suntour forks with this equipment

CAUTION

Crash caused by loose quick release axle

A faulty or incorrectly installed cross axle may become caught in the brake disc and block the wheel. This will cause a crash.

- ▶ Never fit a defective cross axle.

Crash caused by faulty or incorrectly installed cross axle

The brake disc becomes very hot during operation. Parts of the cross axle may become damaged as a result. The cross axle becomes loose. This will cause a crash with injuries.

- ▶ The cross axle and the brake disc must be opposite one another.

Crash caused by incorrectly set cross axle

Insufficient clamping force will result in unfavourable transmission of force. The suspension fork or the quick release axle may break. This will cause a crash with injuries.

- ▶ Never fasten the cross axle with a tool (e.g. hammer or pliers).

- 1 Insert the cross axle into the hub on the drive side.

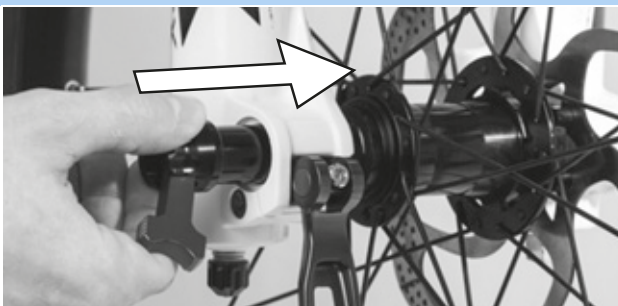


Figure 66: Inserting the cross axle in the direction of the arrow

- 2 Tighten the cross axle with the red handle.

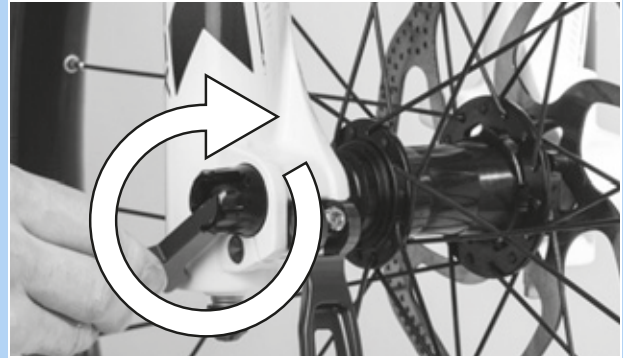


Figure 67: Tighten the axle in the direction of the arrow

- 3 Push red lever into the cross axle.

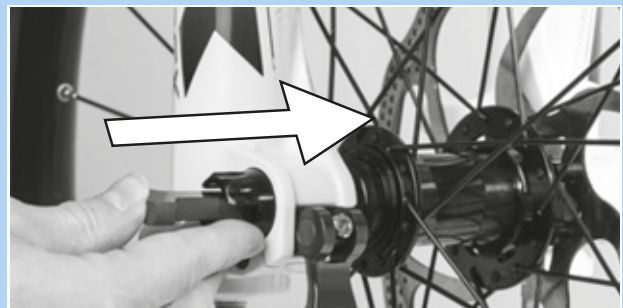


Figure 68: Pushing the red lever in the direction of the arrow

- 4 Closing the quick release lever.



Figure 69: Pressing the quick release lever in the direction of the arrow

⇒ The cross axle is secured.



- 5 Check the position and clamping force of the quick release lever. The quick release lever must be flush with the shock absorber.



Figure 70: Perfect position for the clamping lever

- 6 Use 4 mm hexagon socket spanner to adjust the clamping lever clamping force if required.

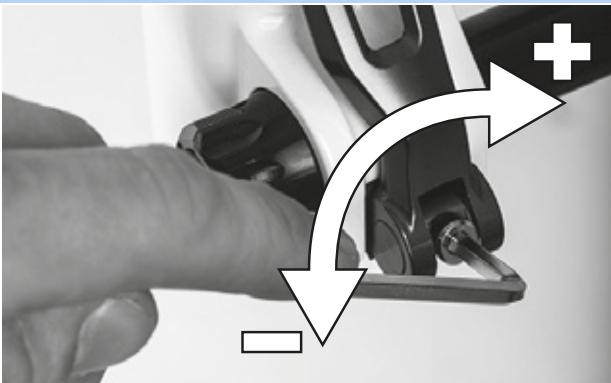


Figure 71: Adjusting the quick release clamping force

- 7 Check the quick release lever position and clamping force.

⇒ The wheel is now fitted.



5.3.4.3 Q-LOC quick release

Only applies to Suntour forks with this equipment

CAUTION

Crash caused by unfastened quick release

A faulty or incorrectly installed quick release may become caught in the brake disc and block the wheel. This will cause a crash.

- ▶ Never fit a defective quick release.

Crash caused by faulty or incorrectly installed quick release

The brake disc becomes very hot during operation. Parts of the quick release may become damaged as a result. The quick release comes loose. This will cause a crash with injuries.

- ▶ The front wheel quick release lever and the brake disc must be situated on opposite sides.

Crash caused by incorrectly set clamping force

Excessively high clamping force will damage the quick release and cause it to lose its function.

Insufficient clamping force will result in unfavourable transmission of force. The suspension fork or the quick release may break. This will cause a crash with injuries.

- ▶ Never fasten a quick release using a tool (e.g. hammer or pliers).
- ▶ Only use the clamping lever with the specified set clamping force.

- ✓ Before installing, ensure that the quick release flange is extended. Open the lever fully.

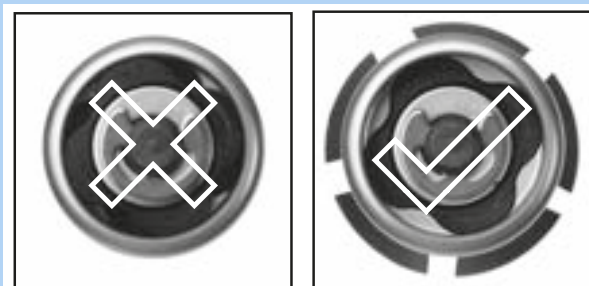


Figure 72: Closed and opened flange

- 1 Push in the quick release until you can hear a click. Make sure that the flange is extended.



Figure 73: Inserting the quick release in the direction of the arrow

- 2 Adjust tensioning with half-open clamping lever until the flange reaches the fork end.

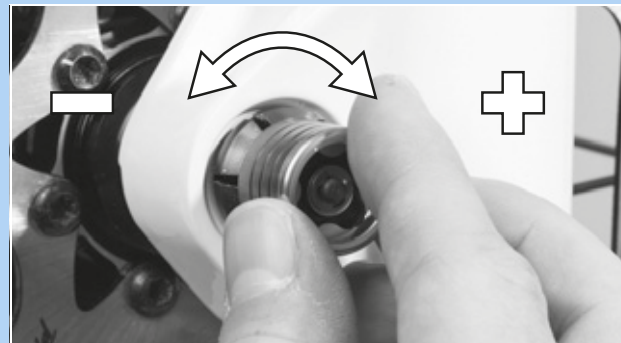


Figure 74: Adjusting the clamping

- 3 Fully close the quick release. Check that it is firmly in place and adjust it on the flange if necessary.



Figure 75: Closing the quick release

⇒ The wheel is now fitted.



5.3.5 Fitting the pedals

The pedals have two different threads to ensure they don't come loose while the rider is pedalling.

- The pedal on the left facing the direction of travel has a left-hand thread and is marked L.
- The pedal on the right facing the direction of travel has a right-hand thread and is marked R.

The mark is either on the top end, the axle or the pedal body.



Figure 76: Example of markings on pedals

- 1 Coat threads in both pedals with waterproof grease.
- 2 Turn the pedal marked L anti-clockwise by hand into the crank arm on the left as seen when facing the direction of travel.



Figure 77: L-pedal in the left-hand crank arm

- 3 Turn the pedal marked R anti-clockwise by hand into the crank arm on the right as seen when facing the direction of travel.



Figure 78: R-pedal in the right-hand crank arm

- 4 Use a 15 mm spanner to fasten the left-hand pedal thread in an anti-clockwise direction and the right-hand pedal in a clockwise direction with a torque between 33 Nm and 35 Nm.



5.3.6 Checking the stem and handlebars

5.3.6.1 Checking the connections

- 1 Stand in front of the pedelec. Clamp the front wheel between your legs. Grasp the handlebar grips.
- 2 Try to twist the handlebars against the direction of the front wheel.
 - ⇒ The stem must not move or twist.
- 3 If the stem can be twisted, check fastening.
 - ⇒ If the stem cannot be fastened, contact your specialist dealer.

5.3.6.2 Checking stem is firmly in position

- 1 Press full body weight on the handlebars.
 - ⇒ The handlebars must not move downwards in the fork.

Stem with clamping lever version I

- 2 If the handlebars should move, increase the lever tension in the clamping lever.
- 3 Turn knurled nut in a clockwise direction with the clamping lever open.
- 4 Close clamping lever and check stem is firmly in position again.
- 5 If the handlebars cannot be fastened, contact your specialist dealer.

Stem with clamping lever version II and stem with screw

- ▶ If the handlebars cannot be fastened, contact your specialist dealer.

5.3.6.3 Checking the headset backlash

- 1 Place the fingers of one hand on the upper headset cup. Pull the front wheel brake with the other hand and try to push the pedelec backwards and forwards.
 - Keep in mind that there may be noticeable backlash due to worn-out bearing bushes or brake lining backlash in suspension forks and disc brakes.
 - ⇒ The headset cup halves must not move towards one another.
- 2 Set bearing clearance as per the stem repair manual as quickly as possible as otherwise the bearing will become damaged. Contact specialist dealer.

5.4 Pedelec sale

- ▶ Complete Pedelec pass on the operating instructions envelope.
- ▶ Note down the manufacturer and the number of the battery key.
- ▶ Adjust the pedelec to the rider; see Section 6.5.
- ▶ Adjust the stand and shifter.
- ▶ Brief operator or rider on all the pedelec's functions (see Section 6.3).

6 Operation

6.1 Risks and hazards

WARNING

Injuries and fatalities caused by blind spots

Other road users, trucks, cars and pedestrians often underestimate the speed of pedelecs. Likewise, other road users frequently do not see pedelecs. This may cause a crash with serious injuries or even death.

- ▶ Wear a helmet. The helmet must have a reflective strip or a light in a clearly visible colour.
- ▶ Clothing should be retroreflective or as light as possible. Fluorescent materials are also suitable. High-visibility jackets and straps on your upper body ensure even greater safety.
- ▶ Always take a defensive approach to riding.
- ▶ Avoid the blind spots of vehicles turning off the road. Reduce speed as a precaution when other road users turn right.

Injuries and death caused by riding incorrectly

A pedelec is not a bicycle. Incorrect riding and underestimated speeds soon result in hazardous situations. This can cause an accident with serious or fatal injuries.

- ▶ Slowly get used to road traffic and speed before riding at speeds over 12 km/h, especially if you have not ridden a bike for some time. Increase the levels of assistance gradually.
- ▶ Practice braking hard on a regular basis.
- ▶ Take and complete a riding safety course.

WARNING

Injuries and death caused by distraction

A lack of concentration while riding increases the risk of an accident. This may cause a crash with serious injuries.

- ▶ Never allow yourself to be distracted by the on-board computer or your mobile phone.
- ▶ Stop the pedelec if you want to make inputs on the on-board computer other than change the level of assistance. Only enter data when stationary.

CAUTION

Crash caused by loose clothing

Shoe laces, scarves and other loose items may become entangled in the spokes on the *wheels* and on the *chain drive*. This may cause a crash with injuries.

- ▶ Wear sturdy footwear and close-fitting clothing.

Crash caused by difficult-to-spot damage

If the pedelec topples over or you have a fall or an accident, there may be difficult-to-spot damage to components such as the brake system, quick releases or frame. This may cause a crash with injuries.

- ▶ Take pedelec out of service. Contact specialist dealer.

 **CAUTION**
Crash caused by material fatigue

Intensive use can cause material fatigue. A component may suddenly fail in case of material fatigue. This may cause a crash with injuries.

- ▶ Remove the pedelec from service immediately if there are any signs of material fatigue. Have your specialist dealer inspect the component.
- ▶ Arrange the mandatory maintenance appointments with your specialist dealer on a regular basis. During maintenance, the specialist dealer will inspect the pedelec for any signs of material fatigue on the frame, fork, suspension element mountings (if there are any) and components made of composite materials.

Carbon becomes brittle when exposed to heat radiation such as heating. This can cause the carbon part to break and result in a crash with injuries.

- ▶ Never expose carbon parts on the pedelec to strong sources of heat.

Crash caused by poor road conditions

Loose objects, such as branches and twigs, may become caught in the wheels and cause a crash with injuries.

- ▶ Be aware of the road conditions.
- ▶ Ride slowly and brake in good time.

The *tyres* may slip on wet roads. In wet conditions you must also expect a longer braking distance. The braking sensation differs from the usual sensation. This can cause loss of control or a crash, which may result in injuries.

- ▶ Ride slowly and brake in good time when it is raining.

 **CAUTION**
Crash caused by soiling

Heavy soiling can impair pedelec functions, such as braking. This may cause a crash with injuries.

- ▶ Remove coarse soiling before riding.

Notice

Heat or direct sunlight can cause the *tyre pressure* to increase above the permitted maximum pressure. This can destroy the *tyres*.

- ▶ Never park the pedelec in the sun.
- ▶ On hot days, regularly check the *tyre pressure* and adjust it as necessary.

When riding downhill, high speeds may be reached. The pedelec is only designed to exceed a speed of 25 km/h for short intervals. The *tyres* in particular can fail if exposed to a continuous load.

- ▶ Use the brakes to decelerate the pedelec if you reach speeds greater than 25 km/h.

Moisture penetrating at low temperatures may impair individual functions due to the open structural design.

- ▶ Always keep the pedelec dry and free from frost.
- ▶ If the pedelec is used at temperatures below 3 °C, the specialist dealer must perform an inspection beforehand and prepared it for winter use.

Off-road riding subjects the joints in the arms to severe strain. Take a break from riding every 30 to 90 minutes, depending on the road surface and your physical fitness.

6.2 Tips for a greater range

The pedelec's range depends on many influencing factors. A single battery charge may only last fewer than 20 kilometres but much more than 100 is also possible. There are a few tips which will generally help you maximize range.

Suspension elements

- ▶ Only open suspension fork and damper when necessary on terrain or gravel paths. Block suspension fork and damper on tarmacked roads or on hills.

Mileage

The more own physical effort the rider makes, the greater the attainable range is.

- ▶ Shift down 1 to 2 gears to increase the induced power and pedalling frequency.

Pedalling frequency

- ▶ Ride using pedalling frequencies of over 50 revolutions per minute. This optimises the electric drive's efficiency.
- ▶ Avoid pedalling very slowly.

Weight

- ▶ Minimise the total weight of pedelec and baggage.

Stopping and starting

- ▶ Ride long distances at a constant speed.
- ▶ Avoid stopping and starting frequently.

Level of assistance

- ▶ The higher the selected levels of assistance are, the shorter the range is.

Gear shift

- ▶ Use a low gear and a low level of assistance on hills and when setting off.
- ▶ Switch up a gear depending on the speed and terrain.
- ▶ 50-80 crank rotations are optimal.
- ▶ Avoid high stress loads on the crank during a gear change.
- ▶ Switch gear back in good time, e.g. before inclines.

Tyres

- ▶ Always select the right tyres for the surface type. As a general rule, narrower treads move along more easily than heavier ones. Long studs and large grooves usually have an unfavourable effect on energy consumption.
- ▶ When riding on asphalt, it is important to always use the maximum permitted tyre pressure.
- ▶ When riding off-road on gravel tracks or soft woodland or meadow soils, it is important to remember the lower the tyre pressure is, the greater the rolling resistance is and thus the greater electric drive system energy consumption is.

Rechargeable battery

Electrical resistance increases as the temperature drops. Battery performance is reduced. As a result, you should expect the range to be shorter than normal in winter.

- ▶ Use a thermal protection sleeve on the battery in winter.

The range also depends on the battery's age, charge level and state of repair.

- ▶ Maintain the battery and replace older batteries where necessary.

6.3 Error message

6.3.1 On-board computer

The drive system monitors itself continuously and displays a number as an error message if a known error is detected. The system may switch off automatically depending on the type of error.

| Code | Description | Method of resolution |
|------|--|---|
| 410 | One or more on-board computer buttons are blocked | <ul style="list-style-type: none"> ▶ Check whether buttons are jammed because dirt has accumulated between them, for example. ▶ Clean buttons if necessary. |
| 414 | Connection problem with the control panel | <ul style="list-style-type: none"> ▶ Contact your specialist dealer. Have ports and connections checked. |
| 418 | One or more buttons on the control panel are blocked | <ul style="list-style-type: none"> ▶ Check whether buttons are jammed because dirt has accumulated between them, for example. ▶ Clean buttons if necessary. |
| 419 | Configuration error | <ol style="list-style-type: none"> 1 Re-start the system. 2 Contact your specialist dealer if the problem persists. |
| 422 | Battery connection problem | <ul style="list-style-type: none"> ▶ Have ports and connections checked. |
| 423 | Battery connection problem | <ul style="list-style-type: none"> ▶ Have ports and connections checked. |
| 424 | Communication error with components communicating with one another | <ul style="list-style-type: none"> ▶ Have ports and connections checked. |
| 426 | Internal time-out error | <p>It is not possible to display or adjust the tyre size in the basic settings menu in this error status.</p> <ol style="list-style-type: none"> 1 Re-start the system. 2 Contact your specialist dealer if the problem persists. |
| 430 | On-board computer battery flat | <ul style="list-style-type: none"> ▶ Recharge on-board computer battery (while in its mount or using USB port). |
| 431 | Software version error | <ol style="list-style-type: none"> 1 Re-start the system. 2 Contact your specialist dealer if the problem persists. |

Table 31: List of on-board computer error messages

| Code | Description | Method of resolution |
|------|------------------------------------|---|
| 440 | Battery internal error | <ol style="list-style-type: none"> 1 Re-start the system. 2 Contact your specialist dealer if the problem persists. |
| 450 | Internal software error | <ol style="list-style-type: none"> 1 Re-start the system. 2 Contact your specialist dealer if the problem persists. |
| 460 | Error in USB port | <ol style="list-style-type: none"> 1 Re-start the system. 2 Contact your specialist dealer if the problem persists. |
| 490 | On-board computer internal error | <ul style="list-style-type: none"> ▶ Have on-board computer checked. |
| 500 | Battery internal error | <ol style="list-style-type: none"> 1 Re-start the system. 2 Contact your specialist dealer if the problem persists. |
| 502 | Fault in the lighting | <ol style="list-style-type: none"> 1 Check the light and its cabling. 2 Re-start the system. 3 Contact your specialist dealer if the problem persists. |
| 503 | Speed sensor error | <ol style="list-style-type: none"> 1 Re-start the system. 2 Contact your specialist dealer if the problem persists. |
| 504 | Speed signal manipulation detected | <ul style="list-style-type: none"> ▶ Check position of spike magnets and re-adjust if necessary. ▶ Check for manipulation. ▶ Assistance from drive has been reduced. |
| 503 | Speed sensor error | <ol style="list-style-type: none"> 1 Re-start the system. 2 Contact your specialist dealer if the problem persists. |
| 510 | Internal sensor error | <ol style="list-style-type: none"> 1 Re-start the system. 2 Contact your specialist dealer if the problem persists. |
| 511 | Battery internal error | <ol style="list-style-type: none"> 1 Re-start the system. 2 Contact your specialist dealer if the problem persists. |

Table 31: List of on-board computer error messages

| Code | Description | Method of resolution |
|------|--|--|
| 530 | Battery error | <ol style="list-style-type: none"> 1 Switch off system. 2 Remove the battery. 3 Re-insert battery. 4 Restart electric drive system. 5 Contact your specialist dealer if the problem persists. |
| 531 | Configuration error | <ol style="list-style-type: none"> 1 Re-start the system. 2 Contact your specialist dealer if the problem persists. |
| 540 | Temperature error The pedelec is outside the permitted temperature range. | <ol style="list-style-type: none"> 1 Switch off the system to cool the motor and battery down or warm them to the permitted temperature range. 2 Re-start the system. 3 Contact your specialist dealer if the problem persists. |
| 550 | An inadmissible electrical load has been detected | <ol style="list-style-type: none"> 1 Remove consumer. 2 Re-start the system. 3 Contact your specialist dealer if the problem persists. |
| 580 | Software version error | <ol style="list-style-type: none"> 1 Re-start the system. 2 Contact your specialist dealer if the problem persists. |
| 591 | Authentication error | <ol style="list-style-type: none"> 1 Switch off system. 2 Remove the battery. 3 Re-insert battery. 4 Re-start the system. 5 Contact your specialist dealer if the problem persists. |
| 592 | Incompatible component | <ol style="list-style-type: none"> 1 Insert compatible on-board computer. 2 Re-start the system. 3 Contact your specialist dealer if the problem persists. |
| 593 | Configuration error | <ol style="list-style-type: none"> 1 Re-start the system. 2 Contact your specialist dealer if the problem persists. |

Table 31: List of on-board computer error messages

| Code | Description | Method of resolution |
|----------|--|--|
| 595, 596 | Communication error | <ol style="list-style-type: none"> 1 Check cabling to the gears. 2 Re-start the system. 3 Contact your specialist dealer if the problem persists. |
| 602 | Internal error during charging | <ol style="list-style-type: none"> 1 Disconnect charger from battery. 2 Re-start the system. 3 Connect charger to the battery. 4 Contact your specialist dealer if the problem persists. |
| 602 | Internal fault | <ol style="list-style-type: none"> 1 Re-start the system. 2 Contact your specialist dealer if the problem persists. |
| 603 | Internal fault | <ol style="list-style-type: none"> 1 Re-start the system. 2 Contact your specialist dealer if the problem persists. |
| 605 | Temperature error The pedelec is outside the permitted temperature range. | <ol style="list-style-type: none"> 1 Switch off the system to cool the motor and battery down or warm them to the permitted temperature range. 2 Re-start the system. 3 Contact your specialist dealer if the problem persists. |
| 605 | Temperature error during the charging process | <ol style="list-style-type: none"> 1 Disconnect charger from battery. 2 Leave battery to cool down. 3 Contact your specialist dealer if the problem persists. |
| 606 | External fault | <ol style="list-style-type: none"> 1 Check cabling. 2 Re-start the system. 3 Contact your specialist dealer if the problem persists. |
| 610 | Voltage error | <ol style="list-style-type: none"> 1 Re-start the system. 2 Contact your specialist dealer if the problem persists. |
| 620 | Charger error | <ol style="list-style-type: none"> 1 Replace charger. 2 Contact your specialist dealer if the problem persists. |

Table 31: List of on-board computer error messages

| Code | Description | Method of resolution |
|-----------------------|---|--|
| 640 | Internal fault | <ol style="list-style-type: none"> 1 Re-start the system. 2 Contact your specialist dealer if the problem persists. |
| 655 | Multiple battery error | <ol style="list-style-type: none"> 1 Switch off system. 2 Remove the battery. 3 Re-insert battery. 4 Re-start the system. 5 Contact your specialist dealer if the problem persists. |
| 656 | Software version error | ▶ Contact your specialist dealer to install a software update. |
| 7xx | Gear error | ▶ Observe the gear shift manufacturer's operating instructions. |
| 800 | Internal ABS error | ▶ Contact your specialist dealer. |
| 810 | Implausible signals from the wheel speed sensor | ▶ Contact your specialist dealer. |
| 820 | Error in the line to the front wheel speed sensor | ▶ Contact your specialist dealer. |
| 821... 826 | Implausible signals from the front wheel speed sensor. Sensor disc is possibly missing, defective or incorrectly installed; significantly different tyre diameter between the front wheel and rear wheel; extreme riding situation, such as riding on the rear wheel only | <ol style="list-style-type: none"> 1 Re-start the system. 2 Take a test ride of at least two minutes. The ABS indicator lamp must go out. 3 Contact your specialist dealer if the problem persists. |
| 830 | Error in the line to the rear wheel speed sensor | ▶ Contact your specialist dealer. |
| 831 833 ... 835 | Implausible signals from the rear wheel speed sensor. Sensor disc may be missing. It is defective or incorrectly installed; significantly different tyre diameter between the front wheel and rear wheel; extreme riding, such as riding on the rear wheel only | <ol style="list-style-type: none"> 1 Re-start the system. 2 Take a test ride of at least two minutes. The ABS indicator lamp must go out. 3 Contact your specialist dealer if the problem persists. |
| 840 | Internal ABS error | ▶ Contact your specialist dealer. |
| 850 | Internal ABS error | ▶ Contact your specialist dealer. |

| Code | Description | Method of resolution |
|---------------------------------------|--|---|
| 860, 861 | Error in the power supply | <ol style="list-style-type: none"> 1 Re-start the system. 2 Contact your specialist dealer if the problem persists. |
| 870, 871, 880 883 ... 885 | Communication error | <ol style="list-style-type: none"> 1 Re-start the system. 2 Contact your specialist dealer if the problem persists. |
| 889 | Internal ABS error | ▶ Contact your specialist dealer. |
| 890 | ABS indicator lamp is defective or missing; ABS possibly not functioning | ▶ Contact your specialist dealer. |
| No displays | On-board computer internal error | ▶ Re-start the drive system by switching it on and off. |

Table 31: List of on-board computer error messages

Table 31: List of on-board computer error messages

6.3.2 Rechargeable battery

The battery is protected against deep discharge, overcharging, overheating and short circuits by Electronic Cell Protection (ECP). In the event of a hazard, a protective circuit switches the battery off automatically. If a fault is detected in the battery, the LEDs flash on the battery level indicator.





| Description | Method of resolution |
|---|---|
| Code:  | |
| If the battery is outside its charging temperature range, three LEDs will flash on the battery level indicator. | <ol style="list-style-type: none"> 1 Disconnect charger from battery. 2 Leave battery to cool down. 3 Contact your specialist dealer if the problem persists. |
| Code:  | |
| If a fault is detected in the battery, two LEDs flash on the battery level indicator. | <p>► Contact your specialist dealer.</p> |
| Code:  | |
| No LEDs will flash if the charger is defective and will not charge. One or more LEDs will light up permanently, depending on the battery level. | <p>► Contact your specialist dealer.</p> |
| Code:  | |
| No LEDs will light up if there is no power. | <ol style="list-style-type: none"> 1 Check all plug connections. 2 Check contacts on the battery for dirt. Clean the contacts carefully if needed. 3 Contact your specialist dealer if the problem persists. |

Table 32: List of battery error messages

6.4 Instruction and customer service

The supplying specialist dealer will provide customer service. Contact details can be found on the pedevec pass for these operating instructions. The specialist dealer will explain all the pedevec functions to the new owner in person, this being when the specialist dealer hands over the pedevec at the latest. These operating instructions are provided with every pedevec, so that the rider can consult them at a later stage.

The supplying specialist dealer will also perform all maintenance, modifications and repairs in the future.

6.5 Adjusting the pedevec



Crash caused by incorrectly adjusted torques

If a screw is fastened too tightly, it may break. If a screw is not fastened enough, it may loosen. This will cause a crash with injuries.

- ▶ Always observe the indicated torques on the screw and in the operating instructions.

Only a correctly adjusted pedevec will guarantee the desired ride comfort and health-promoting activity.

All settings must be re-configured if the body weight or maximum baggage weight changes.

6.5.1 Preparing

The following tools are required to adjust the pedevec:









| | |
|---|--|
|  | Tape measure |
|  | Scales |
|  | Spirit level |
|  | Ring spanners 8 mm, 9 mm, 10 mm, 13 mm, 14 mm and 15 mm |
|  | Torque wrench Working range 5–40 Nm |
|  | Hex key 2 mm, 2.5 mm, 3 mm, 4 mm, 5 mm, 6 mm and 8 mm |
|  | Cross-recess screwdriver |
|  | Slotted-head screwdriver |

 Table 33: Tools required for assembly

6.5.2 Pedelec adjustment procedure

► Observe the correct order for adjustment.

| Sequence | Adjustment | Section | For pedelecs with components only | | | | |
|----------|--|-------------------------|-----------------------------------|-------------------|-----------------|-------------------|-----------|
| | | | Rhomboid seat post | Ergonomic handles | Suspension fork | Rear frame damper | Headlight |
| 1.1 | Saddle <ul style="list-style-type: none"> • Straighten saddle • Adjust saddle height • Adjust saddle position • Adjust saddle tilt | 6.5.4.1 | | | | | |
| 1.2 | | 6.5.4.2 | | | | | |
| 1.3 | | 6.5.4.4 | | | | | |
| 1.4 | | 6.5.4.5 | | | | | |
| 2 | Handlebars | 6.5.5 | | | | | |
| 3 | Stem | 6.5.6 | | | | | |
| 4 | Handles | 6.5.7 | | x | | | |
| 5 | Tyres | 6.5.8 | | | | | |
| 6.1 | Brake <ul style="list-style-type: none"> • Position of the brake handles • Brake handle tilt angle • Determine grip distance • Adjust the grip distance • Pressure point • Retract the brake linings | 6.5.9.1 | | | | | |
| 6.2 | | 6.5.9.2 | | | | | |
| 6.3 | | 6.5.9.3 | | | | | |
| 6.4 | | 6.5.9.4 | | | | | |
| 6.5 | | 6.5.9.4 | 6.5.9.4 | | | | |
| 7 | Adjust suspension - adjust suspension fork sag | 6.5.11 | | | x | | |
| | - Adjust suspension fork rebound damper | 6.5.12 | | | x | | |
| 8 | Light | 6.5.13 | | | | | x |
| 9 | Adjust on-board computer | 6.5.14 | | | | | |

Table 34: Adjusting the pedelec

6.5.3 Determining the sitting position

The starting point for a comfortable posture is the correct position of the pelvis. If the pelvis is in the wrong position, it can cause different types of pain, e.g. in the shoulder or back.

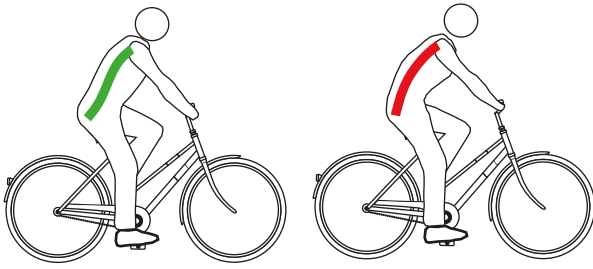


Figure 79: The pelvis is in the right position (green) or incorrect position (red)

The pelvis is in the right position if the spine forms an S-shape and a natural, easy arch.

The pelvis is positioned incorrectly if it tilts slightly backwards. As a result, the spine becomes curved and can no longer deflect to an optimal extent.

A suitable sitting position must be selected beforehand depending on the pedelec type, physical fitness and desired trip distance or speed.

It is especially advisable to check and optimise the sitting position once more before longer rides.


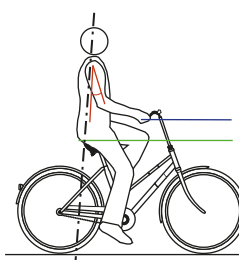
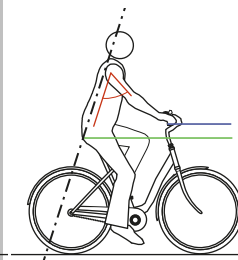
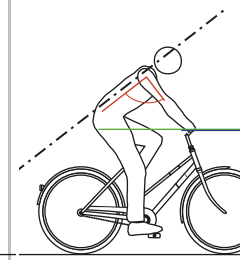
| | Position on roadster | Position on city bike | Position on trekking bike | Position on sports bike |
|---|--|---|---|--|
| |  |  |  |  |
| Angle of upper body (black dashed line) | Upright, almost vertical posture, back at an angle of almost 90°. Handlebars and handles are very close to the upper body. | Slightly inclined upper body, back at an angle of 60°–70°. | Considerably inclined upper body, back at an angle of 30°–60°. Greater distance between handlebars and saddle. | Sharply inclined upper body, back at an angle of 15°–30°. Saddle higher than the handlebars. |
| Angle between upper arm & upper body (red line) | Extremely acute angle at around 20°. The upper arms are almost parallel to the upper body. The hands are simply placed loosely on the handlebars. | An angle of 75°–80° is optimum. Many people prefer a smaller angle of up to 60° as it requires less effort to support the shoulders, arms and hands. | An angle of 90° is optimum. The muscular support required in the arms, back and shoulder girdle is reduced at 90°. | Above 90°. Shoulders, arms and hands need to provide a great deal of support, the supporting muscles in the back are heavily strained and the load on the bearing surface shifts to the front. |
| Saddle-handlebar height difference (blue and green line) | >10 The handlebars are positioned far higher than the saddle. | 10..5 The handlebars are positioned higher than the saddle. | 5..0 Handlebars and saddle are almost at the same height. | <0 The saddle is positioned far higher than the handlebars. |
| Benefits | The spine is intuitively moved into its natural S-shape. The strain on arms and hands is very slight – no effort required to support. | The upright position provides a good over-view in traffic. Force can be applied to the pedals when pedalling without using much energy. | Shoulders, neck and hands provide more of the support effort, thus promoting a dynamic, agile riding style. Impact is reduced on the back, spine and buttocks, which is particularly important on longer rides. The whole body can apply force to the pedals effectively. | Optimum power transmission. Aerodynamic: low air resistance. |
| Disadvantages | Force is applied relatively inefficiently to the pedals. Weight rests exclusively on the buttocks. The spine slumps after a short time for many people (pelvic straightening). | The arms are often stretched through to the high handlebars – this leads to tense shoulders and painful hands. The spine tends to slump quickly due to the “high position”. | There is greater strain on the hands, neck and shoulders. The muscular system needs to be trained for this higher strain, i.e. riders should practise. | Requires highly trained muscles in back, legs, shoulders, abdomen! Comfortable position only for people who are fit. |
| Fitness level and use | Low fitness level, occasional cyclists | Medium fitness level, city cyclists | Medium to high fitness level, riding long distances | Speed-oriented, sports cycling |
| Suitable pedelec types | City bike Folding bike | City bike Cargo bike | Trekking bike | Mountain bike Racing bicycle |

Table 35: Overview of sitting positions

6.5.4 Adjusting the saddle

6.5.4.1 Straightening the saddle

- Position saddle in direction of travel. In doing so, align the tip of the saddle with the top tube.

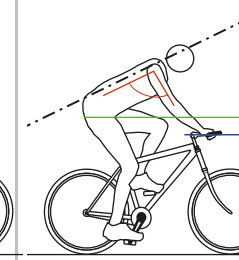

Figure 80: Positioning the saddle in direction of travel

Positioning the saddle with eightpins suspension seat post

Only applies to pedelecs with this equipment

- 1 Position saddle in direction of travel. In doing so, align the tip of the saddle with the top tube.
- 2 Use a torque wrench to tighten the seat post axle with 8 Nm.



Figure 81: Tightening the seat post axle

6.5.4.2 Adjusting the saddle height

- ✓ To adjust the saddle height safely, either:
 - Push the pedelec near to a wall so that the rider can lean on the wall to support themselves or
 - Ask another person to hold the pedelec.
- 1 Use the seat height formula to roughly set the saddle height:
Seat height (SH) = inner leg length (I) \times 0.9
 - 2 Climb onto the bicycle.
 - 3 Place your heel on the pedal and extend your leg, so that the pedal is at the lowest crank rotation point. Your knee should now be fully extended.

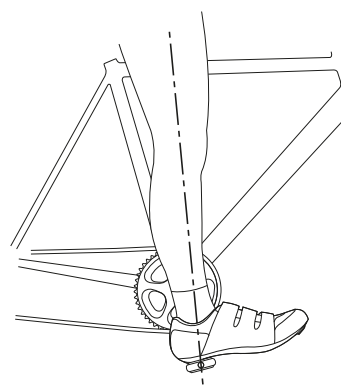


Figure 82: Heel method

- 4 Take a test ride.
 - ⇒ Riders should sit straight on the saddle at an optimal saddle height.
 - If the pelvis moves to the left and right as you pedal, the saddle is too high.
 - If your knees are painful after a few kilometres, the saddle is too low.
 - ⇒ Position the seat post according to needs if necessary. Adjust the seat height with the quick release.

- 5 Open the quick release on the seat post to change the seat height (1). To do so, push the clamping lever away from the seat post (3).

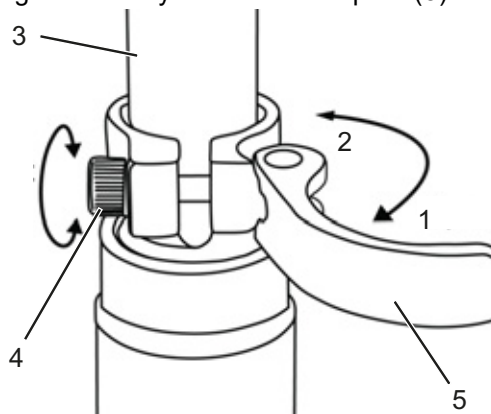


Figure 83: Opening the seat post quick release

- 6 Set the seat post to the required height.



Crash caused by an excessively high seat post setting

A seat post which is set too high will cause the seat post or the frame to break. This will cause a crash with injuries.

- ▶ Do not pull the seat post out of the frame beyond the minimum insertion depth marking.

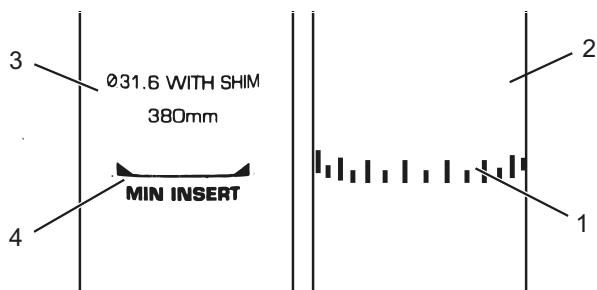


Figure 84: Detailed view of the seat post – examples of the minimum insertion depth marking

- 7 To close it, push the seat post clamping lever as far as it will go into the seat post (2).
- 8 Check the clamping force of the quick releases.

6.5.4.3 Setting the saddle height with the remote control

Use the seat height formula to set the saddle height:

$$\text{Seat height (SH)} = \text{inner leg length (I)} \times 0.9$$

Notice

If you are unable to achieve the required saddle height, the seat post must be lowered further into the seat tube. The seat post Bowden cable must be tightened in the frame up to the remote control to the same length as the seat post was lowered. If this is not possible, contact your specialist dealer.

Lowering the saddle

- 1 Sit on the saddle.
- 2 Press the remote control operating lever.
 - ⇒ The seat post will lower.
- 3 Release the remote control operating lever when you have reached the desired height.

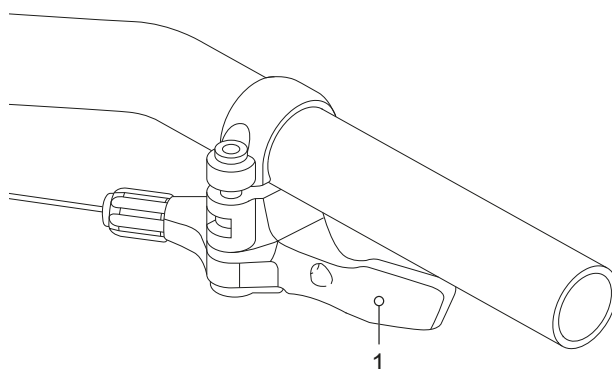


Figure 85: Remote control operating lever (1)

Raising the saddle

- 1 Remove any pressure from the saddle.
- 2 Press the remote control operating lever.
 - ⇒ The seat post will rise.
- 3 Release the remote control operating lever when you have reached the desired height.

6.5.4.4 Adjusting the saddle position

The saddle can be shifted on the saddle frame. The right horizontal position ensures an optimal leverage position for legs. This prevents knee pain and painful incorrect pelvis positions. If you have displaced the saddle more than 10 mm, you need to adjust the saddle height again since both settings affect one another.

- ✓ The saddle setting must only be made when the bicycle is stationary.
- ✓ To set the saddle position, either:
 - Push the pedelec near to a wall so that the rider can lean on the wall to support themselves or
 - Ask another person to hold the pedelec.
- ✓ Move the saddle within its permitted displacement range only (marked on the saddle stay).

1 Climb onto the pedelec.

2 Place the pedals into the vertical position with your feet.

⇒ Riders are adopting the optimal saddle position if the perpendicular line from the kneecap runs through the pedal axle.

- ▶ If the perpendicular line crosses behind the pedal, bring the saddle further forward.
- ▶ If the perpendicular line crosses in front of the pedal, bring the saddle further back.

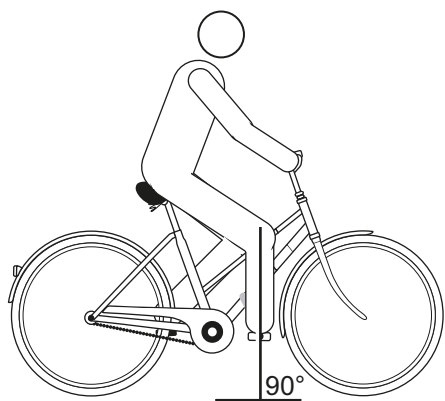


Figure 86: Knee cap perpendicular line

- 3 Unfasten and adjust the designated screw connections, and clamp them with the maximum tightening torque for the saddle clamping screws.

6.5.4.5 Adjusting the saddle tilt

The saddle tilt must be adjusted to the seat height, the saddle and handlebar position, and the saddle shape to ensure an optimum fit. The seating position can be optimised in this way if needed.

The saddle placed in a horizontal position prevents the rider from slipping backwards or forwards. This avoids seat problems. In any other position, the tip of the saddle may press uncomfortably into the crotch area. It is also recommended that the centre of the saddle is exactly straight. This ensures that the rider is seated with their sit bones on the wide rear part of the saddle.

1 Adjust the saddle tilt to horizontal.

2 Position saddle middle so that it is completely straight.

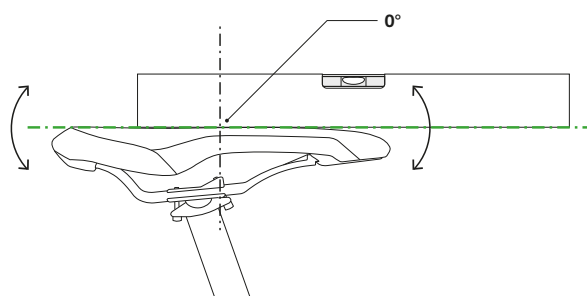


Figure 87: Horizontal saddle tilt with 0° tilt in the centre of the saddle

⇒ Riders sit comfortably on the saddle and do not slip backwards or forwards.

- 3 If the rider tends to slip forwards or sit on the narrow part of the saddle, adjust the seat position (see Section 6.6.2.3) or tilt the saddle very slightly backwards.

6.5.4.6 Checking saddle stability

- ▶ Check saddle stability after adjusting it; see Section 7.5.6.

6.5.5 Handlebars

- ▶ Check handlebar width and hand position.
- ▶ Choose different handlebars if necessary. Contact specialist dealer.

6.5.5.1 Handlebar width

The handlebar width should be as wide as the rider's shoulders as a minimum. This is measured from mid-point to mid-point on the hand contact surfaces.

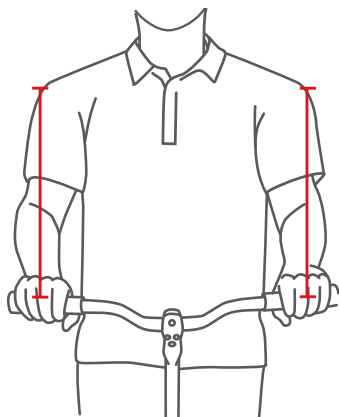


Figure 88: Determining the optimal handlebar width

The wider the handlebars are, the more control they provide, although wide handlebars require greater supporting force. Wider handlebars are particularly useful to ensure a safer ride for loaded touring bikes.

6.5.5.2 Hand position

The hand is in an optimal position on the handlebars when the forearm and hand are in a straight line, i.e. the wrist is not bent. In this way, the nerves are not pinched and do not cause pain.

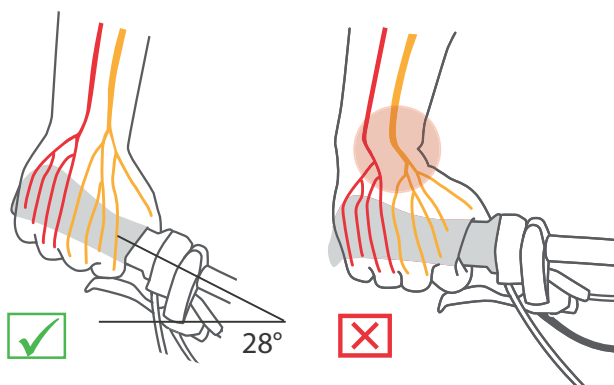


Figure 89: Distribution of nerves with curved and straight handlebars

The narrower the shoulders are, the greater the bend of the handlebars should be (maximum 28°).

Straight handlebars are advisable for sports bikes (e.g. MTB). They support direct steering behaviour, but lead to peaks in pressure and greater muscular strain on the arm and shoulder muscles.

6.5.5.3 Adjusting the handlebars

The handlebars and their position determine the posture that the rider adopts on the pedelec.

- 1 After selecting the seating position (see Section 6.6.2.1), determine the angle of the upper body and of the upper arm.
- 2 Pre-tension the back muscles when adjusting the handlebars. The only way to stabilise the spine and protect it from excessive strain is with the back and abdominal muscles pre-tensioned. Passive muscles are not able to perform this important task.
- 3 Set the required handlebar position by adjusting the stem height and angle (see Section 6.6.6).
- 4 After adjusting the handlebars, check the saddle height and seat position again. The position of the pelvis on the saddle may have changed when the handlebars were adjusted. This can have considerable impact on the position of the hip joint due to the pelvis tilting and may change the usable leg length on the saddle support by up to 3 cm.
- 5 Correct the saddle height and sitting posture if necessary.

6.5.6 Stem

6.5.6.1 Adjusting the handlebar height with quick release

Only applies to pedelecs with this equipment

- 1 Open the stem clamping lever.

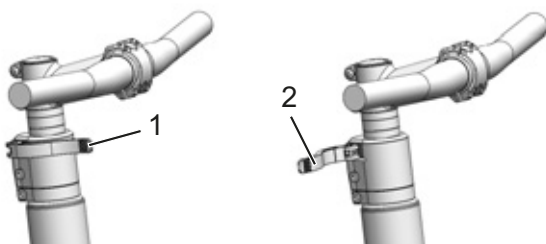


Figure 90: Open (2) and closed (1) stem clamping lever; All Up used as an example

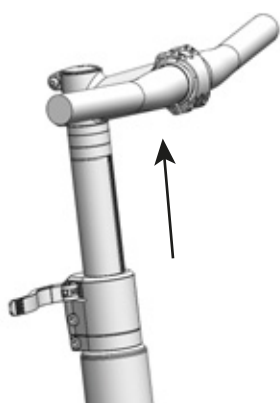


Figure 91: Pulling the locking lever upwards; All Up used as an example

- 2 Pull out the handlebars to the required height. Observe minimum insertion depth.
- 3 Close the stem clamping lever.

Adjusting the quick release clamping force



Crash caused by incorrectly set clamping force

Applying excessive clamping force damages the quick release. Insufficient clamping force will result in unfavourable transmission of force. This can cause components to break. This will cause a crash with injuries.

- ▶ Never fasten a quick release using a tool (e.g. hammer or pliers).

If the *handlebar clamping lever* stops before reaching its end position, unscrew the *knurled nut*.

- ▶ Tighten the *knurled nut* on the seat post if the *seat post clamping lever's* clamping force is not effective enough.
- ▶ Contact your specialist dealer if the clamping force cannot be set.

6.5.6.2 Setting the quill stem

Only applies to pedelecs with this equipment

In the case of a quill stem, the stem and fork steerer form a permanently interconnected component, which is clamped in the fork steerer. The stem and shaft must be replaced together.

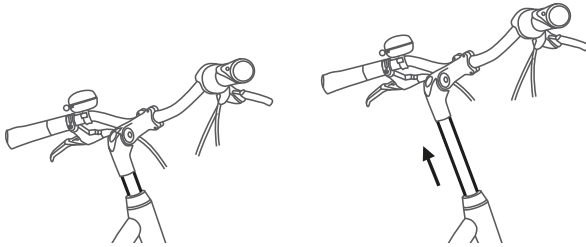


Figure 92: Adjusting the quill stem height

- 1 Undo screw.
- 2 Pull quill stem out.
- 3 Tighten screw.

6.5.6.3 Adjusting the Ahead stem

Only applies to pedelecs with this equipment

In the case of an Ahead stem, the stem is placed directly on the fork steerer, which protrudes over the frame.

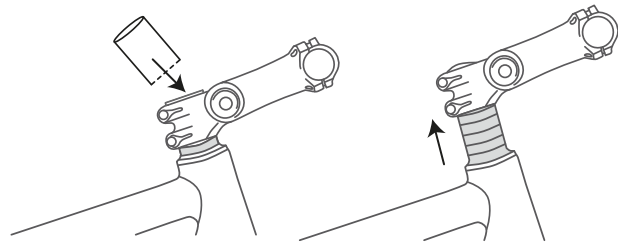


Figure 93: Raising the Ahead stem by fitting spacer rings

The handlebar height is adjusted once during production using spacer rings. The part of the fork steerer protruding is then cut off. The handlebar stem can then no longer be raised.

6.5.6.4 Adjusting the angle-adjustable stem

Only applies to pedelecs with this equipment

Angle-adjustable stems are available in different lengths for quill and Ahead stems.

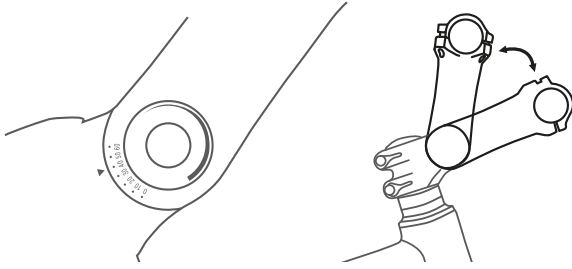


Figure 94: Different versions of angle-adjustable stems

Adjusting the stem angle (c) changes both the distance from the upper body to the handlebars (b) and the handlebar height (a).

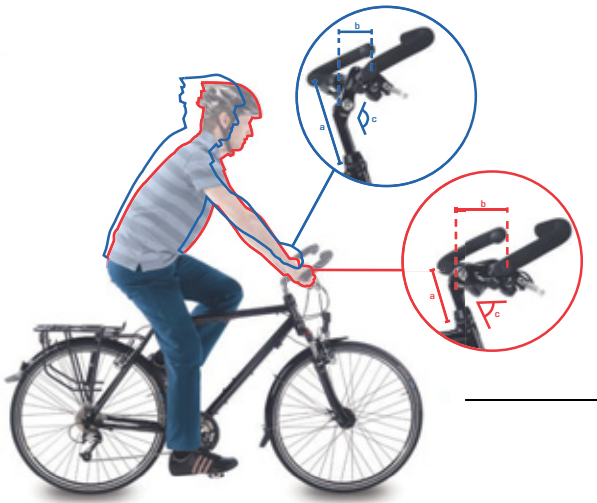


Figure 95: City bike (blue) and trekking bike position (red) by changing the angle

6.5.7 Ergonomic handles

In the case of ergonomically shaped handles, the palm rests on the anatomically shaped handle. A greater contact surface means that the pressure is more evenly distributed. Nerves and vessels are no longer squeezed in the carpal tunnel.

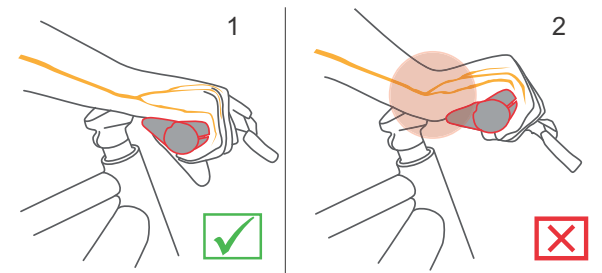


Figure 96: Correct (1) and incorrect (2) position of the handle

- 1 Undo the handle screw.
- 2 Turn handle into the right position.
- 3 Tighten the screw.

6.5.7.1 Checking handlebar stability

► See [Section 7.5.5](#).

6.5.8 Tyres

It is not possible to offer a general recommended tyre pressure for a particular pedelec or tyre. The correct tyre pressure largely depends on the weight load on the tyres, mainly determined by body weight and baggage.

Unlike cars, the weight of the vehicle has only a small impact on the total weight. Moreover, the personal preferences for low rolling resistance or a high degree of suspension comfort vary a great deal. It is important to remember that

- the higher the tyre pressure is, the lower the wear, rolling resistance and the risk of breakdown are.
- The lower the pressure in the tyre is, the greater the comfort and grip that the tyre offers is.

In the case of pedelecs used on the road, the rule is the greater the tyre pressure is, the lower the tyre rolling resistance is. The risk of breakdown is also lower when the pressure is high.

A permanently excessively low tyre pressure often leads to premature wear in the tyre. Cracking in the side wall is a typical consequence of very low tyre pressure. Abrasion is also unnecessarily high.

On the other hand, a tyre can absorb road impacts more effectively at a low pressure.

As a general rule, wide tyres are operated at a lower tyre pressure. They provide the option of exploiting the advantages of the lower tyre pressure without the serious disadvantages it causes with regard to wear, rolling resistance and breakdown protection.

- ✓ Never exceed or go below the minimum and maximum pressure limits indicated on the tyre.

- 1 Pump the tyre to the recommended tyre pressure.

| Tyre width | Tyre pressure in bar for body weight | | |
|------------|--------------------------------------|-------------|--------------|
| | about 60 kg | about 80 kg | about 110 kg |
| 25 mm | 6.0 | 7.0 | 8.0 |
| 28 mm | 5.5 | 6.5 | 7.5 |
| 32 mm | 4.5 | 5.5 | 6.5 |
| 37 mm | 4.0 | 5.0 | 6.0 |
| 40 mm | 3.5 | 4.5 | 6.0 |
| 47 mm | 3.0 | 4.0 | 5.0 |
| 50 mm | 2.5 | 4.0 | 5.0 |
| 55 mm | 2.0 | 3.0 | 4.0 |
| 60 mm | 2.0 | 3.0 | 4.0 |

Table 36: Recommended tyre pressure for Schwalbe

- 2 Perform a visual check on tyres.



Figure 97: Correct tyre pressure. The tyre is barely deformed under the load of the body weight



Figure 98: Much too little tyre pressure

6.5.9 Brake

The brake lever grip distance can be adjusted to ensure that it can be reached more easily. The pressure point can also be adjusted to the rider's preferences.

6.5.9.1 Brake handle position

Having the brake handle in the correct position prevents the rider from stretching their wrist too far. Moreover, the brake can also be operated without any discomfort and without changing the handle position or releasing the handle.

- ✓ Apply the brake lever with the third finger phalanx to brake gently in bursts.
 - ✓ The setting for the middle finger is used for riders who brake with their middle finger or with two fingers.
- 1 Position your hand on the handle in such a way that the outer heel of the hand is flush with the end of the handlebar.
 - 2 Extend the index finger (about 15°).

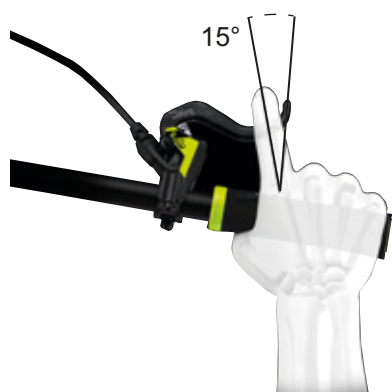


Figure 99: Brake handle position

- 3 Push brake lever outwards until the third finger phalanx sits in the brake lever recessed grip.

6.5.9.2 Brake handle tilt angle

The nerves that pass through the carpal tunnel are connected to the thumb and the index and middle fingers. An excessively steep or excessively flat brake angle will cause the wrist to bend, thus narrowing the carpal tunnel. This can cause numbness and tingling in the thumb and index and middle fingers.

- 1 Calculate the difference between the height of the handlebars and the saddle height to determine the saddle-handlebar height difference.

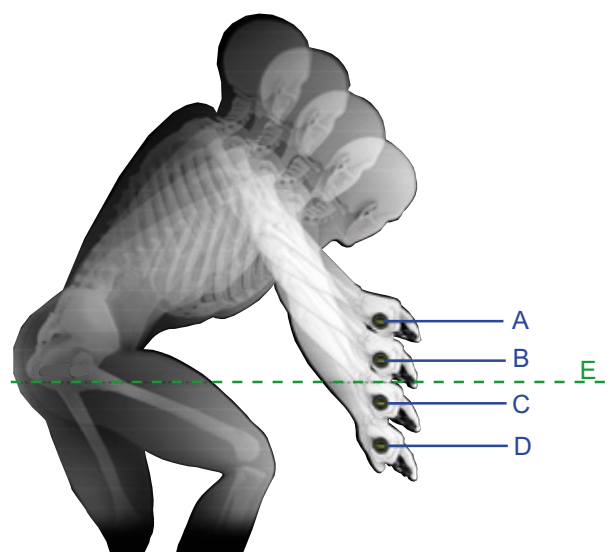



Figure 100: Example of 4 different handlebar heights (A, B, C and D) and the saddle height (E)

| Calculation | Saddle-handlebar height difference [mm] |
|-------------|---|
| A – E | >10 |
| B – E | 0...10 |
| C – E | 0 ...-10 |
| D – E | <-10 |

Table 37: Examples of saddle-handlebar height difference

Adjust the angle of the brake levers so that they form a natural extension of the forearm.

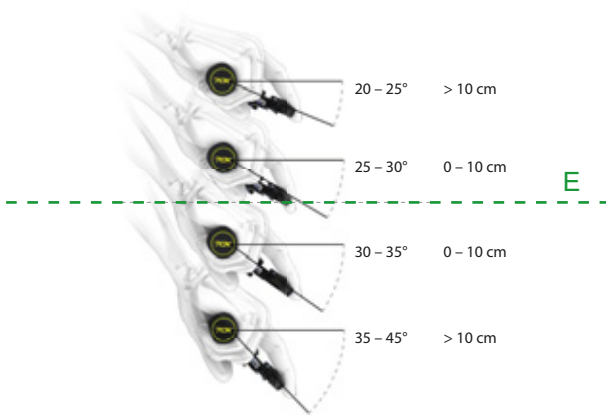- 2 Set the brake lever angle as indicated in the table.



| Saddle-handlebar height difference (mm) | Brake angle |
|---|-------------|
| >10 | 20°...25° |
| 0...10 | 25°...30° |
| 0...-10 | 30°...35° |
| < -10 | 35°...45° |

Figure 101: Brake angle

6.5.9.3 Determining the grip distance

- 1 Measure hand size using the grip distance gauge.
- 2 Adjust the grip distance at the pressure point based on the hand size.



| Hand size | Grip distance (cm) |
|-----------|--------------------|
| S | 2 |
| M | 3 |
| L | 4 |

Figure 102: Brake lever position

6.5.9.4 Retracting the brake linings

Disc brakes require wearing-in time. The braking force increases over time. The braking force is increased during break-in time. This is also the case when the brake pads or brake discs are replaced.

- 1** Accelerate pedelec to 25 km/h.
- 2** Brake pedelec until it comes to a halt.
- 3** Repeat process 30 to 50 times.

The disc brake is retracted and provides optimal braking power.

6.5.10 Suspension

A pedelec's fork suspension and rear frame damper suspension can be adjusted to the rider's weight in up to six increments, depending on the suspension system.

► Follow the the correct order for adjustment.

| Sequence | Adjustment | Section | For pedelecs with components only | |
|----------|--|------------------------|-----------------------------------|-------------------|
| | | | Suspension fork | Rear frame damper |
| 1 | Adjust the suspension fork sag | 6.3.13 | x | |
| 2 | Adjust the rear frame damper sag | 6.3.14 | | x |
| 3 | Adjust suspension fork rebound damper | 6.3.15 | x | |
| 4 | Adjust rear frame damper rebound damper | 6.3.16 | | x |
| 5 | Adjust the rear frame damper compression adjuster | 6.3.17 | | x |
| 6 | The fork compression adjuster is adjusted to the terrain while riding. | 6.11 | | x |

Table 38: Order for adjusting the suspension

6.5.11 Fork sag



Crash caused by incorrectly set suspension

If the suspension is set incorrectly, the fork may become damaged, meaning problems may occur when steering. This will cause a crash with injuries.

- Never ride the bicycle without air in the air suspension fork.
- Never use the pedelec without adjusting the suspension fork to the rider's weight.

Settings on the chassis change riding performance significantly. The rider needs to get used to the pedelec and break it in to prevent accidents.

The sag depends on the position and rider's weight and should be between 10% and 30% of the maximum fork deflection, depending on preferences and on how the pedelec is used.

Greater sag (20%...30%)

A greater sag increases sensitivity to bumps, thus producing greater suspension motion. A greater sensitivity to bumps ensures more comfortable ride performance and is used on bicycles with a longer deflection.

Decreased sag (10%...20%)

A decreased sag reduces sensitivity to bumps, thus producing less suspension motion. A lower sensitivity to bumps ensures a firmer, more efficient ride and is generally used on bicycles with a longer deflection.

The adjustment shown here represents a basic setting. The rider should change the basic setting to suit the surface and their preferences.

It is advisable to make a note of the basic settings. These can then be used as a starting point for subsequent optimised settings and as a safeguard against unintentional changes.

6.5.11.1 Adjusting the Suntour fork steel suspension

Only applies to pedelecs with this equipment

- 1 You will find the **sag setting wheel (1)** beneath the plastic cover on the crown. Remove the plastic cover.

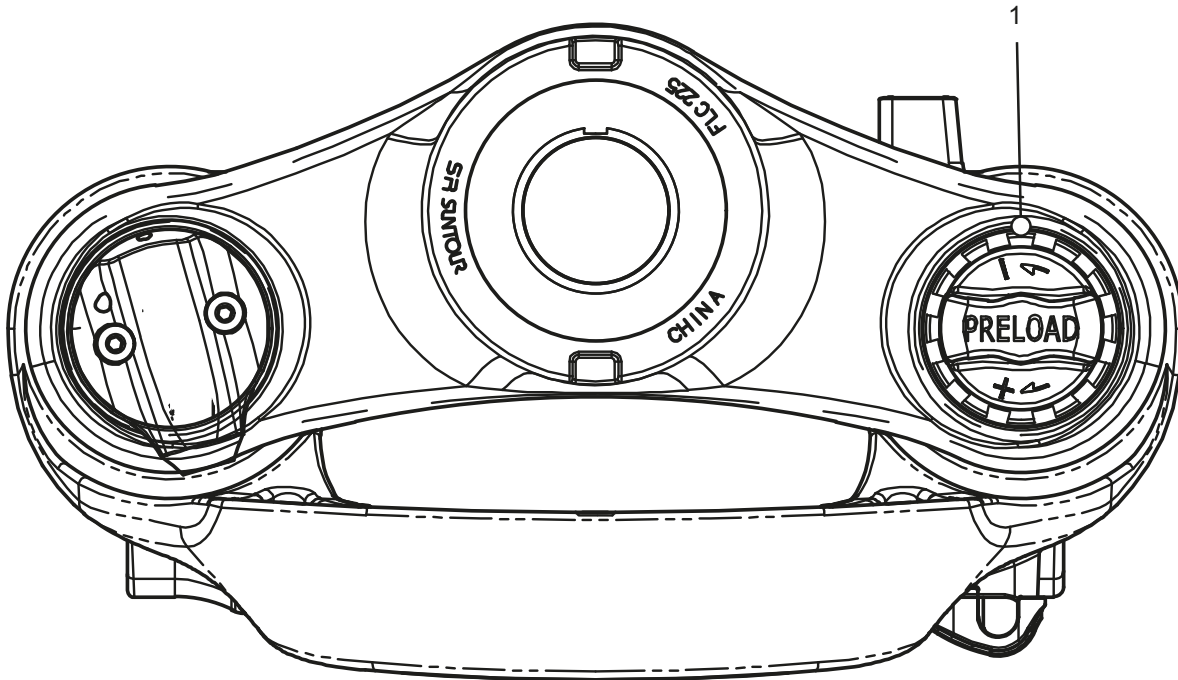


Figure 103: Sag setting wheel (1) on the suspension fork crown

- ▶ Turn the **sag setting wheel** clockwise to increase the spring pre-tensioning.
 - ▶ Turn the **sag setting wheel** anti-clockwise to decrease the spring pre-tensioning.
- ⇒ You will have made the ideal setting when the shock absorber deflects 3 mm when subject to body weight.
- 3 Replace the plastic cover on the crown after making the setting.

6.5.11.2 Adjusting the Suntour fork air suspension

Only applies to pedelecs with this equipment

- ▶ The **air valve** is located beneath the **air valve cap** on the crown. Twist off the **air valve cap**.



Figure 104: Screw caps in different designs

- 1 Attach a high-pressure damper pump to the **air valve**.
- 2 Pump air suspension fork to the required pressure. Observe the levels in the Suntour filling pressure table. Never exceed the recommended maximum tyre pressure.

| Recommended air pressure (psi) | | | | | | |
|--------------------------------|--------------------|--------------------------|----------|---------|---------|---------|
| Body weight | AION35 Mobie 45 | Axon34 XCR34 XCR32 | Mobie 45 | NCX | XCR24 | XCM-Jr. |
| <55 kg | 35...50 | 40...55 | 40...55 | 40...55 | 40...55 | 40...55 |
| 55...65 kg | 50...60 | 55...65 | 55...65 | 55...65 | – | – |
| 65...75 kg | 60...70 | 65...75 | 65...75 | 65...75 | – | – |
| 85...95 kg | 85...100 | 85...100 | 85...100 | 85...95 | – | – |
| > 100 kg | +105 | +100 | +100 | +100 | – | – |
| Maximum air pressure | 120 | 145 | 130 | 180 | 100 | 100 |

Table 39: Suntour filling pressure table for air forks

- 3 Detach high-pressure damper pump.
 - 4 Measure the distance between the crown and the dust seal. This distance is total deflection of the fork.
 - 5 Push a cable tie attached temporarily downwards against the dust seal.
 - 6 Put on your normal cycling clothing, including baggage.
 - 7 Sit on the pedelec in your usual riding position and support yourself against an object, such as a wall or tree.
 - 8 Get off the pedelec without allowing it to deflect.
 - 9 Measure distance between the dust seal and the cable tie.
- ⇒ This measurement is the sag. The recommended value is between 15% (hard) and 30% (soft) of the total fork deflection.
- 10 Increase or reduce air pressure until you have reached the desired sag.
 - 11 If the sag is correct, turn the **air valve cap** clockwise.
 - 12 If you are unable to achieve the required sag, an internal adjustment may be needed. Contact specialist dealer.

6.5.12 Fork rebound damping

Only applies to pedelecs with this equipment

Rebound damping in the suspension fork and the rear frame damper determines the speed at which the rear frame damper rebounds after being subjected to load. Rebound damping controls the suspension fork extension and rebound speed, which, in turn, has an impact on traction and control.

Rebound damping can be adjusted to body weight, spring stiffness, deflection, the terrain and the rider's preferences.

If the air pressure or spring stiffness increases, the extension and rebound speeds also increase.

Rebound damping needs to be increased to achieve an optimal setting if the air pressure or spring stiffness are increased.

The damper rebounds at a controlled speed if the fork is optimally adjusted. The wheel stays in contact with the ground when passing over bumps (blue line).

The fork head, handlebars and body follow terrain (green line) when riding over bumps. The suspension motion is predictable and controlled.


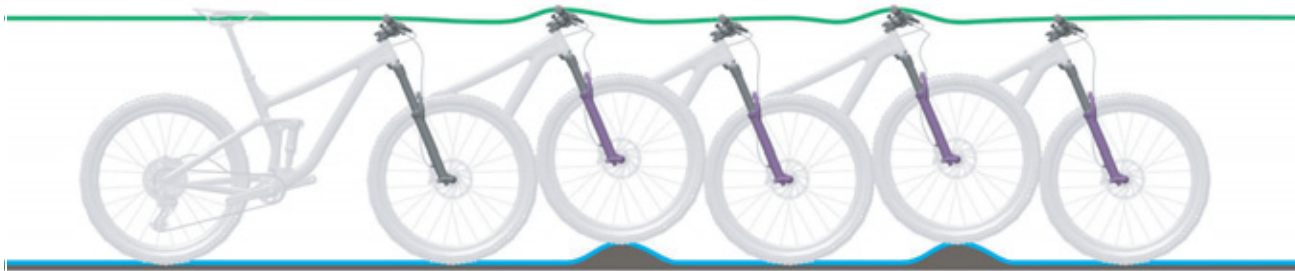


Figure 105: Optimum fork ride performance

6.5.12.1 Adjusting the Suntour fork rebound damping

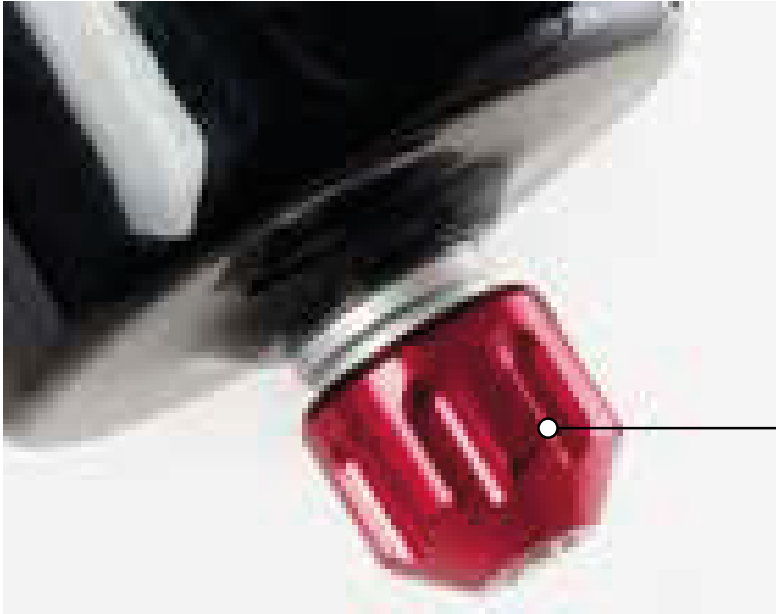Only applies to pedelecs with this equipment



1

Figure 106: Example of Suntour rebound screw (1)

- ✓ The fork sag is adjusted.
 - 1 Turn the **rebound screw** in a clockwise direction to the closed position until it stops.
 - 2 Turn the **rebound screw** slightly in an anti-clockwise direction.
- ⇒ Adjust the rebound damping in such a way that the fork rebounds quickly, but without bottoming out upwards. Bottoming out refers to when the fork rebounds too quickly and stops moving abruptly once it has reached the full rebound distance. You can hear and feel a slight impact when this happens.

6.5.13 Lighting

Example 1

If the front light is positioned too high, oncoming traffic will be dazzled. This can cause a serious accident with fatalities.

Example 2

Positioning the front light correctly can ensure that oncoming traffic is not dazzled and no-one is put at risk.

Example 3

If the front light is positioned too low, the space ahead is not illuminated to an optimum extent and the rider's vision is reduced in the dark.

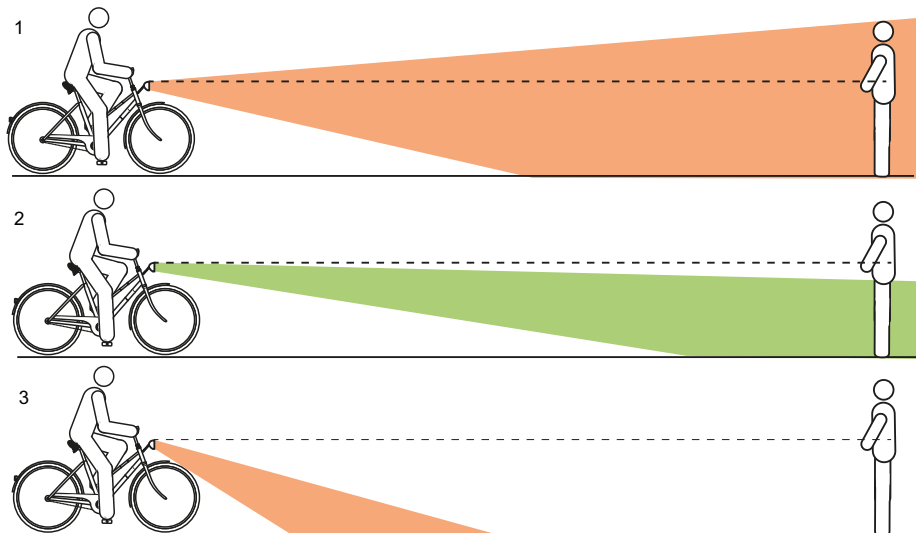


Figure 107: Light positioned too high (1), correctly (2) and too low (3)

6.5.13.1 Adjusting the lights

- 1 Position the pedelec so that its front is facing a wall.
- 2 Mark the height of the front light (1) on the wall with chalk.
- 3 Mark half the height of the front light (2) on the wall with chalk.

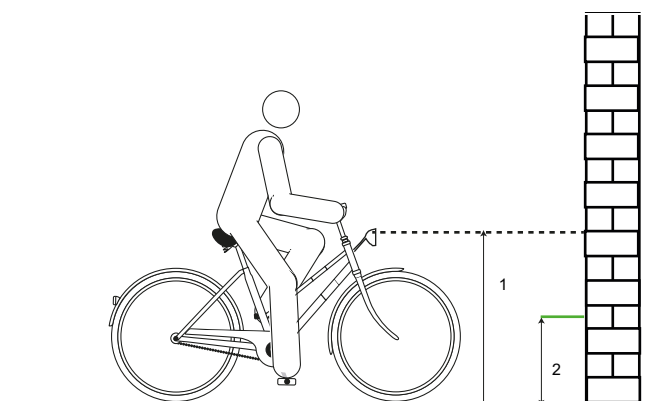


Figure 108: Front light height (1) and half the headlight height (2)

4 Place pedelec 5 m from the wall.

6 Switch on riding light.

5 Stand the pedelec up straight. Hold the handlebars straight with both hands. Do not use the kickstand.

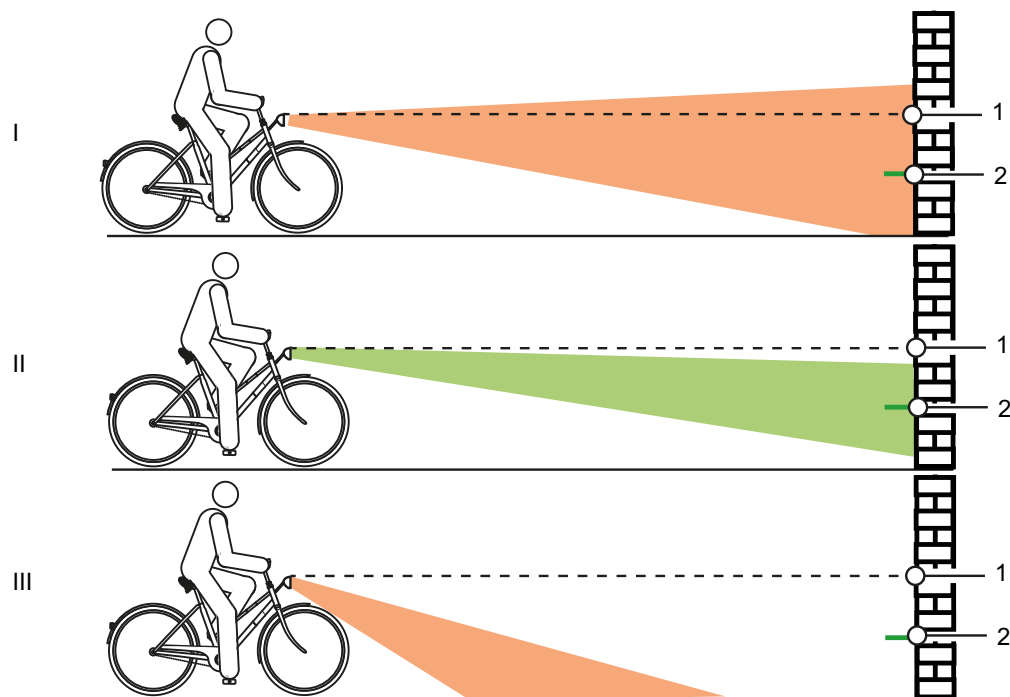


Figure 109: Light positioned too high (1), correctly (2) and too low (3)

7 Check the position of the light beam.

- ▶ (I) If the upper edge of the light beam is above the front light height mark (1), the light will dazzle. The front light must be positioned lower.
- ▶ (II) If the mid-point of the light beam is on or slightly below the mark showing half the front light (2), the light is optimally positioned.
- ▶ (III) If the light beam is in front of the wall, move front light up.

6.5.14 On-board computer

The on-board computer is operated using four buttons on its casing.

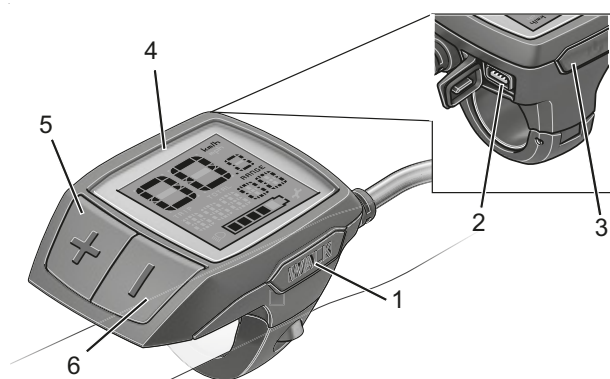


Figure 110: BOSCH Purion on-board computer layout

| | Symbol | Use |
|---|-------------|-------------------------|
| 1 | WALK | Push assist button |
| 2 | | USB port |
| 3 | | On-Off button (display) |
| 4 | | Display |
| 5 | + | Plus button |
| 6 | - | Minus button |

Table 40: Operating elements overview

| Action | Button | Duration |
|----------------------------------|---------------------------------|---|
| Changing the tachometer unit | - | 1. Hold 2. brief (< 1 s) |
| Adjust display screen brightness | - + - or + | 1. Hold 2. brief (< 1 s) 3. brief (< 1 s) |
| Get versions | - + | 1. Hold 2. brief (< 1 s) |

Table 41: Overview for adjusting on-board computer

6.5.14.1 Changing the tachometer unit

The displayed values can be changed from kilometres to miles.

- 1 Keep **minus button** pressed down.
 - 2 Press **On-Off button (on-board computer)** briefly.
- ⇒ All the values are displayed in miles.

6.5.14.2 Adjust display screen brightness

- ✓ The display must be switched off.
- 1 Keep the **plus** and **minus buttons** pressed down at the same time.
 - 2 Press the **On-Off button (display)** briefly.
 - 3 Use the **plus button** or **minus button** to adjust the display screen brightness in such a way that you can see text and icons sufficiently clearly.

6.5.14.3 Displaying versions and type numbers

You can retrieve the sub-system versions and their type part numbers for maintenance purposes if the sub-systems provide this type of information (depends on the sub-system).

- ✓ The drive system must be switched off.
- 1 Keep the **plus** and **minus buttons** pressed down at the same time.
 - 2 Press **On-Off button (on-board computer)** briefly.
- ⇒ The version or type number will be displayed as moving text.

6.6 Accessories

We recommend a parking stand into which either the front wheel or rear wheel can be inserted securely for pedelecs which do not have a kickstand. The following accessories are recommended:

| Description | Article number |
|--|----------------|
| Protective cover for electrical components | 080-41000 ff |
| Panniers, system component* | 080-40946 |
| Rear wheel basket, system component* | 051-20603 |
| Bicycle box, system component* | 080-40947 |
| Parking stand universal stand | XX-TWO14B |

Table 42: Accessories

6.6.1 Child seat



WARNING

Crash caused by incorrect child seat

The pannier rack and down tube are unsuitable for mounting child seats and may break. Such an incorrect position may cause a crash with serious injuries for the rider or child.

- ▶ Never attach a child seat to the saddle, handlebars or down tube.



CAUTION

Crash caused by improper handling

When using child seats, the pedelec's handling characteristics and stability change considerably. This can cause a loss of control, a crash and injuries.

- ▶ You should practice how to use the child seat safely before using the pedelec in public spaces.



CAUTION

Risk of crushing due to exposed springs

The child may crush his/her fingers on exposed springs or open mechanical parts of the saddle or the seat post.

- ▶ Never install saddles with exposed springs if a child seat is being used.
- ▶ Never install seat posts with suspension with open mechanical parts or exposed springs if a child seat is being used.

Notice

- ▶ Observe the legal regulations on the use of child seats.
- ▶ Observe the operating and safety instructions for the child seat system.
- ▶ Never exceed the maximum permitted total weight.

The specialist dealer will advise you on choosing a suitable child seat system for the child and the pedelec.

The specialist dealer must install the child seat the first time to ensure that it is safely fitted.

When installing a child seat, the specialist dealer makes sure that the seat and the fastening mechanism for the seat are suitable for the pedelec and that all components are installed and firmly fastened. They will also ensure that shift cables, brake cables, hydraulic lines and electrical cables are adjusted as necessary, the rider has optimum freedom of movement and the pedelec's maximum permitted total weight is complied with.

The specialist dealer will provide instruction on how to handle the pedelec and the child seat.

6.6.2 Trailer



Crash caused by brake failure

The braking distance may be longer if the trailer is carrying excessive load. The long braking distance can cause a crash or an accident and injuries.

- ▶ Never exceed the specified trailer load.

Notice

- ▶ The *operating* and safety instructions for the trailer system must be observed.
- ▶ The statutory regulations on the use of bicycle trailers must be observed.
- ▶ Only use type-approved coupling systems.

A pedelec which is approved for towing a trailer will bear an appropriate adhesive label. You may only use trailers with a tongue load and weight which do not exceed the permitted values.

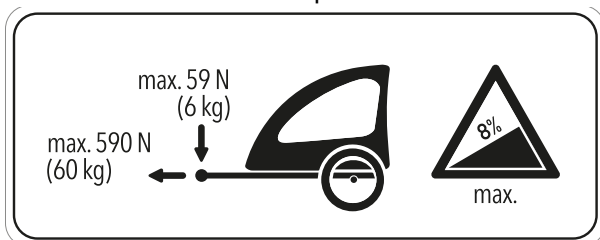


Figure 111: Trailer sign

The specialist dealer will advise on choosing a suitable trailer system for the pedelec. The specialist dealer must install the trailer the first time to ensure that it is fitted safely.

6.6.2.1 Approval for trailer with Enviolo hub

Only applies to pedelecs with this equipment

Only compatible bicycle trailers are approved for ENVIOLLO hub gears.

KETTLER

KETTLER QUADRIGA child trailer.

BURLY

| Trailer | Adapter |
|------------|-----------------|
| Minnow Bee | Item no. 960038 |
| Honey Bee | |
| Encore | |
| solo | |
| Cub | |
| D'Lite | |
| Normad | |
| Flatbed | |
| Tail Wagon | |

CROOZER

| Trailer | Adapter |
|------------------|---|
| Croozor Kid | Item no. 122003516, XL: +10 mm Item no. 122003716 Item no. 12200715 Croozor axle nut adapter with Thule coupling |
| Croozor Kid Plus | |
| Croozor Cargo | |
| Croozor Dog | |

THULE

| Trailer | Adapter |
|---------------------|-------------------|
| Thule Chariot Lite | Item no. 20100798 |
| Thule Chariot Cab | |
| Thule Chariot Cross | |
| Thule Chariot Sport | |
| Thule Coaster XT | |

6.6.2.2 Approval for trailer with ROHLOFF hub

Only applies to pedelecs with this equipment

ROHLOFF Speedhub 500/14

As a basic rule, it is permitted to use a trailer in combination with the ROHLOFF SPEEDHUB 500/14.

There must be **no component contact** with the cover of the ROHLOFF E-14 gear shift unit caused by pressure or tension at any time during assembly or when riding with the trailer **under any circumstances**.

Collision causing possible damage to the ROHLOFF E-14 gear shift unit can be avoided with suitable washers or special axle adapters (spacers or polygon) from the coupling manufacturer concerned.

Speedhub with A-12



Risk of an accident

The A-12 attachment screw has a very low screw-in depth. The screw or the thread in the axle plate can be damaged or ripped out if a trailer hitch is fitted directly onto the axle or the A-12 attachment screw. This may cause an accident with injuries.

- ▶ Never fit a trailer hitch directly on the axle and the A-12 attachment screw to a ROHLOFF Speedhub with an A-12 axle system in a 12 mm quick release axle frame.

6.6.3 Mobile holder

Only applies to pedelecs with this equipment

A holder for SP Connect mobile case is fitted to the stem.

- ✓ Observe the operating instructions for the mobile and the SP Connect mobile case.
- ✓ Use on tarmacked roads only.
- ✓ Protect mobile from theft.
- ▶ To attach: insert the SP Connect mobile case in the holder and turn 90° to the right.
- ▶ To release: turn the SP Connect mobile case 90° to the left and remove.

6.6.4 Tubeless and airless tyres

Bicycle riding without tubes reduces the risk of tyre punctures or even avoids them completely.

The specialist dealer will advise on choosing a suitable tyre system for the pedelec.

A specialist dealer must carry out conversion to tubeless or airless tyres for safety reasons.

6.6.5 Suspension fork coil spring

If the desired suspension fork sag cannot be achieved after adjustment, the coil spring assembly must be replaced with a softer or harder spring.

- ▶ Fit a softer coil spring assembly group to increase the sag.
- ▶ Fit a harder coil spring assembly group to decrease the sag.

6.6.6 Pannier rack

The specialist dealer will advise on choosing a suitable pannier rack.

The specialist dealer must install the pannier rack the first time to ensure that it is safely fitted.

When installing a pannier rack, the specialist dealer makes sure that the fastening mechanism is suitable for the pedelec and that all components are installed and firmly fastened. They will also ensure that shift cables, brake cables, hydraulic lines and electrical cables are adjusted as necessary, the rider has optimum freedom of movement and the pedelec's maximum permitted total weight is not exceeded.

The specialist dealer will provide instruction on how to handle the pedelec and the pannier rack.

6.6.7 Panniers and cargo boxes

- ▶ Use a paint protection film when attaching panniers. This will reduce abrasion on paint and wear on components.

6.7 Personal protective equipment and accessories for road safety

Seeing and being seen is crucial in road traffic. The following requirements must be met for riding a road-safe vehicle on public roads.

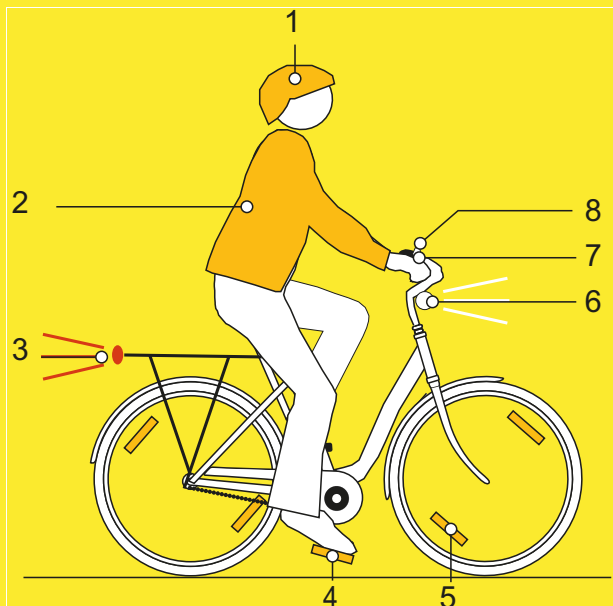


Figure 112: Road safety

- 1 The helmet must have a reflective strip or a light in a clearly visible colour.
- 2 **Cycle clothing** is essential at all times of year. Clothing should be retroreflective or as light as possible. Fluorescent materials are also suitable. High-visibility jackets and straps on your upper body ensure even greater safety. Never wear a skirt. Always wear trousers which reach down to your ankles instead.
- 3 The **large red reflector** with a “Z” registration mark and the **red rear light** must be clean. The rear light is attached high enough so that cars can see it (minimum height 25 cm). The rear light must work.
- 4 The two **reflectors on the two non-slip pedals** must be clean.
- 5 The **yellow spoke reflectors** on both wheels or the **white, fluorescent surface** on both wheels must be clean.
- 6 The **white front light** must work and must be positioned so that it does not dazzle other road users. If the **white reflector** is not integrated into the front light, it must be clean at all times.

- 7 The **two separate brakes** on the pedelec must work at all times.
- 8 The **clear sounding bell** must be fitted and must work.

6.8 Before each ride

- ▶ Check pedelec before each ride; see [section 7.1](#).

| Check list before each ride | | |
|-----------------------------|--|------------------------------------|
| <input type="checkbox"/> | Check everything is sufficiently clean. | See section 7.2 |
| <input type="checkbox"/> | Check guards. | See section 7.1.1 |
| <input type="checkbox"/> | Check battery to ensure it is firmly in place. | See section 6.7.3 |
| <input type="checkbox"/> | Check lights. | See section 7.1.13 |
| <input type="checkbox"/> | Check brake. | See section 7.1.14 |
| <input type="checkbox"/> | Check suspension seat post. | See section 7.1.9 |
| <input type="checkbox"/> | Check pannier rack. | See section 7.1.5 |
| <input type="checkbox"/> | Check bell. | See section 7.1.10 |
| <input type="checkbox"/> | Check handles. | See section 7.1.11 |
| <input type="checkbox"/> | Check rear frame damper. | See section 7.1.4 |
| <input type="checkbox"/> | Check frame. | See section 7.1.2 |
| <input type="checkbox"/> | Check wheel concentricity. | See section 7.1.7 |
| <input type="checkbox"/> | Check quick releases. | See section 7.1.8 |
| <input type="checkbox"/> | Check mudguards. | See section 7.1.6 |
| <input type="checkbox"/> | Check USB cover. | See section 7.1.12 |

- ▶ Be alert to any unusual noises, vibrations or odours while riding. Be alert to any unusual operating sensations when braking, pedalling or steering. This indicates material fatigue.
- ⇒ Take pedelec out of service if there are any deviations from the “Before each ride” check list or any unusual behaviour. Contact your specialist dealer.

6.9 Straightening the quickly adjustable stem

Only applies to pedelecs with this equipment

- 1 Open stem clamping lever.

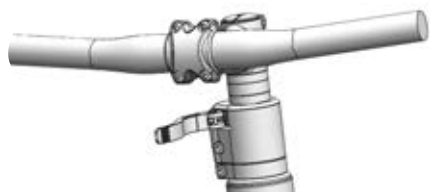


Figure 113: Example of All Up with open stem clamping lever

- 2 Pull handlebars into the highest possible position.

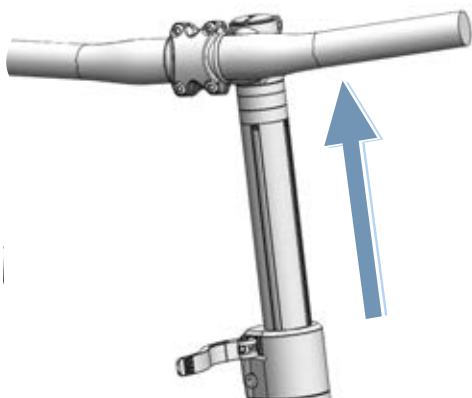


Figure 114: Example of All Up pulled into highest possible position

- 3 Turn handlebars 90° anti-clockwise so that they are straight.

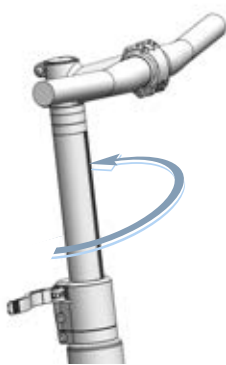


Figure 115: Example of All Up in straight position

- 4 Place handlebars at required height
- 5 Close stem clamping lever.

6.10 Using the pannier rack



Crash caused by loaded pannier rack

The pedelec is handled differently with a loaded *pannier rack*, in particular when the rider needs to steer and brake. This can lead to a loss of control. This may cause a crash with injuries.

- ▶ You should practice how to use a loaded *pannier rack* safely before using the pedelec in public spaces.

Crushing the fingers in the spring flap

The spring flap on the *pannier rack* operates with a high clamping force. There is a risk of crushing the fingers.

- ▶ Never allow the spring flap to snap shut in an uncontrolled manner.
- ▶ Be careful where you position your fingers when closing the spring flap.

Crash caused by unsecured baggage

Loose or unsecured objects on the *pannier rack*, e.g. belts, may become caught in the rear wheel. This may cause a crash with injuries.

Objects which are fastened to the *pannier rack* may cover the *reflectors* and the *riding light*. Other users may not see the pedelec on public roads as a result. This may cause a crash with injuries.

- ▶ Secure any objects which are attached to the *pannier rack* sufficiently.
- ▶ Objects fastened to the *pannier rack* must never cover the *reflectors*, the *front lamp* or the *rear light*.

- ▶ Distribute the baggage as evenly as possible between the left- and right-hand side.
- ▶ We recommend the use of panniers and baggage baskets.



Figure 116: The maximum load bearing (1) capacity is indicated on the pannier rack.

- ▶ Never exceed the maximum permitted *total weight* when packing the pannier.
- ▶ Never (1) exceed the maximum load bearing capacity of the pannier rack.
- ▶ Never modify the pannier rack.

6.11 Raising the kickstand

- ▶ Use your foot to raise kickstand completely before setting off.

6.12 Using the saddle

- ▶ Do not wear studded jeans as these can damage the saddle covering.
- ▶ Wear dark clothes for your first few rides as new leather saddles can stain clothing.

6.12.1 Using the leather saddle

Sunlight and UV light damage the colour and can cause the leather to dry out and fade.

- ▶ Do not expose the pedelec to the sun for longer periods of time.

Moisture may cause the leather to detach from material beneath and mould can form.

- ▶ If the leather handles get wet, dry handles completely.

6.13 Using the pedals

- ▶ The ball of the foot is placed on the pedal when riding and pedalling.

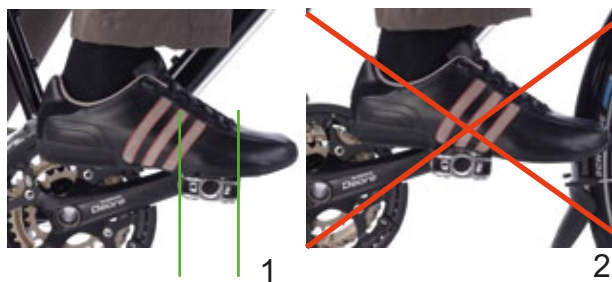


Figure 117: Correct (1) and incorrect (2) foot position on the pedal

6.14 Using the multifunction handlebars or bar ends

- ▶ Vary handle position to avoid overstraining and tiring the hands.

6.14.1 Using leather handles

Sweat and grease from the skin are two of the greatest enemies of leather. They penetrate the surface of leather and cause it to disintegrate more quickly, meaning the leather can soften and abrade.

- ▶ Wear gloves.

Sunlight and UV light damage the colour and can cause the leather to dry out and fade.

- ▶ Do not expose the pedelec to the sun for longer periods of time.

Moisture may cause the leather to detach from material beneath and mould can form.

- ▶ If the leather handles get wet, dry handles completely.

6.15 Using the bell

- 1 Press the bell button downwards.
- 2 Let button spring back.

6.16 Using the battery

- ✓ Switch off the battery and the drive system before removing or inserting the battery.

6.16.1 Frame battery

Only applies to pedelecs with this equipment

6.16.1.1 Removing the frame battery

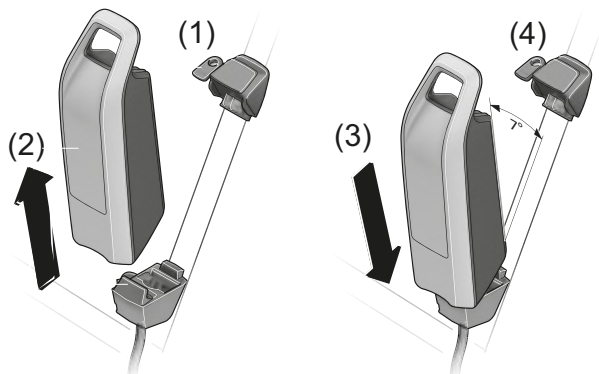


Figure 118: Removing and inserting the frame battery

- 1 Open battery lock with battery key (1).
 - 2 Tip the battery out of the top section of the frame battery mount.
 - 3 Pull from the frame battery mount (2).
- #### 6.16.1.2 Inserting the frame battery
- 1 Place the battery on the contacts in the lower section of the frame battery mount (3).
 - 2 Remove the battery key from the battery lock (4).
 - 3 Tip the battery into the top section of the frame battery mount until it will go no further.
- ⇒ There is an audible clicking noise.
- 4 Check the battery to make sure it is firmly in place.

6.16.2 Pannier rack battery

Only applies to pedelecs with this equipment

6.16.2.1 Removing the pannier rack battery

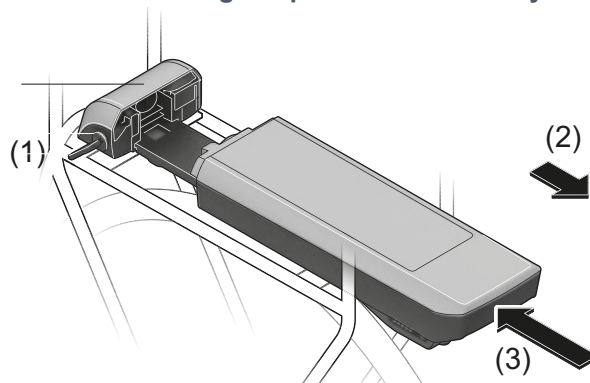


Figure 119: Removing (2) and inserting (3) the pannier rack battery

- 1 Open battery lock with battery key (1).
- 2 Pull the pannier rack battery backwards and out of its mount (2).
- 3 Remove the battery key from the battery lock (1).

6.16.2.2 Inserting the pannier rack battery

- 1 Insert battery into the pannier rack battery mount with the contacts facing the front until it clicks into place (3).
- 2 Check the battery to make sure it is firmly in place.

6.16.3 Integrated battery

Only applies to pedelecs with this equipment

6.16.3.1 Removing the integrated battery

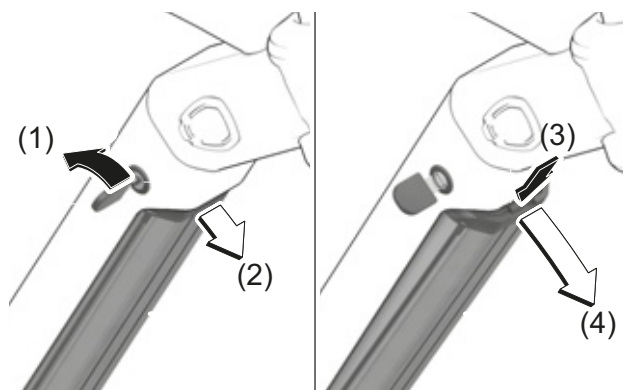


Figure 120: Removing the integrated battery

- 1 Open battery lock with battery key (1).
- ⇒ The battery is released and falls into the retainer guard (2).
- 2 Hold the battery in your hand from below. Use the other hand to push on the retainer guard from above (3).
- ⇒ The battery is released and falls into the hand (4).
- 3 Remove the battery from the frame.
- 4 Remove the battery key from the battery lock.

6.16.3.2 Inserting the integrated battery

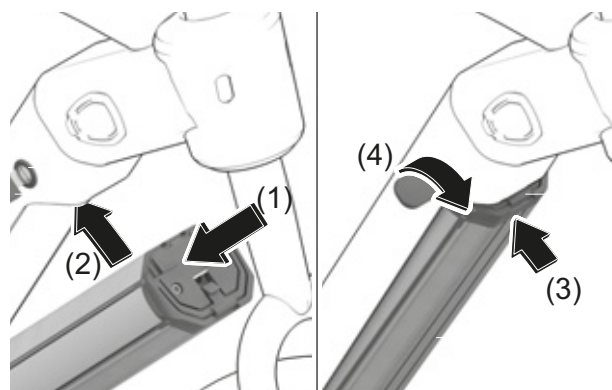


Figure 121: Inserting the integrated battery

- 1 Place the battery into the integrated battery lower mount with the contacts facing the front (1).
- 2 Flip the battery upwards so that the battery is held by the retainer guard (2).
- 3 Push the battery upwards (3).
- ⇒ There is an audible clicking noise.
- 4 Check battery to ensure it is firmly in place.
- 5 Lock the battery with the battery key; otherwise, the battery may fall out of the mount when you open the see (4).
- 6 Remove the battery key from the battery lock.
- 7 Check the battery to ensure it is firmly in place before each ride.

6.16.4 Charging the battery

- ✓ The ambient temperature during the charging process must be within the range from 0 °C to 40 °C.
 - ✓ The battery can remain on the pedelec or can be removed for charging.
 - ✓ Interrupting the charging process does not damage the battery.
- 1 Remove the cable connection cover if necessary.
 - 2 Connect the mains plug of the charger to a normal domestic, grounded socket.

| | |
|-----------------|--------------|
| Connection data | 230 V, 50 Hz |
|-----------------|--------------|

Notice

- ▶ Check that mains voltage! The power source voltage must match the voltage indicated on the charger nameplate. Chargers labelled 230 V may be operated at 220 V.
- 3 Connect the charging cable to the battery's charging port.
 - ⇒ The charging process starts automatically.
 - ⇒ The battery level indicator shows the charge level during charging. When the drive system is switched on, the *on-board computer* displays the charging process.

Notice

If an error occurs during the charging process, a system message is displayed.

- ▶ Remove the charger and battery from operation immediately and follow the instructions.
- ⇒ The charging process is complete when the LEDs on the charge level indicator (battery) go out.
 - 4 Once charging is complete, disconnect the battery from the charger.
 - 5 Disconnect the charger from the mains.

6.16.5 Charging the dual battery

Only applies to pedelecs with this equipment

Notice

- ▶ Charge the battery via the accessible charging socket only.
- ▶ Never open a sealed charging socket. Charging via a pre-sealed charging socket can cause irreparable damage.

6.16.5.1 Charging process when two batteries are used

- ▶ If two batteries are attached to a pedelec, charge both batteries via the non-sealed socket.
 - ⇒ The two batteries are charged alternately during charging. Charging switches automatically between the two batteries several times. The charging time is twice as long.
 - ⇒ The two batteries are discharged alternately during use.

6.16.5.2 Charging process when one battery is used

- ▶ If only one battery is inserted, only charge the battery with an accessible charging socket.
- ▶ Charge the battery with the sealed charging socket outside its mount only.

6.16.6 Using double battery model with a single battery only

One of the charging sockets is not accessible or is sealed with an end cap on pedelecs with two batteries.

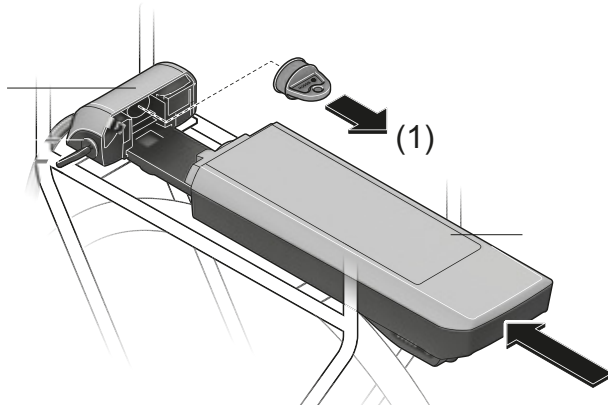


Figure 122: Covering open contacts with cover cap – example: pannier rack battery

- ▶ If you wish to use just one battery on a pedelec which is designed for two batteries, cover the contacts in the free slot with the supplied cover cap (1); otherwise, there is a risk of a short circuit caused by the open contacts.

6.16.7 Waking the battery

- ✓ The battery switches to sleep mode to protect itself when not used for a longer period. The LEDs on the battery level indicator do not light up.
- ▶ Press the **On-Off button (battery)**.
- ⇒ The charge level indicator (battery) shows the charge level.

6.17 Using pedelec with the electric drive system

6.17.1 Switching on the electric drive system



Crash caused by lack of readiness for braking

When it is switched on, the drive system can be activated by the application of force on the pedals. There is a risk of a crash if the drive is activated unintentionally and the brake is not reached.

- ▶ Never start the electric drive system, or switch it off immediately, if the brake cannot be reached safely and reliably.

- ✓ A sufficiently charged battery has been inserted into the pedelec.
- ✓ The battery is firmly positioned. The battery key has been removed.

There are three options for switching on the drive system.

On-Off button (battery)

- ▶ Press the **On-Off button (battery)** briefly.

On-Off button (on-board computer)

- ▶ Press the **On-Off button (on-board computer)** briefly.

Switched-on on-board computer

- ▶ If the on-board computer is already switched on when it is inserted into its mount, the electric drive system is switched on automatically.
- ⇒ After switching on, a speed of 0 KM/H is displayed on the *on-board computer*. If it is not, check whether the *on-board computer* is fully engaged into position.
- ⇒ If the drive system is switched on, the drive is activated as soon as the pedals are moved with sufficient force (except if in push assist mode or the level of assistance is "OFF").
- ⇒ The motor power is determined by the level of assistance set on the on-board computer.

6.17.2 Switching off the electric drive

system

As soon as you stop pushing the pedals in normal mode or reach a speed of 25 km/h, the drive system switches off the assistance system. The assistance system starts up again when you push the pedals and your speed is less than 25 km/h.

The system switches off automatically ten minutes after the last command. There are three options for switching off the drive system manually.

On-Off button (on-board computer)

- ▶ Press the **On-Off button (on-board computer)** briefly.

On-Off button (battery)

- ▶ Press the **On-Off button (battery)**.

Removing the on-board computer

- ▶ Remove the *on-board computer* from the mount.
- ⇒ The LEDs on the charge level indicator (battery) go out.

6.18 On-board computer

Notice

- ▶ Never use the display as a handle. The display may become irreparably damaged if you use it to lift the pedelec.
- ▶ Remove the batteries from the display if the pedelec is not going to be used for several weeks.

The on-board computer is operated using four buttons on its casing.

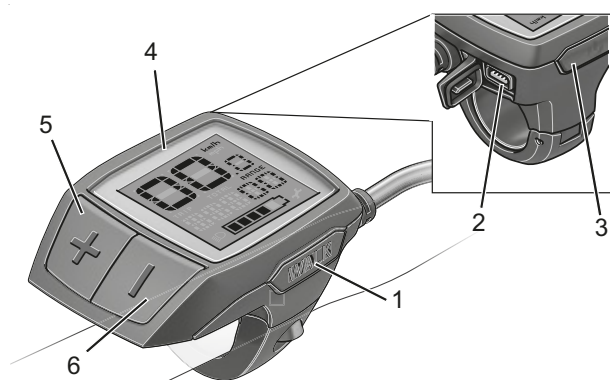


Figure 123: BOSCH Purion on-board computer layout

| | Symbol | Use |
|---|-------------|-----------------------------------|
| 1 | WALK | Push assist button |
| 2 | | USB port |
| 3 | | On-Off button (on-board computer) |
| 4 | | Display |
| 5 | + | Plus button |
| 6 | - | Minus button |

Table 43: Operating elements overview

6.18.1 Actions on the on-board computer

| Action | Button | Duration |
|---|-------------------------|----------------------------|
| Switching on the on-board computer | | Brief |
| Switching off the on-board computer | | Brief (< 1 s) |
| Using the push assist system | WALK + | 1. brief (< 1 s) 2. Any |
| Increase assistance | + | Brief (< 1 s) |
| Reduce assistance | - | Brief (< 1 s) |
| TRIP/TOTAL/RANGE screen, assistance modes | - | Medium (1- 2.5 s) |
| Switch on riding light | + | Long (> 2.5 s) |
| Switch off riding light | + | Long (> 2.5 s) |
| Reset journey distance | - & + | Medium (1- 2.5 s) |

Table 44: Overview of actions on the on-board computer

6.18.2 Switching on the on-board computer

- ▶ Press **On-Off button (on-board computer)** briefly.

⇒ The electric drive system is switched on.

6.18.3 Switching off the on-board computer

- ▶ Press **On-Off button (on-board computer)** briefly.

⇒ After switching off, the drive system shuts down.

⇒ It is not possible to switch on again immediately. Wait a moment as necessary.

6.18.4 Using the riding light

- ✓ The drive system needs to be already switched on to turn on the *riding light*.

- ▶ Press **plus button** for a long time.

⇒ The *riding light* is switched on. The *riding light symbol* is displayed.

- ▶ Press **plus button** for a long time.

⇒ The riding light is switched off. The *riding light symbol* is not displayed.

6.18.5 Using the push assist system



Injury from pedals or wheels

The pedals and the drive wheel turn when the push assist system is used. There is a risk of injury if the pedelec wheels are not in contact with the ground when the push assist system is used (e.g. when carrying the pedelec up stairs or when placing it on a bicycle rack).

- ▶ Only use the push assist mode when pushing the pedelec.
- ▶ You must steer the pedelec securely with both hands when using push assist.
- ▶ Allow for enough freedom of movement for the pedals.

The push assist helps move the pedelec. The speed can be a maximum of 6 km/h in this case.

- ✓ The tractive power of the push assist and its speed can be influenced by the selection of gear. We recommend using first gear for cycling uphill to protect the drive.
- ✓ The level of assistance OFF must not be selected.

1 Press **push assist button** briefly.

⇒ The push assist is activated.

2 Press and hold **plus button** within 3 seconds.

⇒ Push assist is switched on.

3 Release **plus button**.

⇒ Push assist is switched off.

⇒ The push assist system switches off automatically as soon as the pedelec wheels are blocked or the value exceeds 6 km/h.

6.18.6 Selecting the level of assistance

▶ Press **plus button** briefly.

⇒ The level of assistance is increased.

▶ Press **minus button** briefly.

⇒ The level of assistance is reduced.

6.18.7 Using the journey information

The displayed *journey information* can be changed and partially reset.

6.18.7.1 Switching the journey information

▶ Press **minus button** medium length of time.

⇒ The journey information trip distance (TRIP), total distance travelled (TOTAL), range (RANGE), and support modes used are shown on the display screen.

6.18.7.2 Resetting the trip distance

✓ Select TRIP journey information .

▶ Press **plus** and **minus buttons** simultaneously for a long time.

⇒ RESET is shown on the display screen.

⇒ If you continue to jiggle the **plus** and **minus buttons** at the same time, the trip distance will be reset to 0.

6.18.7.3 Resetting the range

✓ Select RANGE journey information.

▶ Press **plus** and **minus buttons** simultaneously for a long time.

⇒ RESET is shown on the display screen.

⇒ If you continue to jiggle the **plus** and **minus buttons** at the same time, the range will be reset to 0.

6.18.8 Replacing the battery

- ✓ If the on-board computer shows LOW BAT on the display screen, the battery is flat and must be replaced.
- ✓ The recommended CR 2016 battery can be obtained from specialist dealers.

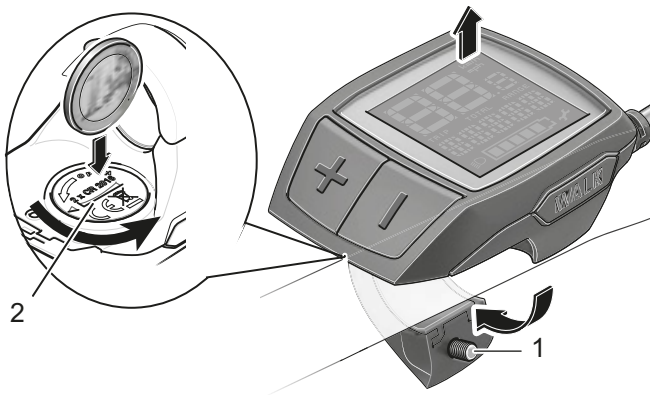


Figure 124: On-board computer with attachment screw (1) and battery compartment cover (2)

- 1 Remove on-board computer from the handlebars by unfastening attachment screw (1).
 - 2 Use a suitable coin to open the battery compartment cover (2).
 - 3 Remove used on-board computer batteries.
 - 4 Insert new CR 2016 on-board computer batteries. Ensure correct polarity when inserting on-board computer battery.
 - 5 Close battery compartment.
 - 6 Fasten on-board computer onto the handlebars with attachment screw (1).
- ⇒ The battery has been changed.

6.18.9 Using the USB port

Notice

The USB port is reserved to connect diagnostics systems. The USB port must be kept completely closed with the protective cap at all times.

Any moisture penetrating through the USB port may trigger a short circuit in the on-board computer.

- ▶ Regularly check the position of the rubber cover on the USB port and adjust it as necessary.

6.19 Brake

WARNING

Crash caused by brake failure

Oil or lubricant on the brake disc in a disc brake or on the rim of a rim brake can cause the brake to fail completely. This may cause a crash with serious injuries.

- ▶ Never allow oil or lubricant to come into contact with the brake disc or brake linings or on the rim of a rim brake.
- ▶ If the brake linings have come into contact with oil or lubricant, contact specialist dealer to have the components cleaned or replaced.

If the brakes are applied continuously for a long time (e.g. while riding downhill for a long time), the fluid in the brake system may heat up. This may create a vapour bubble. This will cause air bubbles or water contained in the brake system to expand. This may suddenly make the lever travel wider. This may cause a crash with serious injuries.

- ▶ Release the brake regularly when riding downhill for a longer period of time.

The motor drive force is shut off during the ride as soon as the rider is no longer pedalling. The drive system does not switch off when braking.

- ▶ In order to achieve optimum braking results, do not pedal while braking.

6.19.1 Using the brake lever

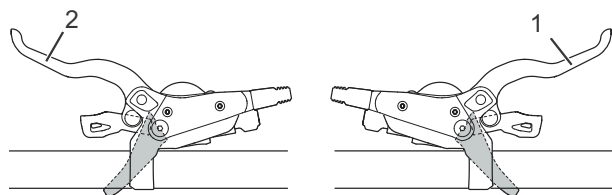


Figure 125: Brake lever, rear (1) and front (2), SHIMANO brake used as an example

- ▶ Push the left-hand *brake lever* to apply the *front wheel brake*.
- ▶ Push the right-hand *brake lever* to apply the *rear wheel brake*.
- ▶ Turn the setting wheel in an anti-clockwise direction to increase the rebound speed.
- ▶ Turn the setting wheel in a clockwise direction to decrease the rebound speed.

6.20 Suspension and damping

Compression adjuster set to hard

- Causes the suspension fork to move higher within the deflection range. This improves efficiency, maintains momentum and makes it easier to ride over uniformly hilly terrain and around bends.
- Deflection may feel somewhat harder on rugged terrain.

Compression adjuster set to soft

- Causes the fork to deflect quickly and easily. This makes it easier to maintain speed and momentum when riding over uneven rugged terrain.
- Deflection feels somewhat less hard on rugged terrain.



Figure 126: Optimum performance over bumps

When optimally adjusted, the fork deflects quickly and unhindered when the bike hits bumps and absorbs a bump. Traction is retained (blue line).

The fork responds quickly to the bump. The headset and handlebars rise slightly when absorbing a bump (green line).

Threshold

The damping threshold prevents deflection until a medium impact or downward force occurs. Threshold mode increases drive efficiency over level terrain.

The threshold setting can be used to improve pedalling efficiency over flat or hilly terrain. In threshold mode, higher pedelec speeds lead to greater impact force when a pedelec hits a bump, causing the fork to deflect, and the bump is absorbed.

- When the compression adjuster is in the open position (against the stop in an anti-clockwise direction), the suspension fork deflects quickly and unhindered through its entire deflection range when an impact or downward force occurs.
- When the compression adjuster is in the threshold position, the suspension fork counteracts deflection until a medium impact or downward force occurs.
- When the compression adjuster is in the blocked position (against the stop in a clockwise direction), the suspension fork counteracts deflection throughout its deflection range until a strong impact or downward force occurs.

6.20.1 Adjusting the Suntour compression adjuster



Figure 127: Suntour compression adjuster in open (1) and closed (2) position

► Place **compression adjuster** in the OPEN position.

⇒ The compression adjuster is open.

► Place **compression adjuster** in the LOCK position.

⇒ The compression adjuster is locked.

► Position **compression adjuster** between OPEN and LOCK.

⇒ This position allows you to fine-tune the compression adjuster.

We recommend setting the **compression adjuster** to the OPEN position first.

6.21 Gear shift

The selection of the appropriate gear is a prerequisite for a physically comfortable ride and making sure that the electric drive system functions properly. The ideal pedalling frequency is between 70 and 80 revolutions per minute.

- ▶ Stop pedalling briefly when changing gears. This makes it easier to switch gears and reduces wear on the drivetrain. However, keep the crank moving while switching gears.

6.21.1 Using the derailleur gears

Only applies to pedelecs with this equipment

The speed and range can be increased while applying the same force if you select the right gear.

- ✓ Stop pedalling briefly when changing gears. This makes it easier to switch gears and reduces wear on the drivetrain. However, keep the crank moving while switching gears.

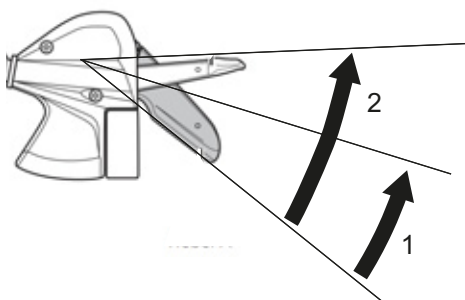


Figure 128: Switching gears with lever A, using gear shift SL-M315 as an example

Lever A switches from a smaller pinion to a larger one. The number of pinions switched depends on the selected position of lever A.

- ▶ Place shifter A in position 1.
- ⇒ System shifts one pinion higher.
- ▶ Place shifter A in position 2.
- ⇒ System shifts two pinions higher.

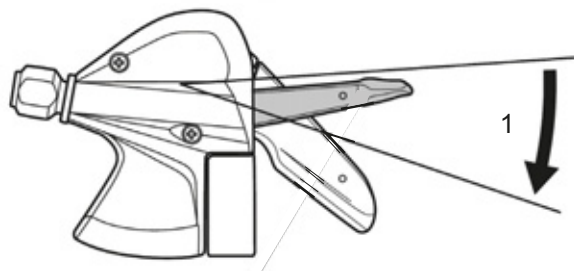


Figure 129: Switching gears with lever B, using gear shift SL-M315 as an example

Lever B switches from a larger pinion to a smaller one.

- ▶ Place shifter B in position 1.
- ⇒ System shifts one pinion lower.

Switching gears

- ▶ Select the appropriate gear with the gear shift unit.
- ⇒ The gear shift switches the gear.
- ⇒ The shifter returns to its original position.
- ▶ Clean and lubricate the rear derailleur if gear changes block.

6.22 Parking

Notice

Heat or direct sunlight can cause the *tyre pressure* to increase above the permitted maximum pressure. This can destroy the *tyres*.

- ▶ Never park the pedelec in the sun.
- ▶ On hot days, regularly check the *tyre pressure* and adjust it as necessary.

Moisture penetrating at low temperatures may impair individual functions due to the open structural design.

- ▶ Always keep the pedelec dry and free from frost.
- ▶ If the pedelec is used at temperatures below 3 °C, the specialist dealer must perform maintenance beforehand and prepare it for winter use.

The pedelec's force of weight may cause the kickstand to sink into soft ground, possibly causing the pedelec to topple over as a result.

- ▶ The pedelec must be parked on firm, level ground only.

- 1 Switch off drive system (see [Section 6.17.2](#)).
- 2 After getting off, use your foot to lower the kickstand completely before parking. Ensure that it is stable.
- 3 Park the pedelec carefully and check that it is stable.
- 4 Protect saddle with saddle cover if you park the pedelec outside.
- 5 Lock the pedelec with the bicycle lock.

- 6 Remove the on-board computer (see [Section 6.18.1.1](#)), battery (see [Section 6.16.1.1](#), [6.16.2.1](#) or [6.16.3.1](#)) and mobile phone to protect against theft.
- 7 Clean and service pedelec after every ride; see [Section 7.2](#).

Check list after each ride

| Cleaning | | |
|--------------------------|-----------------------|-----------------------------------|
| <input type="checkbox"/> | Lights and reflectors | See Section 7.2.5 |
| <input type="checkbox"/> | Brake | See Section 7.2.5 |
| <input type="checkbox"/> | Suspension fork | See Section 7.2.1 |
| <input type="checkbox"/> | Suspension seat post | See Section 7.2.6 |
| <input type="checkbox"/> | Rear frame damper | See Section 7.2.7 |
| <input type="checkbox"/> | Pedal | See Section 7.2.4 |
| Care | | |
| <input type="checkbox"/> | Suspension fork | See Section 3 |

6.22.1 Screwing in the All Up handlebars

Only applies to pedelecs with this equipment

Screw in the All Up stem to save space when parking.

- 1 Open stem clamping lever.



Figure 130: All Up with open stem clamping lever

- 2 Pull handlebars into highest possible position.

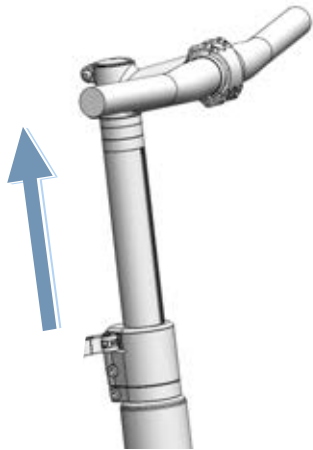


Figure 131: All Up pulled into highest possible position

- 3 Turn handlebars 90° in a clockwise direction.

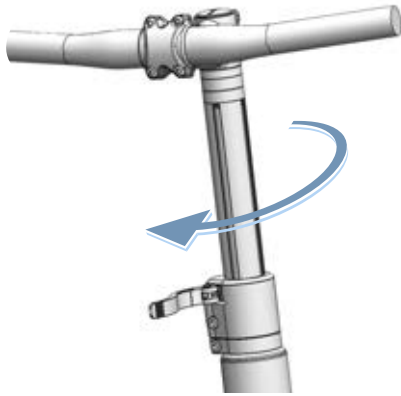


Figure 132: All Up screwed in

- 4 Place handlebars at required height
- 5 Close stem clamping lever.

7 Cleaning, servicing and maintenance

- Clean, service and maintain pedelec as indicated on check list.
Complying with these measures is the only way to reduce wear on components, increase the operating hours and guarantee safety.

| Check list before each ride | |
|-----------------------------|--|
| <input type="checkbox"/> | Check everything is sufficiently clean see Section 7.2 |
| <input type="checkbox"/> | Check guards see Section 7.1.1 |
| <input type="checkbox"/> | Check battery to ensure it is firmly in place See Section 6.7.3 |
| <input type="checkbox"/> | Check lights see Section 7.1.13 |
| <input type="checkbox"/> | Check brake see Section 7.1.14 |
| <input type="checkbox"/> | Check suspension seat post see Section 7.1.9 |
| <input type="checkbox"/> | Check pannier rack see Section 7.1.5 |
| <input type="checkbox"/> | Check bell see Section 7.1.10 |
| <input type="checkbox"/> | Check handles see Section 7.1.11 |
| <input type="checkbox"/> | Check rear frame damper see Section 7.1.4 |
| <input type="checkbox"/> | Check wheel concentricity see Section 7.1.7 |
| <input type="checkbox"/> | Check frame see Section 7.1.2 |
| <input type="checkbox"/> | Check quick releases see Section 7.1.8 |
| <input type="checkbox"/> | Check guards see Section 7.1.6 |
| <input type="checkbox"/> | Check USB cover see Section 7.1.12 |

| Check list after each ride | |
|----------------------------|---|
| <input type="checkbox"/> | Clean lights see Section 7.2.1 |
| <input type="checkbox"/> | Clean reflectors see Section 7.2.1 |
| <input type="checkbox"/> | Clean brake see Section 7.2.5 |
| <input type="checkbox"/> | Clean suspension fork see Section 7.2.2 |
| <input type="checkbox"/> | Care for suspension fork see Section 3 |
| <input type="checkbox"/> | Clean suspension seat post see Section 7.2.6 |
| <input type="checkbox"/> | Clean rear frame damper see Section 7.2.7 |
| <input type="checkbox"/> | Clean the pedals see Section 7.2.4 |

| Check list for weekly tasks | |
|-----------------------------|---|
| <input type="checkbox"/> | Clean chain see Section 7.3.18 |
| <input type="checkbox"/> | City, folding, cargo and children's bikes and bicycles for young adults When dry: every 10 days In wet conditions: every 2–6 days |
| <input type="checkbox"/> | Trekking and racing bikes When dry: every 140–200 km In wet conditions: every 100 km |
| <input type="checkbox"/> | Mountain bikes When dry: every 60–100 km In wet conditions: after every ride |
| <input type="checkbox"/> | Belt (every 250–300 km) see Section 7.3.17 |
| <input type="checkbox"/> | Care for chain. See Section 7.4.16 and Section 7.4.16.1 |
| <input type="checkbox"/> | City, folding, cargo and children's bikes and bicycles for young adults When dry: every 10 days In wet conditions: every 2–6 days |
| <input type="checkbox"/> | Trekking and racing bikes When dry: every 140–200 km In wet conditions: every 100 km |
| <input type="checkbox"/> | Mountain bikes When dry: every 60–100 km In wet conditions: maintain every time |
| <input type="checkbox"/> | Maintain all-round chain guard. see Section 7.4.16.1 |
| <input type="checkbox"/> | Check tyre pressure (at least once a week) see Section 7.5.1.1 |
| <input type="checkbox"/> | Check tyres (every 10 days) see Section 7.5.1.2 |
| <input type="checkbox"/> | eightpins seat post Refill oil (every 20 hours) see Section 7.4.18 |

| Check list for monthly tasks | |
|------------------------------|--|
| <input type="checkbox"/> | Cleaning the battery see Section 7.3.2 |
| <input type="checkbox"/> | Clean control panel see Section 7.3.1 |
| <input type="checkbox"/> | Clean on-board computer see Section 7.3.1 |
| <input type="checkbox"/> | Check disc brake linings once a month or after braking 1,000 times see Section 7.5.2.6 |
| <input type="checkbox"/> | Check rim brake brake linings (once a month or after braking 3000 times) see Section 7.5.1.3 |
| <input type="checkbox"/> | Check the rim brake surface. see Section 7.5.2.6 |
| <input type="checkbox"/> | Clean brake lever see Section 7.3.15.1 |
| <input type="checkbox"/> | Clean brake disc see Section 7.3.16 |
| <input type="checkbox"/> | Check brake disc see Section 7.5.2.4 |
| <input type="checkbox"/> | Check brake Bowden cables. see Section 7.5.2.3 |
| <input type="checkbox"/> | Clean pannier rack see Section 7.3.4 |
| <input type="checkbox"/> | Clean handles see Section 7.3.7 |
| <input type="checkbox"/> | Care for handles see Section 7.4.8 |
| <input type="checkbox"/> | Check hand brake see Section 7.5.2.1 |
| <input type="checkbox"/> | Check hydraulic system see Section 7.5.2.2 |
| <input type="checkbox"/> | Clean cassette see Section 7.3.14 |
| <input type="checkbox"/> | Clean chain and all-round chain guard see Section 7.3.18.1 |
| <input type="checkbox"/> | Clean chain wheels see Section 7.3.14 |
| <input type="checkbox"/> | Clean leather handles see Section 7.3.7.1 |
| <input type="checkbox"/> | Care for leather handles see Section 7.4.8.2 |
| <input type="checkbox"/> | Clean the leather saddle see Section 7.3.9.1 |
| <input type="checkbox"/> | Care for leather saddle see Section 7.4.10 |
| <input type="checkbox"/> | Clean handlebars see Section 7.3.6 |
| <input type="checkbox"/> | Cleaning the motor see Section 7.3.3 |

| Check list for monthly tasks | |
|------------------------------|---|
| <input type="checkbox"/> | Clean hub see Section 7.3.12 |
| <input type="checkbox"/> | Cleaning the frame see Section 7.3.4 |
| <input type="checkbox"/> | Clean tyres see Section 7.3.10 |
| <input type="checkbox"/> | Check back-pedal brake see Section 7.5.2.5 |
| <input type="checkbox"/> | Clean saddle see Section 7.3.9 |
| <input type="checkbox"/> | Clean seat post see Section 7.3.8 |
| <input type="checkbox"/> | Care for seat post see Section 7.4.9 |
| <input type="checkbox"/> | Clean shifter see Section 7.3.13.1 |
| <input type="checkbox"/> | Cleaning gear shift see Section 7.3.13 |
| <input type="checkbox"/> | Clean shift cables see Section 7.3.13 |
| <input type="checkbox"/> | Check disc brake see Section 7.5.2.4 |
| <input type="checkbox"/> | Clean mudguard see Section 7.3.4 |
| <input type="checkbox"/> | Clean kickstand see Section 7.3.4 |
| <input type="checkbox"/> | Clean spokes and spoke nipples see Section 7.3.11 |
| <input type="checkbox"/> | Care for spoke nipples see Section 7.4.12 |
| <input type="checkbox"/> | Clean rigid fork see Section 7.3.4 |
| <input type="checkbox"/> | Clean transmission see Section 7.3.13 |
| <input type="checkbox"/> | Clean front derailleur see Section 7.3.14 |
| <input type="checkbox"/> | Clean stem see Section 7.3.5 |

| Check list for tasks every three months | |
|---|---|
| <input type="checkbox"/> | Check brake pressure point see Section 7.5.2.1 |
| <input type="checkbox"/> | Check rim brake (100 hours trip time or every 2,000 km) see Section 7.5.2.6 |
| <input type="checkbox"/> | Check spokes see Section 7.5.1.3 |

| Check list for tasks to do every six months (or every 1,000 km) | |
|---|---|
| <input type="checkbox"/> | Check Bowden cables gear shift see Section 7.5.10.2 |
| <input type="checkbox"/> | Care for brake lever see Section 7.4.17.1 |
| <input type="checkbox"/> | Care for carbon seat post see Section 7.4.9.2 |
| <input type="checkbox"/> | Check electric cables in gear shift see Section 7.5.10.1 |
| <input type="checkbox"/> | Care for suspension seat post see Section 7.4.9.1 |
| <input type="checkbox"/> | Care for rims see Section 7.4.13 |
| <input type="checkbox"/> | Check rims see Section 7.5.1.3 |
| <input type="checkbox"/> | Check rim hooks see Section 7.5.1.3 |
| <input type="checkbox"/> | Care for fork see Section 7.4.2 |
| <input type="checkbox"/> | Check gear shift see Section 7.5.10 |
| <input type="checkbox"/> | Care for pannier rack see Section 7.4.3 |
| <input type="checkbox"/> | Check chain see Section 7.5.8 |
| <input type="checkbox"/> | Check derailleur gears See Section 7.5.9.1 and Section 7.5.10.3 |
| <input type="checkbox"/> | Check chain tension see Section 7.5.9 |
| <input type="checkbox"/> | Check wheel see Section 7.5.1 |
| <input type="checkbox"/> | Care for handlebars see Section 7.4.7 |
| <input type="checkbox"/> | Check handlebars see Section 7.5.5 |
| <input type="checkbox"/> | Check light see Section 7.5.3 |
| <input type="checkbox"/> | Care for hub see Section 7.4.11 |
| <input type="checkbox"/> | Check hub gear see Section 7.5.9.2 |
| <input type="checkbox"/> | Check nipple holes see Section 7.5.1.4 |
| <input type="checkbox"/> | Care for pedals see Section 7.4.15 |
| <input type="checkbox"/> | Check pedal see Section 7.5.7 |
| <input type="checkbox"/> | Care for frame see Section 7.4.1 |
| <input type="checkbox"/> | Check belt tension see Section 7.5.9 |
| <input type="checkbox"/> | Check saddle see Section 7.5.6 |
| <input type="checkbox"/> | Care for shifter see Section 7.4.14.2 |
| <input type="checkbox"/> | Care for rear derailleur articulated shaft see Section 7.4.14.1 |
| <input type="checkbox"/> | Care for rear derailleur jockey wheels see Section 7.4.14.1 |
| <input type="checkbox"/> | Care for kickstand see Section 7.4.5 |
| <input type="checkbox"/> | Check kickstand stability see Section 7.5.15 |

| Check list for tasks to do every six months (or every 1,000 km) | |
|---|--|
| <input type="checkbox"/> | Check steering headset see Section 8.5.6 |
| <input type="checkbox"/> | Servicing the stem see Section 7.4.6 |
| <input type="checkbox"/> | Checking the stem see Section 7.5.4 |

| Yearly or every 2,000 km | |
|--------------------------|---|
| <input type="checkbox"/> | Adjust hub with cone bearing see Section 8.5.6 |
| <input type="checkbox"/> | Check nipple well (every 1,000 hours or every 2,000 km) see Section 7.5.1.5 |

 **WARNING**
Crash caused by brake failure

Oil or lubricant on the brake disc in a disc brake or on the rim of a rim brake can cause the brake to fail completely. This may cause a crash with serious injuries.

- ▶ Never allow oil or lubricant to come into contact with the brake disc or brake linings or on the rim of a rim brake.
- ▶ If the brake linings have come into contact with oil or lubricant, contact specialist dealer to have the components cleaned or replaced.
- ▶ Apply the brakes a few times to test them after cleaning, servicing or repair.

The brake system is not designed for use on a pedelec which is placed on its side or turned upside down. The brake may not function correctly as a result. This can cause a crash, which may result in injuries.

- ▶ If the pedelec is placed on its side or turned upside down, apply the brakes a couple of times before setting off to ensure they work as normal.

The brake seals are unable to withstand high pressures. Damaged brakes can fail and cause an accident with injury.

- ▶ Never clean the pedelec with a pressure washer or compressed air.

Take great care when using a hosepipe. Never point the water jet directly at the seal section.

 **CAUTION**
Crash and falling caused by unintentional activation

There is a risk of injury if the drive system is activated unintentionally.

Remove the battery before cleaning.

Notice

Water may enter the inside of the bearings if you use a steam jet. This dilutes the lubricant inside, the friction increases and, as a result, the bearings are permanently damaged in the long term. Water may also penetrate the electric components and damage them permanently.

- ▶ Never clean pedelec with a pressure washer, water jet or compressed air.

Greased parts, such as the seat post, the handlebars or the stem, may no longer be safely and reliably clamped.

- ▶ Never apply grease or oil to parts which are clamped.

Harsh cleaning agents such as acetone, methylene and trichloroethylene and solvents such as thinners, alcohol and corrosion protection can attack pedelec components and damage them permanently.

- ▶ Use approved bicycle or pedelec cleaning and care products only.

7.1 Before each ride

Complying with these cleaning instructions is the only way to reduce wear on components, increase the operating hours and guarantee safety.

7.1.1 Checking the guards

The chain or belt guards, mudguards or the motor cover can break off and go missing when the pedelec is transported or parked outside.

- ▶ Check that all guards are in place.

7.1.2 Checking the frame

- ▶ Check frame for cracks, warping and damage to the paintwork.
- ▶ If there are any cracks, warping or damage to the paintwork, remove the pedelec from service. Contact specialist dealer.

7.1.3 Checking the fork

- ▶ Check fork for cracks, warping, tarnished components, leaked oil and damage to the paintwork. Also look at hidden parts on the underside.
- ⇒ If there are any cracks, warping, tarnished components, leaked oil or damage to the paintwork, remove the pedelec from service. Contact specialist dealer.

7.1.4 Checking the rear frame damper

- ▶ Check rear frame damper for cracks, warping, tarnished components, leaked oil and damage to the paintwork. Also look at hidden parts on the underside.
- ⇒ If there are any cracks, warping, tarnished components, leaked oil or damage to the paintwork, remove the pedelec from service. Contact specialist dealer.

7.1.5 Checking the pannier rack

- 1 Hold onto pedelec by its frame. Hold onto pannier rack with the other hand.
- 2 Move the pannier rack backwards and forwards to check that all screw connections are firmly in place.
 - ⇒ Tighten loose screws.
 - ⇒ Attach loose baskets permanently with a basket bracket or cable ties.

7.1.6 Checking the guards

- 1 Hold onto pedelec by its frame. Hold onto mudguard rack with the other hand.
- 2 Move the mudguard backwards and forwards to check that all screw connections are firmly in place.
 - ⇒ Tighten loose screws.

7.1.7 Checking wheel concentricity

- ▶ Lift the front and rear wheels one after the other. and spin each wheel when lifted.
- ⇒ If the wheel is loose or is crooked when it turns, take pedelec out of service. Contact specialist dealer.

7.1.8 Checking the quick releases

- ▶ Check quick releases to ensure that all quick releases are firmly in their fully closed end position.
 - ⇒ If a quick release is not firmly in its closed end position, open quick release and place in its end position.
 - ⇒ If the quick release cannot be firmly placed in its end position, take pedelec out of service. Contact specialist dealer.

7.1.9 Checking the suspension seat post

- ▶ Deflect and let the suspension seat post rebound.
 - ⇒ If you hear unusual noises when the suspension seat post deflects and rebounds, or it yields without any resistance, take pedelec out of service. Contact specialist dealer.

7.1.10 Checking the bell

- 1 Press the bell button downwards.
 - 2 Let button spring back.
- ⇒ If you do not hear a clear, distinct ring of the bell, replace bell. Contact specialist dealer.

7.1.11 Checking the handles

- ▶ Check the handles are firmly in place.
- ⇒ Screw loose handles firmly into place.

7.1.12 Checking the USB cover

- ⇒ If featured, check the position of the *cover on the USB port* on a regular basis and adjust if necessary.

7.1.13 Checking the lighting

- 1 Switch light on.
 - 2 Check that the front and rear lights come on.
- ⇒ If the front and rear lights do not come on, take pedelec out of service. Contact specialist dealer.

7.1.14 Checking the brake

- 1 Pull both brake levers when stationary.
 - 2 Push the pedals.
- ⇒ If no resistance is generated in the usual brake lever position, take pedelec out of service. Contact specialist dealer.
- ⇒ If the brake is losing fluid, take pedelec out of service. Contact specialist dealer.

7.2 After each ride

Complying with these cleaning instructions is the only way to reduce wear on components, increase the operating hours and guarantee safety.

The following items should be ready for use to clean the pedelec after each ride:


| Tool | | Cleaning agent | |
|--|---|--|--|
|  Cloth |  Bucket |  Water |  Dish-washing liquid |
|  Brush |  Fork oil | | |

Table 45: Required tools and cleaning agents after each ride

7.2.1 Cleaning the lights and reflectors



- 1 Clean front light, rear light and reflectors with a damp cloth.

7.2.2 Cleaning the suspension fork



- 1 Remove dirt and deposits from the stanchions and deflector seals with a damp cloth. Check the stanchions for dents, scratches, staining or leaking oil.
- 2 Lubricate the dust seals and stanchions with a few drops of silicone spray.
- 3 Care for the suspension fork after cleaning.

7.2.3 Caring for the suspension fork



- ▶ Treat dust seals with fork oil.

7.2.4 Cleaning the pedals



- ▶ Clean pedals with a brush and soapy water.

7.2.5 Cleaning the brake



- ▶ Clean dirt on the rim and brake components with a slightly dampened cloth.

7.2.6 Cleaning the suspension seat post



- ▶ Clean dirt on the articulated joints with a slightly dampened cloth immediately after a ride.

7.2.7 Cleaning the rear frame damper



- ▶ Clean dirt on the articulated joints with a slightly dampened cloth immediately after a ride.

7.3 Basic cleaning

Complying with these basic cleaning instructions is the only way to reduce wear on components, increase the operating hours and guarantee safety.

The following are required for basic cleaning:

| Tool | | Cleaning agent | |
|---|---|---|---|
|  |  |  |  |
| Gloves | Toothbrush | Water | Lubricant |
|  |  |  |  |
| Cloth | Paintbrush | Dish-washing liquid | Brake cleaner |
|  |  |  |  |
| Sponge | Watering can | Degreaser | Leather cleaner |
|  |  | | |
| Brushes | Bucket | | |

Table 46: Required tools and cleaning agents for basic cleaning

- ✓ Remove battery and on-board computer before thorough cleaning.

7.3.1 On-board computer and control panel



Notice

If water enters the on-board computer, it will be permanently damaged.

- ▶ Never immerse the on-board computer in water.
 - ▶ Never use a cleaning agent.
-
- ▶ Carefully clean the on-board computer and control panel with a soft, damp cloth.

7.3.2 Rechargeable battery



CAUTION

Risk of fire and explosion due to penetration by water

The battery is only protected from simple spray water. Penetration by water can cause a short circuit. The battery may self-ignite and explode.

- ▶ Keep contacts dry and clean.
- ▶ Never immerse the battery in water.

Notice

- ▶ Never use a cleaning agent.

- 1 Clean the battery electrical connections with a dry cloth or paintbrush only.
- 2 Wipe off the decorative sides with a damp cloth.

7.3.3 Motor



Notice

If water enters the motor, it will be permanently damaged.

- ▶ Never open the motor.
 - ▶ Never immerse the motor in water.
 - ▶ Never use cleaning agents.
-
- ▶ Carefully clean the motor on the outside with a soft, damp cloth.

7.3.4 Frame, fork, pannier rack, guards and kickstand



- 1 Soak the components with dish-washing detergent if the dirt is thick and ingrained.
- 2 After leaving it to soak for a short time, remove the dirt and mud with a sponge, brush and toothbrushes.
- 3 Rinse off the components with water from a watering can.
- 4 Wipe away oil stains with a degreaser.

7.3.5 Stem



- 1 Clean stem with a cloth and soapy water.
- 2 Rinse off component with water from a watering can.

7.3.6 Handlebars



- 1 Clean handlebars, including handles and all gears or twist grips, with a cloth and soapy water.
- 2 Rinse off component with water from a watering can.

7.3.7 Handles



- 1 Clean handles with sponge, water and soapy water.
- 2 Rinse off component with water from a watering can.
- 3 Care for rubber handles after cleaning (see [Section 7.4.8](#)).

7.3.7.1 Leather handles



Leather is a natural product and has similar properties to human skin. Regular cleaning and care help to prevent leather dehydrating, fading or becoming brittle or stained.

- 1 Remove dirt with a soft, damp cloth.
- 2 Remove stubborn stains with a leather cleaner.
- 3 Care for leather handles after cleaning (see [Section 7.4.8.2](#)).

7.3.8 Seat post



- 1 Clean seat post with a cloth and soapy water.
- 2 Rinse off component with water from a watering can.
- 3 Wipe away any grease or assembly paste residue with a cloth and degreaser.

7.3.9 Saddle



- 1 Clean the saddle with lukewarm water and a cloth dampened with soapy water.
- 2 Rinse off component with water from a watering can.

7.3.9.1 Leather saddle



Leather is a natural product and has similar properties to human skin. Regular cleaning and care help to prevent leather dehydrating, fading or becoming brittle or stained.

- 1 Remove dirt with a soft, damp cloth.
- 2 Remove stubborn stains with a leather cleaner.
- 3 Care for leather saddle after cleaning (see [Section 7.4.10](#)).

7.3.10 Tyres



- 1 Clean tyres with a sponge, a brush and soap cleaner.
- 2 Rinse off component with water from a watering can.
- 3 Remove any embedded chips and small stones.

7.3.11 Spokes and spoke nipples

- 1 Clean spokes from the inside to the outside with a sponge, brush and soapy water.
- 2 Clean rim with a sponge.
- 3 Rinse off component with water from a watering can.
- 4 Care for spoke nipples after cleaning (see [Section 7.4.12](#)).

7.3.12 Hub



- 1 Put on protective gloves.
- 2 Remove dirt from hub with a sponge and soapy water.
- 3 Rinse off component with water from a watering can.
- 4 Wipe off oily dirt with a degreaser and a cloth.

7.3.13 Switching elements



- 1 Clean gear shift, shift cables and transmission with water, a brush and dish-washing detergent.
- 2 Rinse off component with water from a watering can.

7.3.13.1 Shifter



- ▶ Carefully clean shifter with a damp, soft cloth.

7.3.14 Cassette, chain wheels and front derailleur



- 1 Put on protective gloves.
- 2 Spray the cassette, the chain wheels and the front derailleur with a degreasing agent.
- 3 Clean coarse dirt with a brush after soaking for a short time.
- 4 Wash down all parts with dish-washing detergent and a toothbrush.
- 5 Rinse off component with water from a watering can.

7.3.15 Brake

7.3.15.1 Brake lever



- ▶ Carefully clean the brake levers with a damp, soft cloth.

7.3.16 Brake disc



Notice

- ▶ Protect brake disc against lubricants and grease from hands.

- 1 Put on protective gloves.
- 2 Spray brake disc with brake disc cleaning spray.
- 3 Wipe with a cloth.

7.3.17 Belt



Notice

- ▶ Never use aggressive (acid-based) cleaners, rust removers or degreasers when cleaning the belt.

- 1 Dampen a cloth with soapy water. Place the cloth on the belt.
- 2 Hold and apply slight pressure while slowly turning the rear wheel, so the belt passes through the cloth.

7.3.18 Chain



Notice

- ▶ Never use aggressive (acid-based) cleaners, rust removers or degreasers when cleaning the chain.
- ▶ Never use gun oil or rust remover spray.
- ▶ Never use chain cleaning devices or chain cleaning baths.
- ▶ Have chain with all-round guard cleaned and cared for during maintenance.

- ✓ Place newspaper or paper towels underneath to collect dirt.

- 1 Slightly dampen a brush with dish-washing liquid. Brush both sides of the chain.
- 2 Dampen a cloth with soapy water. Place the cloth on the chain.
- 3 Hold and apply slight pressure while slowly turning the rear wheel, so the chain passes through the cloth.
- 4 Wipe off oily, dirty chains thoroughly with a cloth and degreaser.
- 5 Care for chain after cleaning (see [Section 7.4.16](#)).

7.3.18.1 Chain with all-round chain guard



Notice

The chain guard must be removed before cleaning. Contact specialist dealer.

- ▶ Clean water hole on the chain guard lower surface.
- ▶ Care for chain after cleaning (see [Section 7.4.16.1](#)).

7.4 Servicing

Complying with these servicing instructions is the only way to reduce wear on components, increase the operating hours and guarantee safety.

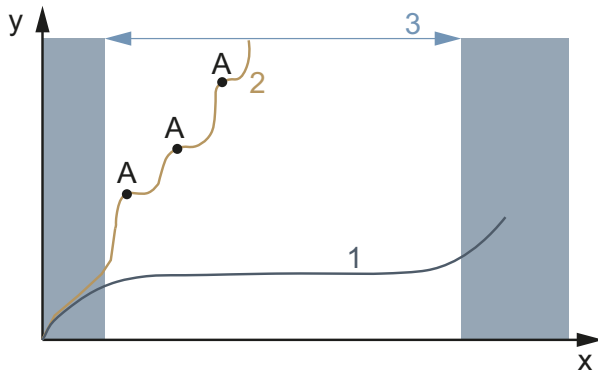


Figure 133: Diagram showing wear, operating hours (x) vs. material erosion (y)

The service life (3) of an optimally serviced drive chain (1) is almost three times as long with lubrication (A) compared to a drive chain (2) lubricated on an irregular basis.

These tools and cleaning agents are required for servicing:











 
| Tool | | Cleaning agent | |
|--|---|---|---|
|  Cloth |  Toothbrush |  Frame wax spray |  Silicone or Teflon oil |
| | |  Acid-free lubricating grease |  Fork oil |
| | |  Teflon spray |  Spray oil |
| | |  Chain oil |  Leather care product |

Table 47: Required tools and cleaning agents for servicing

7.4.1 Frame



Notice

- ▶ Hard wax polish and protection wax are particularly resistant on gloss paintwork. These car accessory retail products are unsuitable for matt paint finishes.
- ▶ Try wax spray out on a small spot before application.

- 1 Dry frame with a cloth.
- 2 Spray frame with spray wax and leave to dry.
- 3 Wipe away any wax residue with a cloth.

7.4.2 Fork



Notice

- ▶ Hard wax polish and protection wax are particularly resistant on gloss paintwork. These car accessory retail products are unsuitable for matt paint finishes.
- ▶ Try wax spray out on a small spot before application.

- 1 Dry frame with a cloth.
- 2 Spray care oil on frame and leave to dry.
- 3 Wipe away any wax residue with a cloth.

7.4.3 Pannier rack



- 1 Dry pannier rack with a cloth.
- 2 Spray pannier rack with spray wax and leave to dry.
- 3 Wipe pannier rack with a cloth.
- 4 Protect chafing points on panniers with adhesive film. Replace worn adhesive film.
- 5 Care for coil springs with silicone spray or wax spray from time to time.

7.4.4 Mudguard



- Depending on the mudguard material's requirements, apply hard wax polish, metal polish or plastic care product as per the product instructions.

7.4.5 Servicing the kickstand



- 1 Dry kickstand with a cloth.
- 2 Spray kickstand rack with spray wax and leave to dry.
- 3 Wipe down kickstand with a cloth.
- 4 Lubricate the kickstand joints with spray oil.

7.4.6 Stem



- 1 Spray painted and polished metal surfaces with wax spray and leave to dry.
- 2 Wipe away any wax residue with a cloth.
- 3 Apply silicone or Teflon oil to the stem shaft tube and the quick release lever pivot point with a cloth.
- 4 If you have a Speedlifter Twist, also apply oil to the unlocking bolt using the groove in the Speedlifter body.
- 5 Apply a little acid-free lubricant grease between the stem quick release lever and the sliding piece to reduce the quick release lever operating force.
- 6 If you have a stem with a cone clamp, apply a new protective layer of assembly paste onto the stem and fork steerer contact point once a year.

7.4.7 Handlebars



- 1 Spray painted and polished metal surfaces with wax spray and leave to dry.
- 2 Wipe away any wax residue with a cloth.

7.4.8 Handle

7.4.8.1 Rubber handles

- 1 Apply talcum powder to sticky rubber handles.

Notice

- Never apply talcum powder to leather or foam handles.

7.4.8.2 Leather handle



Standard leather care products keep leather smooth and resistant, brighten its appearance and improve or replace stain protection.

- 1 Try leather care product out on a less visible spot before use.
- 2 Care for leather handles with a leather care product.

7.4.9 Seat post

- 1 Carefully preserve screw connections with wax spray. In doing so, ensure that no wax is applied to the metal contact surfaces.
- 2 Replace the assembly paste protective layer on the metal contact surfaces on the seat post and seat tube every year.

7.4.9.1 Suspension seat post



- 1 Lubricate articulated joints with spray oil.
- 2 Deflect and let the suspension seat post rebound five times. Remove any surplus lubricant with a clean cloth.

7.4.9.2 Carbon seat post



Notice

If carbon seat posts are used in an aluminium frame without protective assembly paste, rain and puddle water can cause contact corrosion. It may then take a great deal of force to remove the seat post. The carbon seat post may break as a result.

- 1 Take out the carbon seat post.
- 2 Remove old assembly paste with a cloth.
- 3 Apply new assembly paste with a cloth.
- 4 Re-insert the carbon seat post.

7.4.10 Leather saddle



Standard leather care products keep leather smooth and resistant, brighten its appearance and improve or replace stain protection.

- 1 Try leather care product out on a less visible spot before use.
- 2 Care for leather saddle from below with a leather care product. Only care for the top of leather saddles with a leather care product if they are badly worn and dried-out.
- 3 Avoid wearing light-coloured trousers after care due to staining.

7.4.11 Hub



- 1 Apply wax spray especially around the spoke holes. In doing so, ensure that no wax is applied to brake parts.
- 2 Treat rubber seals with a cloth with one or two drops of silicone spray. Never use oil if you have disc brakes.

7.4.12 Spoke nipples



- 1 Apply wax spray onto the spoke nipples from the rim side.
- 2 Treat heavily corroded spoke nipples with a drop of penetrating of special care oil.

7.4.13 Rim



- ▶ Care for chrome rims, stainless steel rims and polished aluminium with chrome or metal polish. Never care for the brake surface with polish.

7.4.14 Gear shift

7.4.14.1 Rear derailleur articulated shafts and jockey wheels



- ▶ Treat front and rear derailleur articulated shafts and jockey wheels with Teflon spray.

7.4.14.2 Shifter



Notice

- ▶ Never treat shifters with degreaser or penetrating oil spray.
- ▶ Lubricate articulated joints and mechanical parts which are accessible from outside with a few drops of spray oil or precision mechanics oil.

7.4.15 Pedal



- 1 Treat pedals with spray oil. In doing so, ensure that no lubricant is applied to the pedal surfaces.
- 2 Lubricate seals and mechanical parts sparingly with a few drops of oil.
- 3 Remove any surplus lubricant with a clean cloth.
- 4 Spray metal foot rests with silicone spray.

7.4.16 Caring for the chain



- ✓ Place newspaper or paper towels underneath to collect chain oil.
- 1 Lift rear wheel.
- 2 Turn the crank briskly in an anti-clockwise direction.
- 3 Use slight finger pressure to the chain oil bottle to apply a wafer-thin thread of oil to the chain

links. The faster the crank is turned, the thinner the threads of oil will be.

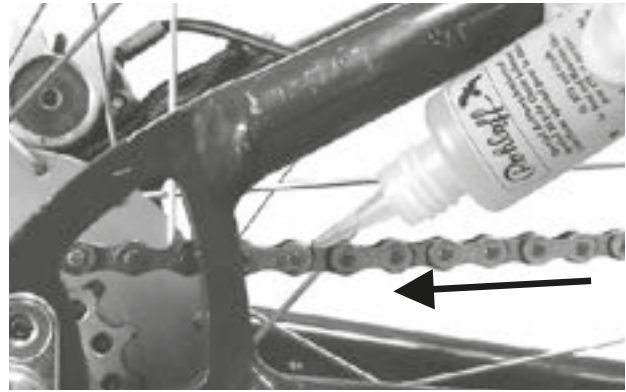


Figure 134: Lubricating the chain

- 4 Remove excessive chain oil with a cloth. If you apply too much oil, it will make the chain all the dirtier at a later point in time.
- 5 Leave chain oil to penetrate into the chain links for a few hours or overnight.

7.4.16.1 Caring for the chain and all-round chain guard



- ✓ Place newspaper or paper towels underneath to collect chain oil.
- 1 Lift rear wheel.
- 2 Turn the crank briskly in an anti-clockwise direction.
- 3 Use slight finger pressure to the chain oil bottle to apply a wafer-thin thread of oil onto the chain links through the oil hole on the upper surface of the chain guard. The faster the crank is turned, the thinner the threads of oil will be.
- 4 Remove excessive chain oil with a cloth. If you apply too much oil, it will make the chain all the dirtier at a later point in time.
- 5 Leave chain oil to penetrate into the chain links for a few hours or overnight.

7.4.17 Caring for the brake

7.4.17.1 Caring for the brake



Notice

- ▶ Never treat brake levers with degreaser or penetrating oil spray.
- ▶ Lubricate articulated joints and mechanical parts which are accessible from outside with a few drops of spray oil or precision mechanics oil.

7.4.18 Lubricating the eightpins seat post tube

- ▶ Use a 2.5 ml syringe to carefully fill eightpins Fluid V3 very slowly into the lubricating nipple on the outer tube.



Figure 135: Lubricating the seat post tube

Notice

- ▶ Fill a maximum of 2.5 ml since otherwise the reservoir inside will overflow and the oil will spill into the frame.

7.5 Maintenance

The following tools are required for maintenance:









| | |
|---|--|
|  | Gloves |
|  | Ring spanners 8 mm, 9 mm, 10 mm, 13 mm, 14 mm and 15 mm |
|  | Torque wrench Working range 5–40 Nm |
|  | by.schulz handlebars: TORX® bits: 4 mm, 5 mm and 6 mm If not: Hexagon bits: 4 mm, 5 mm and 6 mm |
|  | Hexagon socket spanner 2 mm, 2.5 mm, 3 mm, 4 mm, 5 mm, 6 mm and 8 mm |
|  | Spline nut socket T25 |
|  | Cross-recess screwdriver |
|  | Slotted-head screwdriver |

Table 48: Tools required for maintenance

7.5.1 Wheel

- 1 Hold pedelec.
- 2 Hold onto the front or rear wheel and try to move the wheel sideways. In doing so, check to see if the wheel nuts or quick releases move.
 - ⇒ If the wheel, the wheel nut or quick release moves sideways, take pedelec out of service. Contact specialist dealer.
- 3 Lift pedelec slightly. Turn front or rear wheel. In doing so, check whether the wheel deflects sideways or outwards.
 - ⇒ If the wheel deflects sideways or outwards, take pedelec out of service. Contact specialist dealer.

7.5.1.1 Checking the tyre pressure

Notice

If the tyre pressure is too low in the tyre, the tyre does not achieve its load bearing capacity. The tyre is not stable and may come off the rim.

- ▶ If the tyre pressure is too high, the tyre may burst.

Tyres are wear parts and wear away due to fatigue, storage, environmental influences or mechanical impacts. Only optimum tyre pressure will guarantee effective protection against punctures, lower rolling resistance, a longer service life and greater safety.

Air loss

Even the most airtight tube will lose pressure on a continuous basis since the air pressures in a pedelec tyre are significantly higher and the wall thicknesses significantly finer than in a car tyre. Pressure loss of 1 bar per month can be regarded as normal. During this process, the pressure loss is significantly faster at high pressures and significantly slower at low pressures.

Checking tyre pressure

The permitted pressure range is indicated on the side of the tyre.



Figure 136: Tyre pressure in bar (1) and psi (2)

- ▶ Verify tyre pressure against the value noted in the pedelec pass every 10 days as a minimum.

Dunlop valve

Only applies to pedelecs with this equipment

The tyre pressure cannot be measured on the simple Dunlop valve. The tyre pressure is therefore measured in the filling hose when pumping slowly with the bicycle pump.

✓ It is recommendable to use a bicycle pump with a pressure gauge.

- 1 Unscrew and remove the valve cap.
- 2 Undo the rim nuts.
- 3 Connect the bicycle pump.
- 4 Pump up the tyre slowly and pay attention to the tyre pressure in the process.
- 5 Correct the tyre pressure to meet the specified value in the Pedelec pass.
- 6 If the tyre pressure is too high, unfasten the union nut, let air out and re-tighten the union nut.
- 7 Remove the bicycle pump.
- 8 Screw the valve cap tight.
- 9 Screw the rim nut gently against the rim with the tips of your fingers.

⇒ Correct tyre pressure if necessary (see [Section 6.5.8](#)).

Schrader valve

Only applies to pedelecs with this equipment

✓ It is recommended to use the air pump at a filling station. Older and easy bicycle pumps are unsuitable for filling tyres via a Schrader valve.

- 1 Unscrew and remove the valve cap.
 - 1 Undo the rim nuts.
 - 2 Attach the bicycle pump.
 - 3 Pump up the tyre slowly and pay attention to the tyre pressure in the process.
- ⇒ The tyre pressure has been adjusted as per the specifications.
- 4 Remove the bicycle pump.
 - 5 Screw the valve cap tight.

- 6 Screw the rim nut gently against the rim with the tips of your fingers.

⇒ Correct tyre pressure if necessary (see [Section 6.5.8](#)).

Presta valve

Only applies to pedelecs with this equipment

✓ It is recommendable to use a bicycle pump with a pressure gauge. The operating instructions for the bicycle pump must be adhered to.

- 1 Unscrew and remove the valve cap.
- 2 Open the knurled nut around four turns.
- 3 Carefully apply the bicycle pump so that the valve insert is not bent.
- 4 Pump up the tyre slowly and pay attention to the tyre pressure in the process.
- 5 Correct the tyre pressure as per the specifications on the tyre.
- 6 Remove the bicycle pump.
- 7 Tighten the knurled nut with your fingers.
- 8 Screw the valve cap tight.
- 9 Screw the knurled nut gently against the rim with the tips of your fingers.

⇒ Correct tyre pressure if necessary (see [Section 6.5.8](#)).

7.5.1.2 Checking the tyres

The tread is far less important for bicycle tyres than it is for car tyres, for example. Consequently, tyres can still be used with a worn tread with the exception of tyres on mountain bikes.

- 1 Check the tread wear. The tyre is worn if the anti-puncture protection or the carcass cords are visible.

Since resistance to punctures also depends on the thickness of the tread, it may make sense to change the tyre at an earlier stage.



Figure 137: Tyre without tread which can still be used (1) and tyre with puncture protection showing through (2), which needs to be replaced

- 2 Check the side walls for wear. If there are any cracks or tears, the tyre must be replaced.



Figure 138: Examples of fatigue cracks (1) and ageing cracks (2)

- ⇒ Replacing a wheel requires considerable mechanical expertise. If a tyre is worn, it needs to be replaced at a specialist dealer's.

7.5.1.3 Checking the rims



Crash caused by a worn rim

A worn rim can break and block the wheel. This may cause a crash with serious injuries.

- ▶ Check rim *wear* on a regular basis.
- ▶ Take pedelec out of service if the rim has any cracks or warping. Contact specialist dealer.

Rims are wear parts and wear away due to fatigue, mechanical impacts, environmental influences or due to braking if rim brakes are used.

- ▶ Check the rim well for wear.
 - ⇒ The rims of a rim brake with invisible wear indicator are worn as soon as the wear indicator becomes visible in the area of the rim joint.
 - ⇒ The rims with visible wear indicator are worn as soon as the black, all-round groove on the pad friction surface is no longer visible. We recommend that you also replace the *rims* with every second brake lining replacement.
- ▶ We recommend that you also replace the *rims* at the same time as every second brake lining replacement.

7.5.1.4 Checking the nipple holes

Nipples cause fatigue and stress on the edge of the nipple hole.

- ▶ Check whether there are cracks on the edge of the nipple hole.

If there are cracks on the edge of the nipple hole, contact your specialist dealer.

7.5.1.5 Checking the nipple well

The nipple holes can weaken the tyre bed.

- ▶ Check to see if cracks are emerging from the nipple holes.
 - ⇒ If there are cracks radiating from the nipple hole, contact your specialist dealer.

7.5.1.6 Checking the rim hooks

Mechanical impacts can warp the rim hooks. There is no longer a guarantee that a tyre can be fitted safely if this is the case.

- ▶ Check for twisted rim hooks.
 - ⇒ Replace rims with twisted rim hooks. Never repair the rim with pliers and bend the hook back.

7.5.1.7 Checking the spokes

- ▶ Press spokes slightly together with your thumb and index finger. Check to ensure that the tension is the same for all spokes.
 - ⇒ Contact your specialist dealer if the spokes are loose or are tensioned differently.

7.5.2 Checking the brake system



Crash caused by brake failure

Worn brake discs and brake linings and a lack of hydraulic fluid in the brake line reduce the braking power. This may cause a crash with serious injuries.

- ▶ Check brake disc, brake linings and the hydraulic brake system regularly. Contact specialist dealer.

The maintenance interval for the brake depends on how often it is used and the weather conditions. If the pedelec is used under extreme conditions such as rain, dirt or high mileage, maintenance must be performed more frequently.

7.5.2.1 Checking the hand brake

- 1 Check whether all screws in the handbrake are firmly in place.
 - ⇒ Tighten loose screws.
- 2 Check whether the brake lever is torsionally rigid on the handlebars.
 - ⇒ Tighten loose screws.
- 3 Check that there is a gap of at least 1 cm between the handbrake lever and the handle when the brake lever is fully applied.
 - ⇒ Adjust the grip distance if the gap is too narrow (see [Section 6.5.9.6](#), [Section 6.5.10.1](#) or [Section 6.5.10.2](#)).
- 4 Check the braking effect by pedalling while pulling the brake lever.
 - ⇒ If the braking power is too weak, adjust the brake pressure point (see [Section 6.5.9.4](#)).
 - ⇒ Contact your specialist dealer if the pressure point cannot be reached.

7.5.2.2 Checking the hydraulic system

- 1 Push the brake lever and check whether any brake fluid leaks out of the lines, connections or on the brake linings.
 - ⇒ If any brake fluid leaks from anywhere, take pedelec out of service. Contact specialist dealer.
- 2 Push brake lever and hold several times.
 - ⇒ If you are unable to clearly detect the pressure point and it changes, the brake needs to be bled. Contact specialist dealer.

7.5.2.3 Checking the Bowden cables

- 1 Pull on the brake lever several times. Check whether the Bowden cables get stuck or they make scraping noises.
- 2 Check the physical condition of the Bowden cables for visible damage and check to see if wire strands are broken.
 - ⇒ Have defective Bowden cables replaced. Contact specialist dealer.

7.5.2.4 Checking the disc brake

Only applies to pedelecs with this equipment

Checking the brake linings

- ▶ Check that the brake linings are no less than 1.8 mm wide at any point and there are no less than 2.5 mm between the brake lining and supporting plate.



Figure 139: Checking the brake lining when fitted with the help of the transport safety wear gauge

- 1 Check brake linings for damage and thick dirt.
 - ⇒ Have damaged or very dirty brake linings replaced. Contact specialist dealer.
- 2 Push brake lever and hold.
- 3 In doing so, check whether the transport safety wear gauge can fit between the brake lining supporting plates.
 - ⇒ If the transport safety wear gauge fits between the supporting plates, the brake linings have not reached their wear limit. Contact your specialist dealer if they are worn.

Checking the brake discs

- ✓ Put on gloves as the brake disc is very sharp.
- 1 Take hold of brake disc and joggle it gently to check whether the brake disc is positioned against the wheel free of backlash.
 - 2 Check that the brake linings move uniformly and symmetrically back towards the brake disc when you pull and release the brake lever.
 - ⇒ If the brake disc can be moved or the brake linings move erratically, contact your specialist dealer.
 - 3 Check that the brake disc is no less than 1.8 mm thick at any point.
 - ⇒ If the brake disc is under the wear limit and is less than 1.8 mm thick, the brake disc must be replaced. Contact specialist dealer.

7.5.2.5 Checking the back-pedal brake

Only applies to pedelecs with this equipment

- ✓ There are sharp corners and edges on the back-pedal brake. Wear gloves.
- 1** Hold and check counter support to ensure it is firmly attached to rear frame down tube.
 - ⇒ Tighten screw into the counter support if it is loose.
- 2** Carry out brake test. Listen for noises while doing so.
 - ⇒ If braking with the backpedal makes noises, contact specialist dealer.

7.5.2.6 Checking the rim brake

Only applies to pedelecs with this equipment

Checking the brake linings

- ▶ We recommend that you also replace the *rim*s at the same time as every second brake lining replacement.
- 1 Check whether the brake linings are worn evenly on both sides of the rim.
- 2 Check whether the brake linings are worn to one side.
 - ⇒ If the brake linings are worn unevenly or worn to one side, contact your specialist dealer.
- 3 Check whether the brake lining wear limit has been reached.
 - ⇒ If the brake linings have reached their wear limit, they need to be changed. Contact specialist dealer.
- 4 Check whether the brake linings can be twisted.
 - ⇒ If the brake linings twist, the brake lining bracket is defective and must be replaced. Contact specialist dealer.
- 5 Check that the brake linings move uniformly and symmetrically towards the rim when you pull and release the brake lever.
 - ⇒ If the brake linings move unevenly, contact your specialist dealer.

Checking the rim braking surface for wear

The side wall is more prone to wear in rim brakes. The wear depends on the stress loads during rides. Dirt between the brake lining and rim and strong braking forces can have an impact on the service life.

The rim must be replaced if the wall is less than 0.9 mm thick. If deep grooves are visible, rim hooks will warp towards the outside or the braking power will change, contact your specialist dealer as soon as possible.

- ▶ Replacing a rim requires considerable mechanical expertise. Only a specialist dealer should carry out this task.

7.5.3 Checking the lighting

- 1 Check the cable connections on the front and rear lights for damage and corrosion and ensure they are firmly in position.
- ⇒ If cable connections are damaged or corroded, or are not firmly in positioned. take pedelec out of service. Contact specialist dealer.
- 2 Switch light on.
- 3 Check that the front and rear lights come on.
- ⇒ If the front or rear lights do not come on, take pedelec out of service. Contact specialist dealer.
- 4 Place pedelec 5 m from the wall.
- 5 Stand the pedelec up straight. Hold the handlebars straight with both hands. Do not use the kickstand.

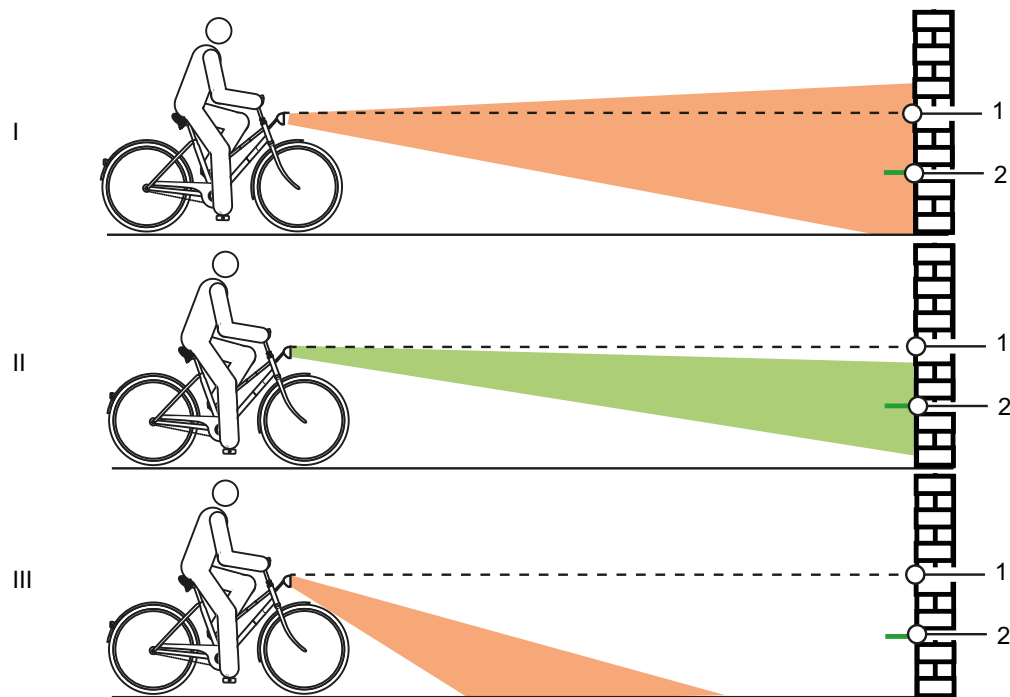


Figure 140: Light positioned too high (1), correctly (2) and too low (3)

- 6 Check the position of the light beam.
- ⇒ If the light is positioned too high or too low, adjust riding light (see [Section 6.5.13](#)).

7.5.4 Checking the stem

- ▶ The stem and quick release system must be inspected at regular intervals. The specialist dealer should adjust them if they require adjustment.
- ▶ If the hexagon socket head screw is also loosened, the headset backlash also needs to be adjusted. Medium-strength thread locker, such as Loctite blue, then needs to be applied to the loosened screws and the screws tightened as per specifications.
- ▶ Check metal contact surfaces on cone, stem clamping screw and fork steerer for corrosion.
- ⇒ Take pedelec out of service if there is any wear or signs of corrosion. Contact specialist dealer.

7.5.5 Check the handlebars

- 1 Take hold of handlebars with both hands on the handles.
 - 2 Move handlebars up and down and press to tilt.
- ⇒ If the handlebars move, contact specialist dealer.
- 3 Place front wheel in position where it can't move sideways (e.g. in a bike stand).
 - 4 Hold handlebars firmly with both hands.
 - 5 Check if the handlebars are able to twist against the front wheel.
- ⇒ If the handlebars can move, contact your specialist dealer.

7.5.6 Checking the saddle

- 1 Hold saddle firmly.
 - 2 Check whether the saddle twists, tilts or can be pushed in one direction or other.
- ⇒ If the saddle twists, tilts or can be pushed in one direction or other, adjust the saddle (see Section xxx).
 - ⇒ Contact your specialist dealer if the saddle cannot be fixed into position.

7.5.7 Checking the seat post

- 1 Take seat post out of the frame.
 - 2 Check seat post for cracks and corrosion.
 - 3 Reinsert seat post.
 - 4 Check pedal.
 - 5 Hold pedal and try to move it sideways toward the inside or outside. In doing so, observe whether the crank arm or bearing move sideways.
- ⇒ If the pedal, crank arm or crank bearing moves sideways, fasten screw on the pedal crank rear.
- 6 Hold pedal and try to move it upwards and downwards vertically. In doing so, observe whether the pedal, crank arm or crank bearing moves vertically.
- ⇒ If the pedal, crank arm or crank bearing moves vertically, fasten screw.

7.5.8 Checking the chain

- ▶ Check chain for rust or warping.
- ⇒ Replace a rusted chain since it will not be able to withstand the tensile loads from the drive. Contact your specialist retailer.

7.5.9 Checking the chain and belt tension

Notice

Excessive chain tension increases wear. If the chain tension is too low, there is a risk that the *chain* will slip off the *chain wheels*.

- ▶ Check the chain tension once a month.

- 7 If a hub gear is fitted, the rear wheel must be pushed backwards and forwards to tighten the chain. Contact specialist dealer.

7.5.9.1 Checking the derailleur gears

The chain is tensioned by the rear derailleur in pedelecs with derailleur gears.

- 1 Place the pedelec on stand.
 - 2 Check to see if the chain is sagging (visual inspection).
 - 3 Gently press the rear derailleur forwards to check whether it moves and whether it goes back into position by itself.
- ⇒ If the chain is sagging or the rear derailleur does not go back into position by itself, contact your specialist dealer.

7.5.9.2 Checking the hub gear

In the case of pedelecs with a hub gear or back-pedal brake, the chain or the belt is tensioned by a eccentric bearing in the bottom bracket axle. Special tools and specialist knowledge are required to tension the chain. Contact specialist dealer.

- ✓ Remove the chain guard on pedelecs with a circumferential chain guard.
- 1 Place the pedelec on stand.
 - 2 Check the chain and belt tension in three or four positions, turning the crank a full revolution.

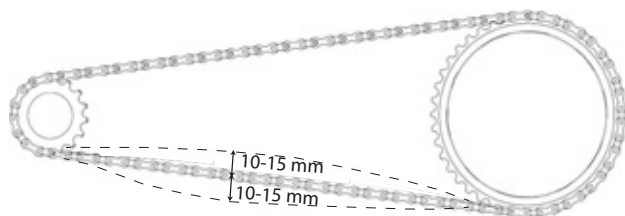


Figure 141: Checking the chain tension

- ⇒ If the chain or the belt can be pushed more than 2 cm, the chain will need to be re-tensioned. Contact specialist dealer.
- ⇒ If the chain or belt can only be pushed up and down less than 1 cm, you will need to the chain or belt slightly. Contact specialist dealer.
- ⇒ The ideal chain and belt tension has been achieved if the chain can be pushed between a maximum of 10 and 15 mm in the middle between the pinion and the toothed wheel. The crank must also turn without resistance.

7.5.10 Checking the gear shift

- 1 Check whether all gear shift components are free of damage.
- 2 Contact your specialist dealer if components are damaged.
- 3 Place the pedelec on stand.
- 4 Turn the pedal crank clockwise.
- 5 Switch through all speeds.
- 6 Check that pedelec can switch through all speeds without making unusual noises.
- 7 Adjust the gear shift if gears can not be changed correctly.

7.5.10.1 Electric gear shift

- 1 Check the cable connections for damage and corrosion and ensure they are firmly in position.
- ⇒ If cable connections are loose, damaged or corroded, contact your specialist dealer.

7.5.10.2 Mechanical gear shift

- 1 Change gear a number of times. Check whether the Bowden cables get stuck or they make scraping noises.
 - 2 Check the physical condition of the Bowden cables for visible damage and check to see if wire strands are broken.
- ⇒ Have defective Bowden cables replaced. Contact specialist dealer.

7.5.10.3 Checking the derailleur gears

- 1 Check that there is clearance between the chain tensioner and spokes.
- ⇒ If there is no clearance or the chain scrapes against the spokes or tyres, contact your specialist dealer.
- 2 Check that there is clearance between the chain or rear derailleur and spokes.
- ⇒ If there is no clearance or the chain scrapes against the spokes, contact your specialist dealer.

7.5.11 Adjusting gear shift

7.5.11.1 ROHLOFF hub

Only applies to pedelecs with this equipment

- 1 Check whether the shift cable tension is set in such a way that there is a perceptible play of around 5 mm when the shift handle is turned.
- 2 Adjust the shift cable tension by turning the tension adjuster.
 - ⇒ Unscrew the tension adjuster to increase the shift cable tension.
 - ⇒ Tighten the tension adjuster to decrease the shift cable tension.

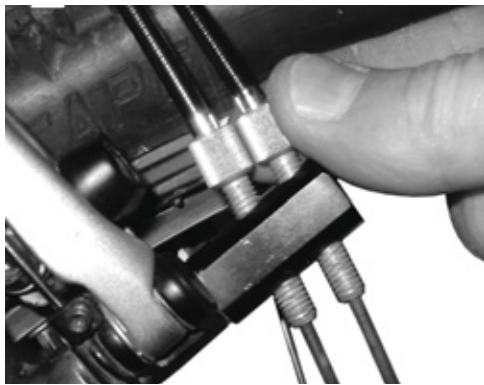


Figure 142: The tension adjuster on Rohloff hub versions with internal switch control is located on the tension counter support



Figure 143: The tension adjuster on Rohloff hub versions with external switch control is located on the cable box positioned on the left-hand side

- 3 If the marking and numbers on the shift handle do no longer coincide after the gear shift is adjusted, tighten one of the tension adjusters and screw out the other tension adjuster to the same extent.

7.5.12 Bowden-cable-operated gear shift, single-cable

Only applies to pedelecs with this equipment

- ▶ Adjust the play on the adjusting sleeves on the shifter housing to ensure a smooth gear shift.

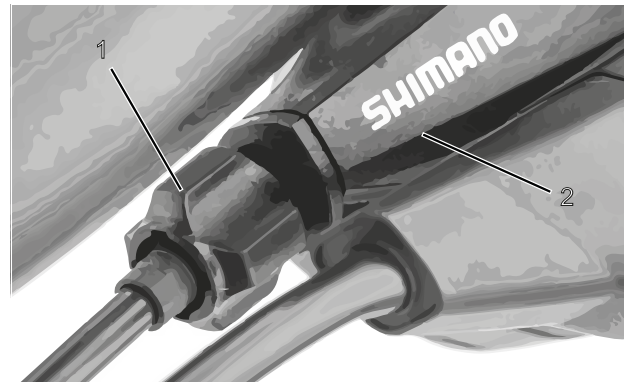


Figure 144: Adjusting sleeve (1) for the single-cable, Bowden-cable-operated gear shift with shifter housing (2), example

7.5.13 Bowden-cable-operated gear shift, dual-cable

Only applies to pedelecs with this equipment

- ▶ For a smooth gear shift, set the adjusting sleeves underneath the chain stay on the frame.
- ▶ The shift cable has around 1 mm play when it is pulled out gently.

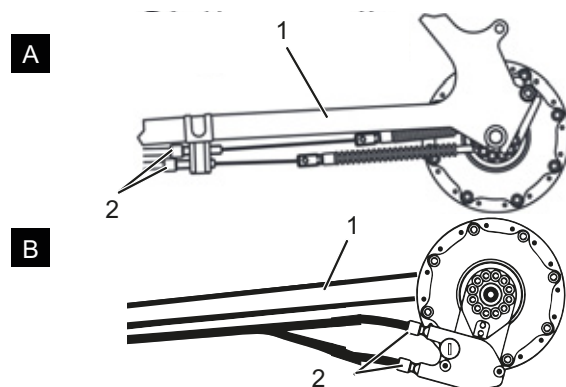


Figure 145: Adjusting sleeves (2) on two alternative versions (A and B) of a dual-cable, Bowden-cable-operated gear shift on the chain stay (1)

7.5.14 Bowden-cable-operated twist grip, dual-cable

Only applies to pedelecs with this equipment

- ▶ For a smooth gear shift, set the adjusting sleeves on the shifter housing.
- ⇒ There is noticeable play of 2 to 5 mm (1/2 gear) when you turn the twist grip.

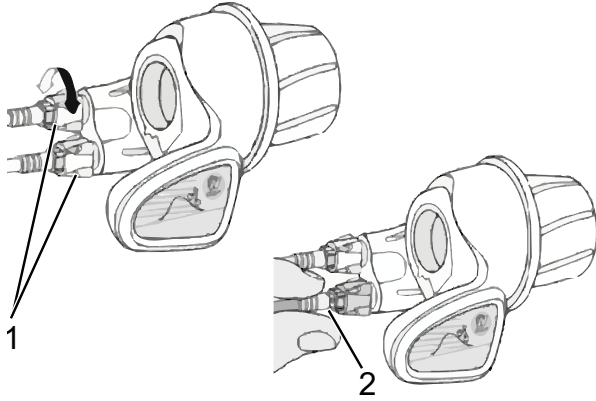


Figure 146: Twist grip with adjusting sleeves (1) and play in the gear shift (2)

7.5.15 Checking kickstand stability

- 1 Place the pedelec on a slight elevation of 5 cm.
 - 2 Extend kickstand.
 - 3 Jolt pedelec to check stability.
- ⇒ If the pedelec topples over, tighten screws or change height of the kickstand.

8 Maintenance

8.1 Initial inspection

After 200 km or 4 weeks after purchase

Vibrations produced while riding can cause screws and springs that were tightened during manufacture of the pedelec to settle or come loose.

- ▶ Arrange an appointment for the initial inspection directly when purchasing the pedelec.
- ▶ Have the initial inspection entered and stamped in the maintenance book.



- ▶ Carrying out the initial inspection, see Section 8.4.

8.2 Maintenance

every six months

You must have your specialist dealer perform maintenance every six months as a minimum. This is the only way to ensure that the pedelec remains safe and fully functional.

Maintenance tasks require technical expertise, special tools and special lubricants. The pedelec may become damaged if the stipulated maintenance intervals and procedures are not carried out. This is why only specialist dealers may carry out maintenance.

- ▶ Contact your specialist dealer and arrange an appointment.
- ▶ Enter and stamp maintenance tasks in the maintenance book.



- ▶ Perform maintenance.

8.3 Component-specific maintenance tasks

High-quality components require extra maintenance. Maintenance tasks require technical expertise, special tools and special lubricants. The pedelec may become damaged if the stipulated maintenance intervals and procedures are not carried out. This is why only specialist dealers may carry out maintenance.

Correct maintenance on the fork not only guarantees a long service life, but also ensures optimal performance.

Each maintenance interval shows the maximum cycling hours for the required type of maintenance that the component manufacturer recommends.

- ▶ Optimise performance with shorter maintenance intervals, depending on use, terrain and environmental conditions.



- ▶ Enter any components with extra maintenance requirements with their corresponding maintenance intervals into the maintenance book when the pedelec is purchased.
- ▶ Inform the buyer of the additional maintenance schedule.
- ▶ Enter and stamp maintenance tasks in the maintenance book.

| Suspension fork maintenance intervals | | |
|---------------------------------------|---|--------------------------------|
| Suntour suspension fork | | |
| <input type="checkbox"/> | Maintenance 1 | Every 50 hours |
| <input type="checkbox"/> | Maintenance 2 | Every 100 hours |
| FOX suspension fork | | |
| <input type="checkbox"/> | Maintenance | Every 125 hours or once a year |
| RockShox suspension fork | | |
| <input type="checkbox"/> | Maintenance of stanchions for: Paragon™, XC™ 28, XC 30, 30™, Judy®, Recon™, Sektor™, 35™*, Bluto™, REBA®, SID®, RS-1™, Revelation™, PIKE®, Lyrik™, Yari™, BoXXer | Every 50 hours |
| <input type="checkbox"/> | Maintenance of spring and damper unit for: Paragon, XC 28, XC 30,30 (2015 and earlier), Recon (2015 and earlier), Sektor (2015 and earlier), Bluto (2016 and earlier), Revelation (2017 and earlier), REBA (2016 and earlier), SID (2016 and earlier), RS-1 (2017 and earlier), BoXXer (2018 and earlier) | Every 100 hours |
| <input type="checkbox"/> | Maintenance of spring and damper unit for: 30 (2016+), Judy (2018+), Recon (2016+), Sektor (2016+), 35 (2020+)*, Revelation (2018+), Bluto (2017+), REBA (2017+), SID (2017+), RS-1 (2018+), PIKE (2014+), Lyrik (2016+), Yari (2016+), BoXXer (2019+) | Every 200 hours |

| Maintenance intervals for suspension seat post | | |
|--|---|---|
| by.schulz suspension seat post | | |
| <input type="checkbox"/> | Maintenance | After the first 250 km; every 1,500 km after that |
| Suntour suspension seat post | | |
| <input type="checkbox"/> | Maintenance | Every 100 hours or once a year |
| eightpins suspension seat post | | |
| <input type="checkbox"/> | Clean wiper | 20 hours |
| <input type="checkbox"/> | Clean slide bushing | 40 hours |
| <input type="checkbox"/> | Replace slide bushing, wiper and felt strip | 100 hours |
| <input type="checkbox"/> | Seal service for gas pressure spring | 200 hours |
| RockShox dropper post | | |
| <input type="checkbox"/> | Venting of remote control lever and/or maintenance of lower seat post unit for: Reverb™ A1/A2/B1, Reverb Stealth A1/A2/B1/C1* | Every 50 hours |
| <input type="checkbox"/> | Detach lower seat post, clean brass pins, check and replace if necessary and apply new grease for Reverb AXS™ A1* | Every 50 hours |
| <input type="checkbox"/> | Venting of remote control lever and/or maintenance of lower seat post unit for: Reverb B1, Reverb Stealth B1/C1*, Reverb AXS™ A1* | Every 200 hours |
| <input type="checkbox"/> | Complete maintenance of seat post for: Reverb A1/A2, Reverb Stealth A1/A2 | Every 200 hours |
| <input type="checkbox"/> | Complete maintenance of seat post for: Reverb B1, Reverb Stealth B1 | Every 400 hours |
| <input type="checkbox"/> | Complete maintenance of seat post for: Reverb AXS™ A1*, Reverb Stealth C1* | Every 600 hours |
| FOX suspension seat post | | |
| <input type="checkbox"/> | Maintenance | Every 125 hours or once a year |
| All other suspension seat posts | | |
| <input type="checkbox"/> | Maintenance | Every 100 hours |

| Maintenance intervals for rear frame damper | | |
|---|--|--------------------------------|
| RockShox rear frame damper | | |
| <input type="checkbox"/> | Service air chamber assembly | Every 50 hours |
| <input type="checkbox"/> | Service damper and spring | Every 200 hours |
| FOX rear frame damper | | |
| <input type="checkbox"/> | Maintenance | Every 125 hours or once a year |
| Suntour rear frame damper | | |
| <input type="checkbox"/> | Complete shock absorber service including damper reassembly and air seal replacement | Every 100 hours |

| Maintenance intervals for hub | | |
|------------------------------------|---|---|
| SHIMANO 11-speed hub | | |
| <input type="checkbox"/> | Internal oil change and maintenance | 1,000 km after start of use, then every 2 years or 2,000 km |
| All other SHIMANO gear hubs | | |
| <input type="checkbox"/> | Lubricate internal components | Once a year or every 2,000 km |
| ROHLOFF Speedhub 500/14 | | |
| <input type="checkbox"/> | Clean cable box and grease cable drum interior | Every 500 km |
| <input type="checkbox"/> | Oil change | Every 5,000 km or at least once a year |
| Pinion | | |
| <input type="checkbox"/> | Maintenance 1 Check drive elements and replace if necessary Clean cable pulley, slide surfaces and gear box interior, epicyclic wheels, etc. thoroughly and grease generously | Every 500 km |
| <input type="checkbox"/> | Maintenance 2 Replace chain rings and change oil | Every 10,000 km |

 **WARNING**
Injury due to damaged brakes

Special tools and specialist knowledge are required to repair the brakes. Incorrect or unauthorised assembly can damage the brakes. This may lead to an accident with serious injuries.

- ▶ Only specialist dealers may carry out repairs on brakes.
- ▶ Only carry out work or changes, such as dismantling, sanding or painting, which are permitted and described in the brake operating instructions.

Injury to the eyes

Problems may arise if the settings are not made properly and you may sustain serious injuries as a result.

- ▶ Always wear safety glasses during maintenance work.

 **CAUTION**
Crash and falling caused by unintentional activation

There is a risk of injury if the drive system is activated unintentionally.

- ▶ Remove the battery before maintenance.

Crash caused by material fatigue

If the service life of a component has expired, the component may suddenly fail. This may cause a crash with injuries.

- ▶ Have the specialist dealer carry out basic cleaning of the pedelec every six months, preferably at the same time as the required servicing work.

 **CAUTION**
Hazard for the environment due to toxic substances

The brake system contains toxic and environmentally harmful oils and lubricants. Such fluids will contaminate if they enter the sewers or groundwater.

- ▶ Dispose of lubricants and oils left over after repairs in an environmentally responsible way in accordance with statutory regulations.

Notice

The motor is maintenance-free and only qualified specialist personnel may open it.

- ▶ Never open the motor.

8.4 Carry out initial inspection

Vibration produced while riding can cause screws and springs that were tightened during manufacture of the pedelec to settle or come loose.

- ▶ Check quick release system is fixed in position.
- ▶ Check all tightening torques of screws and screw connections.

Incorrectly fastened screws may come loose due to impact. The stem may no longer be firmly fixed in its position as a result. This will cause a crash with injuries.

Check the handlebars and the stem quick release system are firmly in position after the first two hours of riding.



8.5 Maintenance instructions

Complying with these maintenance instructions is the only way to reduce wear on components, increase the operating hours and guarantee safety.

Diagnosis and documentation of current status

| Components | Fre- quency | Description | | | Criteria | | Measures if rejected |
|---------------------------------------|----------------|--|--|---|-----------------|---------------------|--|
| | | Inspection | Tests | Maintenance | Accept- ance | Rejection | |
| Chassis | | | | | | | |
| Frame | Once a month | Dirt | ... | Section 7.3.4 | O.K. | Dirt | Cleaning |
| | 6 months | Servicing | ... | Section 7.4.1 | O.K. | Untreated | Wax |
| | 6 months | Check for damage – fracture, scratches | Section 8.6.1 | ... | O.K. | Damage detected | Take pedelec out of service, new frame as specified in parts list |
| Carbon frame (optional) | Once a month | Dirt | Section 7.3.4 | ... | O.K. | Dirt | Cleaning |
| | 6 months | Servicing | ... | Section 7.4.1 | O.K. | No wax | Wax |
| | 6 months | Damage to paintwork | Section 8.6.1.1 | ... | O.K. | Damage to paintwork | Apply paint |
| | 6 months | Damage from impact | Section 8.6.1.1 | ... | O.K. | Damage from impact | Take pedelec out of service, new frame as specified in parts list |
| RockShox Rear frame damper (optional) | 6 months | Check for damage, corrosion, fracture | See Rock-Shox component maintenance instructions | Maintenance as specified by manufacturer Air chamber assembly group, damper and spring. | O.K. | Damage detected | New rear frame damper as specified in parts list |
| FOX Rear frame damper (optional) | 6 months | Check for damage, corrosion, fracture | ... | Send to FOX | O.K. | Damage detected | New rear frame damper as specified in parts list |
| Suntour Rear frame damper (optional) | 6 months | Check for damage, corrosion, fracture | See Suntour component maintenance instructions | Maintenance as specified by manufacturer Complete shock absorber service including damper reassembly and air seal replace- | O.K. | Damage detected | New rear frame damper as specified in parts list |
| Steering system | | | | | | | |
| Handlebars | Once a month | Cleaning | ... | Section 7.3.6 | O.K. | Dirt | Cleaning |
| | 6 months | Wax | ... | Section 7.4.7 | O.K. | Untreated | Wax |
| | 6 months | Check mount fastening | Section 7.5.5 | ... | O.K. | Loose, rust | Retighten screws; new handlebars as specified in parts list if necessary |
| Stem | Once a month | Cleaning | ... | Section 7.3.5 | O.K. | Dirt | Cleaning |
| | 6 months | Wax | ... | Section 7.4.6 | O.K. | Untreated | Wax |
| | 6 months | Check mount fastening | Section 7.5.4 and Section 8.6.4 | ... | O.K. | Loose, rust | Retighten screws; new stem as specified in parts list if necessary |



| Components | Fre-quency | Description | | | Criteria | | Measures if rejected |
|-------------------------------------|------------------|---------------------------------------|-----------------------------------|--|-------------|--------------------------------|--|
| | | Inspection | Tests | Maintenance | Accept-ance | Rejection | |
| Handles | Once a month | Cleaning | ... | Section 7.3.7 | O.K. | Dirt | Cleaning |
| | Once a month | Care for | Section 7.4.8 | ... | O.K. | Untreated | Talcum powder |
| | before each ride | Wear; check if fastened securely | Section 7.1.11 | ... | O.K. | Missing, wobbles | Retighten screws, new handles and coverings as specified in parts list |
| Steering headset | 6 months | Clean and check for damage | ... | Clean, lubricate and adjust | O.K. | Unclean | Clean and lubricate |
| Fork (rigid) | 6 months | Check for damage, corrosion, fracture | Dismount, check, lubricate, refit | ... | O.K. | Damage detected | New fork as specified in the parts list |
| Carbon fork (optional) | 6 months | Check for damage, corrosion, fracture | ... | Maintenance as specified by manufacturer Lubrication, oil change as specified by manufacturer | O.K. | Damage detected | New fork as specified in the parts list |
| Suntour suspension fork (optional) | 6 months | Check for damage, corrosion, fracture | ... | Maintenance as specified by manufacturer Lubrication, oil change as specified by manufacturer | O.K. | Damage detected | New fork as specified in the parts list |
| FOX suspension fork (optional) | 6 months | Check for damage, corrosion, fracture | ... | Send to FOX | O.K. | Damage detected | New rear frame damper as specified in parts list |
| RockShox suspension fork (optional) | 6 months | Check for damage, corrosion, fracture | ... | Maintenance as specified by manufacturer Lubrication, oil change as specified by manufacturer | O.K. | Damage detected | New fork as specified in the parts list |
| Spinner suspension fork (optional) | 6 months | Check for damage, corrosion, fracture | ... | Maintenance as specified by manufacturer Lubrication, oil change as specified by manufacturer | O.K. | Damage detected | New fork as specified in the parts list |
| Wheel | | | | | | | |
| Wheel | before each ride | Concentricity | Section 7.1.7 | ... | O.K. | Not straight | Re-mount wheel |
| | 6 months | Assembly | Section 7.5.1 | ... | O.K. | Loose | Adjust quick release |
| Tyres | Once a month | Cleaning | Section 7.3.10 | ... | O.K. | Dirt | Cleaning |
| | once a week | Tyre pressure | Section 7.5.1.1 | ... | O.K. | Tyre pressure too low/too high | Adjust tyre pressure |
| | 10 days | Wear | Section 7.3.10 | ... | O.K. | Worn profile | New tyre as specified in the parts list |



| Components | Fre- quency | Description | | | Criteria | | Measures if rejected |
|----------------------------------|----------------|-----------------------|---------------------------------|---------------------------------|-----------------|-----------------------|--|
| | | Inspection | Tests | Maintenance | Accept- ance | Rejection | |
| Rims | 6 months | Wax | ... | Section 7.4.13 | O.K. | Untreated | Wax |
| | 6 months | Wear | Section 7.5.1.3 | ... | O.K. | Defective rim | New rim as specified in the parts list |
| | once a month | Wear on brake surface | Section 7.5.2.6 | ... | O.K. | Worn brake surface | New rim as specified in the parts list |
| Spokes | Once a month | Cleaning | ... | Section 7.3.11 | O.K. | Dirt | Cleaning |
| | 3 months | Check tension | Section 7.5.1.3 | ... | O.K. | Loose, tension varies | Re-tension spokes or new spokes as specified in parts list |
| | 6 months | Check rim hooks | Section 7.5.1.3 | ... | O.K. | Twisted rim hooks | New rim as specified in the parts list |
| Spoke nipples | Once a month | Cleaning | ... | Section 7.3.11 | O.K. | Dirt | Cleaning |
| | Once a month | Wax | ... | Section 7.4.12 | O.K. | Untreated | Wax |
| Nipple holes | 6 months | Check for cracks | Section 7.5.1.4 | ... | O.K. | Cracks | New rim as specified in the parts list |
| Nipple well | Once a year | Check for cracks | Section 7.5.1.5 | ... | O.K. | Cracks | New rim as specified in the parts list |
| Hub | Once a month | Cleaning | ... | Section 7.3.12 | O.K. | Dirt | Cleaning |
| | Once a month | Care for | ... | Section 7.4.11 | O.K. | Untreated | Treat |
| Hub with cone bearing (optional) | Once a month | Cleaning | ... | Section 7.3.12 | O.K. | Dirt | Cleaning |
| | Once a month | Care for | ... | Section 7.4.11 | O.K. | Untreated | Treat |
| | 6 months | Check mount fastening | # | ... | O.K. | Loose, rust | Retighten screws; new handlebars as specified in parts list if necessary |
| | Once a year | Adjust | ... | | O.K. | Not adjusted | New position |
| Hub gear (optional) | Once a month | Cleaning | ... | Section 7.3.12 | O.K. | Dirt | Cleaning |
| | Once a month | Care for | ... | Section 7.4.11 | O.K. | Untreated | Treat |
| | 6 months | Check mount fastening | # | ... | O.K. | Loose, rust | Retighten screws; new handlebars as specified in parts list if necessary |
| | 6 months | Functional check | Section 7.5.9.2 | ... | | incorrect switching | Readjust hub |
| Saddle and seat post | | | | | | | |
| Saddle | Once a month | Cleaning | | Section 7.3.9 | O.K. | Dirt | Cleaning |
| | 6 months | Check mount fastening | Section 7.5.6 | ... | O.K. | Loose | Retighten screws |
| Leather saddle (optional) | Once a month | Cleaning | ... | Section 7.3.9.1 | O.K. | Dirt | Cleaning |
| | 6 months | Care for | ... | Section 7.4.10 | O.K. | Untreated | Leather wax |
| | 6 months | Check mount fastening | Section 7.5.6 | ... | O.K. | Loose | Retighten screws |



| Components | Fre- quency | Description | | | Criteria | | Measures if rejected |
|---|--|--|-----------------|---------------------------------|-----------------|----------------|--|
| | | Inspection | Tests | Maintenance | Accept- ance | Rejection | |
| Seat post | Once a month | Cleaning | ... | Section 7.3.8 | O.K. | Dirt | Cleaning |
| | 6 months | Care for | ... | | O.K. | Untreated | Leather wax |
| | 6 months | Complete clean, check fastening and paint protection film | ... | Section 8.6.8 | O.K. | Loose | Tighten screws, new paint protection film |
| Carbon seat post (optional) | Once a month | Cleaning | ... | Section 7.3.8 | O.K. | Dirt | Cleaning |
| | 6 months | Care for | ... | Section 7.4.9.2 | O.K. | Untreated | Assembly paste |
| | 6 months | Complete clean, check fastening and paint protection film | ... | Section 8.6.8.1 | O.K. | Loose | Tighten screws, new paint protection film; new seat post as specified in parts list if damaged |
| Suspension seat post (optional) | Once a month | Cleaning | ... | # | O.K. | Dirt | Cleaning |
| | 6 months | Care for | ... | Section 7.4.9.1 | O.K. | Untreated | Oils |
| | 100 hours or 6 months | Complete clean, check fastening and paint protection film | Section 8.6.8 | ... | O.K. | Loose | Tighten screws, new paint protection film |
| by.schulz suspension seat post (optional) | After the first 250 km; every 1500 km after that | Complete clean, check fastening and paint protection film, lubricate | Section 8.6.8.2 | ... | O.K. | Loose | Tighten screws, new paint protection film; new seat post as specified in parts list if damaged |
| Suntour suspension seat post | Every 100 hours or once a year | Complete clean, check fastening and paint protection film, lubricate | Section 8.6.8.3 | ... | O.K. | Loose | Tighten screws, new paint protection film; new seat post as specified in parts list if damaged |
| eightpins NGS2 Suspension seat post | 20 hours | Refill oil | ... | Section 7.4.18 | O.K. | No oil | Refill oil |
| | 20 hours | Clean wiper | ... | | O.K. | Dirt | Cleaning |
| | 40 hours | Cleaning the slide bushing | ... | | O.K. | Dirt | Cleaning |
| | 100 hours | Replace slide bushing, wiper and felt strip | ... | | O.K. | No replacement | Replace |
| | 200 hours | Seal service for gas pressure spring | ... | | O.K. | No service | Carry out the service |
| eightpins H01 Suspension seat post | 20 hours | Refill oil | ... | Section 7.4.18 | O.K. | No oil | Refill oil |
| | 20 hours | Clean wiper | ... | | O.K. | Dirt | Cleaning |
| | 40 hours | Cleaning the slide bushing | ... | | O.K. | Dirt | Cleaning |
| | 100 hours | Replace slide bushing, wiper and felt strip | ... | | O.K. | No replacement | Replace |
| | 200 hours | Seal service for gas pressure spring | ... | | O.K. | No service | Carry out the service |



| Components | Fre- quency | Description | | | Criteria | | Measures if rejected |
|---|--|--|------------------------------|------------------------------|-----------------|-----------------------------------|--|
| | | Inspection | Tests | Maintenance | Accept- ance | Rejection | |
| RockShox suspension seat post | 50 hours | Venting | ... | See manufac- turer | O.K. | | |
| | 50 hours | Cleaning | ... | See manufac- turer | O.K. | | |
| | 200 hours | Venting | ... | See manufac- turer | O.K. | | |
| | 200 hours | Complete mainte- nance | ... | See manufac- turer | O.K. | | |
| | 400 hours | Complete mainte- nance | ... | See manufac- turer | O.K. | | |
| | 600 hours | Complete mainte- nance | ... | See manufac- turer | O.K. | | |
| FOX suspen- sion seat post | Every 125 hours or once a year | Complete mainte- nance | See manufac- turer | At the manufac- turer FOX | ... | ... | |
| Safety guards | | | | | | | |
| Belt or chain guards | 6 months | Attachment | Check mount fastening | ... | O.K. | Loose | Retighten screws |
| Guard | 6 months | Attachment | Check mount fastening | ... | O.K. | Loose | Retighten screws |
| Motor cover | 6 months | Attachment | Check mount fastening | ... | O.K. | Loose | Retighten screws |
| Brake system | | | | | | | |
| Brake lever | 6 months | Attachment | Check mount fastening | ... | O.K. | Loose | Retighten screws |
| Brake fluid | 6 months | Check fluid level | Depending on time of year | ... | O.K. | Too little | Top up brake fluid; <i>take Pedelec out of service</i> if damaged; new brake hoses |
| Brake linings | 6 months | Brake linings, brake discs and rims | Check for damage | ... | O.K. | Damage detected | New brake linings, brake discs and rims |
| Back-pedal brake braking armature | 6 months | Attachment | Check mount fastening | ... | O.K. | Loose | Retighten screws |
| Brake system | 6 months | Attachment | Check mount fastening | ... | O.K. | Loose | Retighten screws |
| Lighting system | | | | | | | |
| Light cabling | 6 months | Connections, correct wiring | Check | ... | O.K. | Cable defec- tive, no light | New cabling |
| Rear light | 6 months | Side light | Functional check | ... | O.K. | No constant light | New rear light as specified in parts list; replace if necessary |
| Front light | 6 months | Side light, daytime riding light | Functional check | ... | O.K. | No constant light | New front light as specified in parts list; replace if necessary |
| Reflectors | 6 months | All complete, state, fastening | Check | ... | O.K. | Damaged or not all complete | New reflectors |



| Components | Fre- quency | Description | | | Criteria | | Measures if rejected |
|--|----------------|---------------------------------------|-----------------------------|-------------|----------------------|---|---|
| | | Inspection | Tests | Maintenance | Accept- ance | Rejection | |
| Drive/gear shift | | | | | | | |
| Chain/ cassette/ pinion/chain- ring | 6 months | Check for damage | Check for damage | ... | O.K. | Damage | Refasten if necessary or replace as speci- fied in parts list |
| Chain guard/ spoke guard | 6 months | Check for damage | Check for damage | ... | O.K. | Damage | Replace as specified in parts list |
| Bottom bracket axle/ crank | 6 months | Check mount fastening | Check mount fastening | ... | O.K. | Loose | Retighten screws |
| Pedals | 6 months | Check mount fastening | Check mount fastening | ... | O.K. | Loose | Retighten screws |
| Shifter | 6 months | Check mount fastening | Check mount fastening | ... | O.K. | Loose | Retighten screws |
| Shift cables | 6 months | Check for damage | Check for damage | ... | O.K. | Loose and defective | Adjust shift cables; new shift cables if necessary |
| Front derail- leur | 6 months | Check for damage | Check for damage | ... | O.K. | Gear shift diffi- cult or not possible | Adjust |
| Rear derail- leur | 6 months | Check for damage | Check for damage | ... | O.K. | Gear shift diffi- cult or not possible | Adjust |
| Electric drive | | | | | | | |
| On-board computer | 6 months | Check for damage | Check for damage | ... | O.K. | No screen, defective screen display | Restart, test battery, new software or new on-board computer, <i>decommissioning</i> , |
| Electric drive control panel | 6 months | Check drive for damage | Check drive for damage | ... | O.K. | No response | Restart; contact control panel manu- facturer, new control panel |
| Tachometer | 6 months | Calibration | Speed meas- urement | ... | O.K. | Pedelec travel- ling 10 % too fast/slow | Take pedelec out of service until the source of the error is found |
| Cabling | 6 months | Visual inspection | Visual inspec- tion | ... | O.K. | Failure in system, damage, kinked cables | New cabling |
| Recharge- able battery | 6 months | First examination | see Section Assembly | ... | O.K. | Error message | Contact battery manu- facturer; <i>take out of service</i> , new battery |
| Battery mount | 6 months | Firmly in position, lock, contacts | Check mount fastening | ... | O.K. | Loose; lock doesn't close, no contacts | New battery mount |
| Motor | 6 months | Visual inspection and mount | Check mount fastening | ... | O.K. | Damage, loose | Refasten motor, contact motor manu- facturer, new motor; <i>take out of service</i> |
| Software | 6 months | Check version | Check soft- ware version | ... | In latest version | Not latest version | Import update |



| Components | Fre- quency | Description | | | Criteria | | Measures if rejected |
|------------------------|------------------|---|--|-------------------------------|-----------------|-----------------------------|---|
| | | Inspection | Tests | Maintenance | Accept- ance | Rejection | |
| Miscellaneous | | | | | | | |
| Pannier rack | before each ride | Stability | Section 7.1.5 | ... | O.K. | Loose | Firm |
| | Once a month | Dirt | ... | Section 7.3.4 | O.K. | Dirt | Cleaning |
| | 6 months | Servicing | ... | Section 7.4.3 | O.K. | Untreated | Wax |
| | 6 months | Check fastening and paint protection film | Section 8.5.2 | ... | O.K. | Loose | Tighten screws, new paint protection film |
| Kickstand | Once a month | Dirt | ... | Section 7.3.4 | O.K. | Dirt | Cleaning |
| | 6 months | Servicing | ... | Section 7.4.5 | O.K. | Untreated | Wax |
| | 6 months | Attachment | Section 7.5.15 | ... | O.K. | Loose | Retighten screws |
| | 6 months | Stability | Section 7.5.15 | ... | O.K. | Tips over | Change kickstand height |
| Bell | before each ride | Sound | Functional check Section 7.1.10 | ... | O.K. | No ring, too quiet, missing | New bell as specified in the parts list |
| Attachments (optional) | 6 months | Attachment | Check mount fastening | ... | O.K. | Loose | Retighten screws |

Technical inspection, checking safety, test ride

| Components | Description | | Criteria | | Measures if rejected |
|---|---------------------|------------------|-------------------|--|--|
| | Assembly/inspection | Tests | Acceptance | Rejection | |
| Brake system | 6 months | Functional check | O.K. | No full braking; braking distance too long | Locate defective part in brake system and correct |
| Gear shift under operating load | 6 months | Functional check | O.K. | Problems when shifting gear | Readjust gear shift |
| Suspension components (fork, shock absorber, seat post) | 6 months | Functional check | O.K. | Suspension too deep or no longer exists | Locate defective component and correct |
| Electric drive | 6 months | Functional check | O.K. | Loose connection, problems when riding, accelerate | Locate defective part in electric drive and correct |
| Lighting system | 6 months | Functional check | O.K. | No continuous light, not bright enough | Locate defective part in lighting system and correct |
| Test ride | 6 months | Functional check | No strange noises | Strange noises | Locate source of noise and correct |



8.5.1 Servicing the frame

- 1 Check frame for cracks, warping and damage to the paintwork.
- ⇒ If there are any cracks, warping or damage to the paintwork, remove the pedelec from service. New frame as specified in the parts list.

8.5.1.1 Servicing the carbon frame

You need to distinguish between scratches on the paintwork and impacts if the carbon frame paintwork is damaged.

- ▶ Ask customer what caused the damage.
- ▶ Examine damage with a magnifying glass to see if fibres are permanently damaged.

Damage to paintwork

- 1 Gently sand paintwork damage with 600-grit sandpaper.
- 2 Smooth edges.
- 3 Apply one or two coats of repair paint.

Damage from impact

There may be damage to the laminate beneath the paintwork in the case of impact damage. The frame may break even under light stress.

- 1 Take pedelec out of service.
- 2 Send frame to a fibre composite repair company or purchase new frame as specified in the parts list.

8.5.2 Checking the pannier rack

Scratches, cracks and breaks may appear on the pannier rack caused by the panniers and cargo boxes.

- 1 Examine pannier rack for scratches, cracks and breaks.
- ⇒ Replace damaged pannier racks.
- ⇒ If the paint protection film is missing or has worn away, affix a new paint protection film.

8.5.3 Servicing axle with quick release



Crash caused by unfastened quick release

A faulty or incorrectly installed quick release may become caught in the brake disc and block the wheel. This will cause a crash.

- ▶ Install the front wheel quick release lever on the opposite side to the brake disc.

Crash caused by faulty or incorrectly installed quick release

The brake disc becomes very hot during operation. Parts of the quick release may become damaged as a result. The quick release comes loose. This will cause a crash with injuries.

- ▶ The front wheel quick release lever and the brake disc must be situated on opposite sides.

Crash caused by incorrectly set clamping force

Excessively high clamping force will damage the quick release and cause it to lose its function.

Insufficient clamping force will cause a detrimental transmission of force. The suspension fork or the frame may break. This will cause a crash with serious injuries.

- ▶ Never fasten a quick release using a tool (e.g. hammer or pliers).
- ▶ Only use the clamping lever with the specified set clamping force.

- 1 Undo quick release.
- 2 Fasten quick release.
- 3 Check the position and clamping force of the quick release lever.



- ⇒ The quick release lever is flush with the lower housing.
- ⇒ You should be able to see slight impression on the palm of your hand when you close the quick release lever.



Figure 147: Adjusting the quick release clamping force

- 4 Use a 4 mm hexagon socket spanner to adjust the clamping lever clamping force if required.
- 5 Check the quick release lever position and clamping force again.



Figure 148: Adjusting the quick release clamping force

8.5.4 Maintaining the stem

Incorrectly fastened screws may come loose due to impact. The stem may no longer be firmly fixed in its position as a result. This will cause a crash with injuries.

- ▶ Check the handlebars and the stem's quick release are firmly in position.

8.5.5 Servicing the gear hub

8.5.5.1 Adjusting the hub with cone bearing

In the case of hubs with a cone bearing, the bearing shell fixed in the hub cone body rotates with its larger ball bearing surfaces around the inner bearing cone resting against the fork end. The outer bearing shell rotating around the stationary bearing cone is subject to considerably more evenly distributed loads thanks to its larger ball running surface.

- 1 Attach a small, red colour marking on the lock nut.
 - 2 Turn the wheel axle 40° to 90° every 1,000 to 2,000 km.
- ⇒ The bearing cone is subject to evenly distributed loads.



8.5.6 Servicing the steering headset

- 1 Remove fork.
- 2 Clean steering headset. If it is very dirty, flush the bearing with cleaning agents such as WD-40 or Karamba.
- 3 Check steering headset for damage.
 - ⇒ If the steering headset is damaged, replace steering headset as specified in the parts list.
- 4 Grease steering headset and bearing seat with highly viscous, water-repellent grease (e.g. Dura Ace special grease by SHIMANO).
- 5 Re-fit fork with steering headset as per fork instructions.

8.5.7 Servicing the fork

Only applies to pedelecs with this equipment

WARNING

Injury due to explosion

The air chamber is pressurised. If the air system in a faulty suspension fork is maintained, it can explode and cause serious injury.

- ▶ Wear safety goggles, protective gloves and safety clothing when assembling or carrying out maintenance on the bicycle.
- ▶ Release the air for the air chambers. Detach all air insert fitments.
- ▶ Never service or dismantle a suspension fork if it has not completely rebounded.

CAUTION

Hazard for the environment due to toxic substances

The suspension fork contains toxic and environmentally harmful oils and lubricants. Such fluids will contaminate if they enter the sewers or groundwater.

- ▶ Dispose of lubricants and oils left over after repairs in an environmentally responsible way in accordance with statutory regulations.

- 1 Remove fork.
- 2 Check fork for cracks, warping and damage to the paintwork.
 - ⇒ If there are any cracks, warping or damage to the paintwork, remove the pedelec from service. New fork as specified in the parts list.
- 3 Clean inside and exterior.
- 4 Grease fork.
- 5 Install fork.



8.5.7.1 Servicing the carbon suspension fork

- 1 Remove fork.
- 2 Check fork for cracks, warping and damage to the paintwork.
- 3 You need to distinguish between scratches on the paintwork and impacts if the carbon suspension fork paintwork is damaged.
 - ▶ Ask customer what caused the damage.
 - ▶ Examine damage with a magnifying glass to see if fibres are permanently damaged.

Damage to paintwork

- 1 Gently sand paintwork damage with 600-grit sandpaper.
- 2 Smooth edges.
- 3 Apply one or two coats of repair paint.

Damage from impact

There may be damage to the laminate beneath the paintwork in the case of impact damage. The fork may break even under light stress.

- ▶ Take pedelec out of service. New fork as specified in the parts list.
- ⇒ The fork must be free from any defects.
- 4 Clean inside and exterior.
 - 5 Grease fork.
 - 6 Install fork.

8.5.7.2 Servicing the suspension fork

- 1 Remove fork.
- 2 Check fork for cracks, warping and damage to the paintwork.
 - ⇒ If there are any cracks, warping or damage to the paintwork, remove the pedelec from service. New fork as specified in the parts list.
- 3 Dismantle suspension fork.
- 4 Lubricate dust seals and slide bushings.
- 5 Check torques.
- 6 Clean inside and exterior.
- 7 Grease fork.
- 8 Install fork.
- 9 Adjust suspension fork (see Section 6.3.14).



8.5.8 Servicing seat post



WARNING

Intoxication from lubrication oil

The lubrication oil for eightpins seat posts is toxic if touched or inhaled.

- ▶ Always wear safety goggles and nitrile gloves when working with lubrication oil.
- ▶ Lubricate seat post in the open air or in a well-ventilated room only.
- ▶ Avoid skin coming into contact with lubrication oil. Wear nitrile gloves when lubricating, cleaning and servicing the vehicle.
- ▶ Use an oil catchment tray under the section where the seat post is serviced.

- 1 Remove seat post from the frame.
- 2 Clean seat post on the inside and outside.
- 3 Examine seat post rack for scratches, cracks and breaks.
 - ⇒ Replaced damaged seat post as specified in the parts list.
 - ⇒ If the paint protection film is missing or has worn away, affix a new paint protection film.
- 4 Fit seat post as per height specifications in the pedelec pass.

8.5.8.1 Servicing the carbon seat post

Only applies to pedelecs with this equipment

You need to distinguish between scratches on the paintwork and impacts if the carbon seat post paintwork is damaged.

- ▶ Ask customer what caused the damage.
- ▶ Examine damage with a magnifying glass to see if fibres are permanently damaged.

Damage to paintwork

- 1 Gently sand paintwork damage with 600-grit sandpaper.
- 2 Smooth edges.
- 3 Apply one or two coats of repair paint.

Damage from impact

There may be damage to the laminate beneath the paintwork in the case of impact damage. The carbon seat post may break even under light stress.

- 1 Take pedelec out of service.
- 2 New carbon seat post as specified in the parts list.



8.5.8.2 by.schulz suspension seat post

Only applies to pedelecs with this equipment

- 1 Remove seat post from the frame.
 - 2 Remove safety and protective cover.
 - 3 Clean seat post on the inside and outside.
 - 4 Examine seat post rack for scratches, cracks and breaks.
- ⇒ Replaced damaged seat post as specified in the parts list.
- ⇒ If the paint protection film is missing or has worn away, affix a new paint protection film.
- 5 Lubricate screws in the parallel suspension.
 - 6 Reinsert seat post as per height specifications in the pedelec pass. Check screws for correct tightening torques.

| | | |
|---|--|------------------|
| □ | Tightening torque G1 M8 seat clamping screw M5 fixing grub screws | 20-24 Nm 3 Nm |
|---|--|------------------|

| | | |
|---|--|------------------|
| □ | Tightening torque G2 M6 seat clamping screw M5 fixing grub screws | 12-14 Nm 3 Nm |
|---|--|------------------|

- 7 Put on safety and protective cover.

8.5.8.3 Suntour suspension seat post

Only applies to pedelecs with this equipment

- 1 Remove seat post from the frame.
 - 2 Remove safety and protective cover.
 - 3 Examine seat post rack for scratches, cracks and breaks.
- ⇒ Replaced damaged seat post as specified in the parts list.
- ⇒ If the paint protection film is missing or has worn away, affix a new paint protection film.
- 4 Undo pre-tensioning adjuster and take out steel spring.
 - 5 Clean seat post on inside and outside.
 - 6 Grease seat post on inside with SR SUNTOUR no. 9170-001.
 - 7 Lubricate pressure roller with bike chain oil.
- ▶ Lubricate articulated joints in parallel suspension with bike chain oil.



Figure 149: SR Suntour suspension seat post lubrication points

- 8 Reinsert seat post as per height specifications in the pedelec pass.
- 9 Check screws for correct tightening torques.

| | | |
|---|--|------------------|
| □ | Tightening torque Seat clamping screw M5 fixing grub screws | 15-18 Nm 3 Nm |
|---|--|------------------|

- 10 Put on safety and protective cover.



8.5.8.4 eightpins NGS2 seat post

Only applies to pedelecs with this equipment

Removing the seat post

- 1 Use a 2.5 mm hex key to turn the height adjustment 45° anti-clockwise and move to the “Open position”.



Figure 150: Moving height adjustment to the “Open position”

- 2 Activate operating lever. Pull seat post upwards at the same time and remove completely.



Figure 151: Pulling the seat post out

- 3 Activate operating lever. Hold Bowden cable fastener and pull or tilt forwards. Remove outer sleeve from the seat post remote control.



Figure 152: Removing the cartridge

- 4 Use a 5 mm to undo Postpin axle and pull out.



Figure 153: Undoing the Postpin axle

- 5 Pull cartridge from the piston rod while pushing the outer sleeve into the frame at the same time to help.

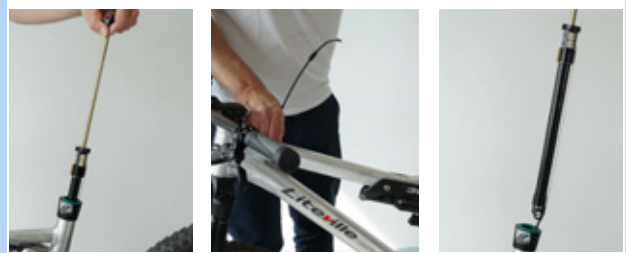


Figure 154: Pulling the cartridge out

- 6 Hold the cartridge with one hand at the height of the mechanism and pull the Bowden cable straight down with the other.
- 7 Hold the white actuating slide in the locking mechanism with your thumb.
- 8 Carefully push the Bowden cable upwards with the other hand and detach it.

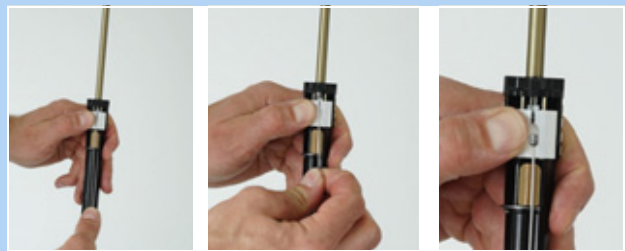


Figure 155: Detaching the Bowden cable

Notice

- ▶ Never pull Bowden cable forwards at an angle.

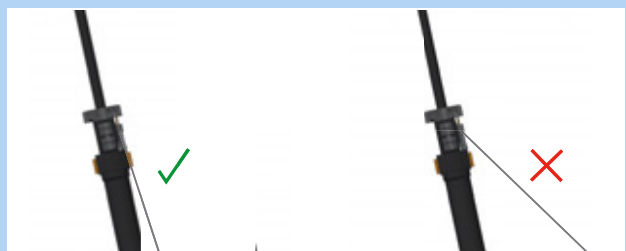


Figure 156: Bowden cable position



- 9 Pull out the outer sleeve end cap from the counter support on the Postpin interface on the seat post.

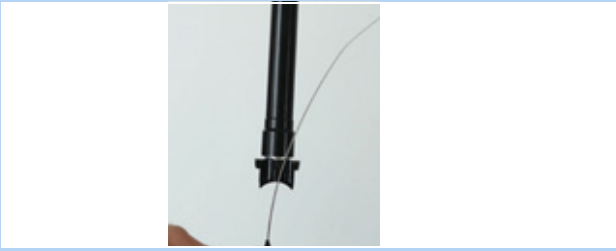


Figure 157: Pulling the end cap out

Removing the outer sleeve and slide bushing

- 1 Use a 3 mm hex spanner to remove attachment screw on the outer sleeve.
- 2 Detach outer sleeve by pulling upwards with your hand.
- 3 Pull slide bushing tube out of the seat tube.



Figure 158: Removing the outer sleeve and slide bushing

Caring for the outer sleeve

- 1 Detach spring washer or outer sealing ring.



Figure 159: Removed spring washer

- 2 Carefully remove the wiper from the groove.



Figure 160: Removing the wiper

- 3 Use a small, sharp object to look for and remove the end of the felt ring.

- 4 Carefully take out the felt ring.

- 5 Remove felt ring.

- 6 Clean or replace felt ring.



Figure 161: Removing the felt ring

- 7 Clean inside of outer sleeve with a cloth.

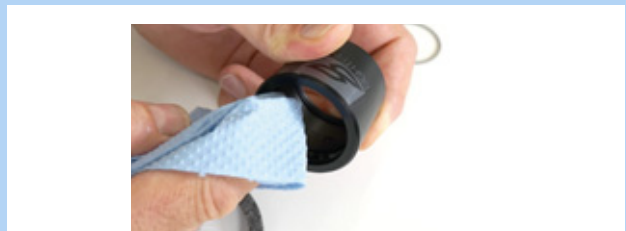


Figure 162: Cleaning the outer sleeve



- 8 Carefully re-insert dry felt ring with one end in the designated groove.
- 9 Unfurl felt ring within the outer sleeve, so that it lies on the groove.
- 10 Carefully press felt ring into the groove by hand. Ensure that both ends are fully pressed in and meet and that they do not overlap and are not twisted.



Figure 163: Inserting the felt ring

- 11 Insert cleaned or new wiper in the upper groove.
- 12 Stretch spring washer over the wiper.

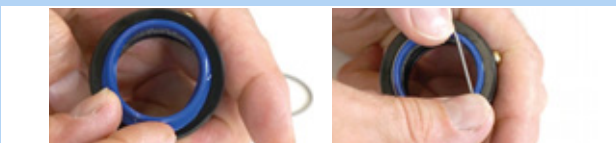


Figure 164: inserting and fastening the wiper

Cleaning the slide bushing

- 1 Clean the slide bushing tube with a damp cloth.

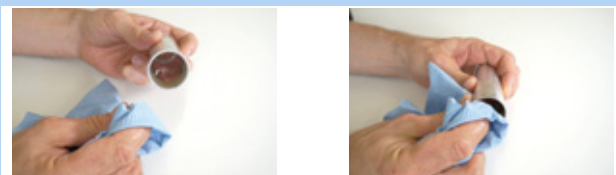


Figure 165: Cleaning the slide bushing tube

Notice

- ▶ Do not squash. The slide bushing tube wall is very thin.

Increasing the air pressure

- 1 Use 3 mm hex spanner to unscrew valve cap.



Figure 166: Unscrewing the valve cap

- 2 Screw valve adapter into mounting interface from below.



Figure 167: Screwing the valve adapter in

- 3 Use compression pump to pump the cartridge up to 24 bar.



Figure 168: Pumping the cartridge up

Notice

Screwing in the valve adapter will not open the valve. No pressure is displayed. The pressure is displayed when you start pumping.

- 4 Unscrew pump and valve adapter.



- Use a 3 mm hex spanner to screw the valve lid back on and tighten with a maximum of 0.5 Nm.



Figure 169: Fastening the cartridge valve lid

Notice

- ▶ The cartridge is not airtight without the valve lid.

Setting the slipper clutch

- Use 3 mm hex spanner to unscrew valve cap.

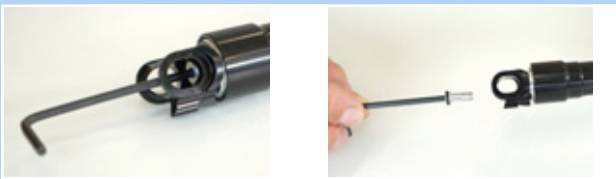


Figure 170: Unscrewing the valve cap

- Secure the mounting interface against twisting with a 24 mm open-end spanner.



Figure 171: Securing against twisting

- Set the torque to 18 Nm with a torque wrench and a 6 mm hex bit with a shaft length of at least 25 mm. Rotate clockwise.



Figure 172: Setting in a clockwise direction

- Use a 3 mm hex spanner to screw the valve lid on and tighten with a maximum of 0.5 Nm.

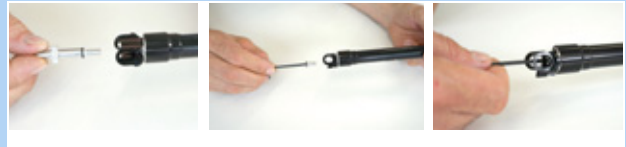


Figure 173: Fastening the cartridge valve lid

Notice

- ▶ The cartridge is not airtight without the valve lid.



installing the outer sleeve and slide bushing

- 1 Carefully push slide bushing tube into the seat tube.
- 2 Press outer sleeve downwards with your hand.
- 3 Use a 3 mm hex spanner to fasten the attachment screw on the outer sleeve.



Figure 174: Fitting the slide bushing and outer sleeve

Fitting the seat post

- 1 Attach the outer sleeve end cap in the counterholder on the seat post frame interface.



Figure 175: Attaching the end cap

- 2 Use both thumbs to push white activation slider downwards and hold with one thumb.



Figure 176: Pushing the white activation slider downwards

- 3 Attach Bowden cable with the nipple to the bracket for the Bowden cable.



Figure 177: Correct and incorrect Bowden cable

Notice

- ▶ Never pull Bowden cable forwards at an angle.

- 4 Carefully push cartridge into the seat tube. Pull the Bowden cable out of the frame to help.



Figure 178: Fastening the cartridge valve lid

Notice

- ▶ Before continuing with installation, ensure that the Bowden cable is fed into the middle of the longitudinal guide. If the Bowden cable is off-centre, it will be pinched by the tube.

- 5 Look at the frame interface through the hole in the Postpin. Push the cartridge down until the Postpin mounting interface on the seat post reaches the Postpin interface on the frame.

- 6 If necessary, turn the seat post slightly and push it to the correct position so that the Postpin axle can be inserted.



Figure 179: Fastening the cartridge valve lid

- 7 Use a 5 mm hex spanner to screw in Postpin axle and fasten slightly.

- 8 Use torque spanner to tighten Postpin axle with 8 Nm.

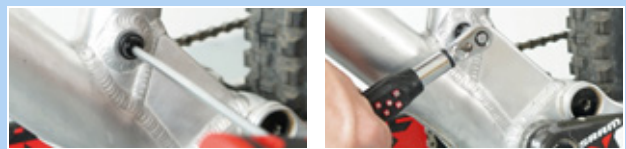


Figure 180: Fastening the Postpin axle



- 9** Carefully insert slide bushing tube into the seat tube.



Figure 181: Inserting the slide bushing tube into the seat tube

- 10** Place outer sleeve on the seat tube and push downwards firmly.



Figure 182: Attaching the outer sleeve

- 11** Turn the outer sleeve so that the outer sleeve mounting hole is aligned with the fastening hole in the frame.
- 12** Use a 3 mm hex spanner to fasten the M5 attachment screw into the outer sleeve.
- 13** Tighten screw gently with a maximum torque of 0.5 Nm.
- ⇒ The screw must easily screw into the outer sleeve without any resistance. If this is not the case, the hole in the frame is not aligned with the mounting hole in the outer sleeve. Turn outer sleeve into the right position.



Figure 183: Fastening the outer sleeve

- 14** Feed height adjustment clamp into the seat tube.

- ⇒ The two height adjustment clamp guides are in the longitudinal grooves inside the seat post.

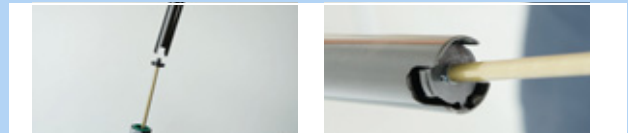


Figure 184: Feeding the height adjustment clamp in

- 15** Push the seat post carefully downwards and feed into the wiper.

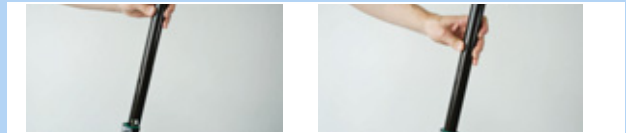


Figure 185: Pushing the seat post downwards

Notice

- ▶ Never let the seat post tube collide with the piston rod. There is a risk of scratches and damage to the piston rod. This will causes loss of air.

- 16** Move operating lever and press seat post downwards to the required height as per the values in the pedelec pass.



Figure 186: Setting the seat post height

- 17** Turn the height adjustment mechanism 45° in a clockwise direction and place in the "Closed position".



Figure 187: Closing the height adjustment



8.5.8.5 eightpins H01 seat post

Only applies to pedelecs with this equipment

Removing the seat post

- 1 Use a 5 mm hex spanner to unscrew the Postpin axle.

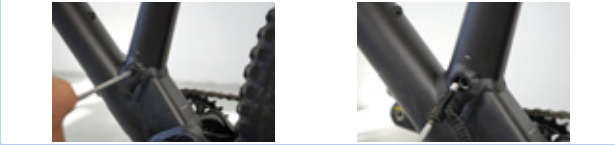


Figure 188: Undoing the seat post

- ▶ Detach Bowden cable from the on-bar remote control on the seat post.
- ▶ Detach the operating lever from the handlebars in the case of under-bar-remote control on the seat post. Activate operating lever. Hold Bowden cable fastener and pull or tilt forwards.



Figure 189: Unfastening the remote control

- 2 Pull seat post slowly out of the frame.

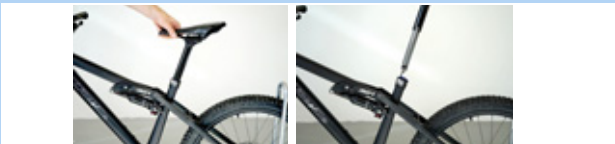


Figure 190: Removing the seat post

- 3 Pull out the special end cap for the outer sleeve from the bracket.
- 4 Detach the Bowden cable head from the hydraulic activation lever bracket.
- 5 If necessary, operate the lever by hand to make more space for detaching it.



Figure 191: Removing the Bowden cable

Removing the outer sleeve and slide bushing

- 1 Use a 3 mm hex spanner to remove attachment screw on the outer sleeve.
- 2 Detach outer sleeve by pulling upwards with your hand.
- 3 Pull slide bushing tube out of the seat tube.



Figure 192: Removing the outer sleeve and slide bushing

Caring for the outer sleeve

- 1 Push the blue wiper towards the edge.
- 2 Detach the seal lip ring.



Figure 193: Detaching the seal lip ring

- 3 Detach spring washer or outer sealing ring.



Figure 194: Removed spring washer



- 4** Carefully remove the wiper from the groove.



Figure 195: Removing the wiper

- 5** Use a small, sharp object to look for and remove the end of the felt ring.
- 6** Carefully take out the felt ring.
- 7** Remove felt ring.
- 8** Clean or replace felt ring.



Figure 196: Removing the felt ring

- 9** Clean inside of outer sleeve with a cloth.



Figure 197: Cleaning the outer sleeve

- 10** Carefully re-insert dry felt ring with one end in the designated groove.
- 11** Unfurl felt ring within the outer sleeve, so that it lies on the groove.
- 12** Carefully press felt ring into the groove by hand. Ensure that both ends are fully pressed in and meet and that they do not overlap and are not twisted.



Figure 198: Inserting the felt ring

- 13** Insert cleaned or new wiper in the upper groove.

- 14** Stretch spring washer over the wiper.

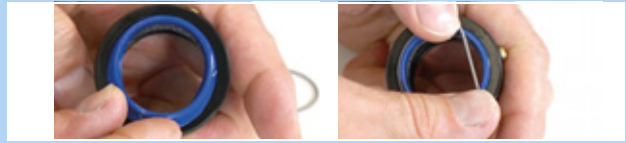


Figure 199: inserting and fastening the wiper



Clean slide bushing

- 1 Clean the slide bushing tube with a damp cloth.

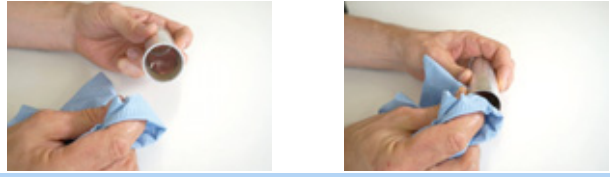


Figure 200: Cleaning the slide bushing tube

Notice

- ▶ Do not squash. The slide bushing tube wall is very thin.

Cleaning and lubricating the guide grooves

- 1 Push the operating lever forwards.



Figure 201: Opening the height adjustment

- 2 Pull seat post out with your hand until it will go no further.

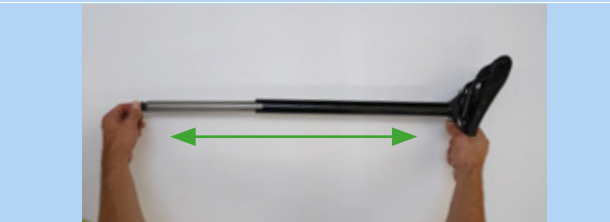


Figure 202: Pulling the seat post out

- 3 Clean the seat post longitudinal grooves with a damp cloth.



Figure 203: Cleaning the longitudinal groove

- 4 Apply grease into the longitudinal groove and on both cross-pieces.



Figure 204: Applying grease

- 5 Push seat post together.

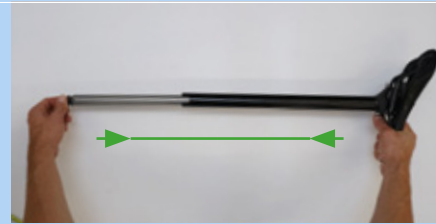


Figure 205: Pushing the seat post together

- 6 Push the height adjustment operating lever backwards.



Figure 206: Closing the height adjustment



installing the outer sleeve and slide bushing

- 1 Carefully push slide bushing tube into the seat tube.
- 2 Press outer sleeve downwards with your hand.
- 3 Use a 3 mm hex spanner to fasten the attachment screw on the outer sleeve.



Figure 207: Fitting the slide bushing and outer sleeve

Fitting the seat post

- 1 Attach Bowden cable head to the hydraulic activation lever bracket.
- 2 Push special end cap for the outer sleeve into the holder on the mounting interface.
- 3 Carefully push the seat post into the frame. In doing so, ensure that the wiper and the slide bushing do not become damaged.



Figure 208: Attaching and pushing in the seat post

- 4 Hold the Bowden cable firmly on the handlebars while feeding it in. Carefully pull the end of the Bowden cable from the frame so that the seat post slides downwards unhindered.



Figure 209: Attaching the end cap

- 5 Look at the frame interface through the hole in the Postpin. Push the seat post down until the Postpin mounting interface on the seat post reaches the Postpin interface on the frame.



Figure 210: Hole in the Postpin interface

- 6 If necessary, turn the seat post slightly and push it to the correct position so that the Postpin axle can be inserted.
- 7 Use a 5 mm hex spanner to screw in Postpin axle and fasten slightly.
- 8 Straighten saddle.
- 9 Use torque spanner to tighten Postpin axle with 8 Nm.

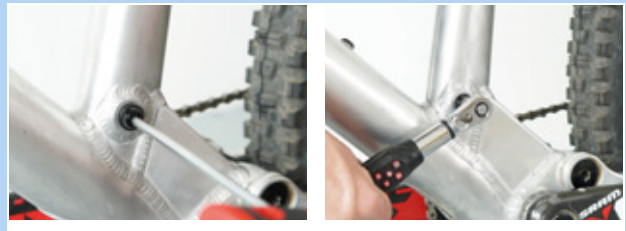


Figure 211: Screwing the seat post into position



8.5.9 Rear frame damper

Only applies to pedelecs with this equipment

WARNING

Injury due to explosion

The air chamber is pressurised. If the air system is serviced in a rear frame damper, it can explode and cause serious injury.

- ▶ Wear safety goggles, protective gloves and safety clothing when assembling or carrying out maintenance on the bicycle.
- ▶ Release the air for the air chambers. Detach all air insert fitments.
- ▶ Never service or dismantle a rear frame damper if it has not completely rebounded.

Intoxication from suspension oil

Suspension oil is poisonous to the touch, irritates respiratory tracts and causes cancer, sterility and mutation in germ cells.

- ▶ Always wear safety goggles and nitrile gloves when carrying suspension oil.
- ▶ Never perform maintenance when you are pregnant.
- ▶ Use an oil catchment tray under the section where the rear frame damper is being serviced.

Intoxication from lubrication oil

The lubrication oil for eightpins seat posts is toxic if touched or inhaled.

- ▶ Always wear safety goggles and nitrile gloves when working with lubrication oil.
- ▶ Lubricate seat post in the open air or in a well-ventilated room only.
- ▶ Avoid skin coming into contact with lubrication oil. Wear nitrile gloves when lubricating, cleaning and servicing the vehicle.
- ▶ Use an oil catchment tray under the section where the seat post is serviced.

CAUTION

Hazard for the environment due to toxic substances

The rear frame damper contains toxic and environmentally harmful oils and lubricants. Such fluids will contaminate if they enter the sewers or groundwater.

- ▶ Dispose of lubricants and oils left over after repairs in an environmentally responsible way in accordance with statutory regulations.

- 1 Dismantle the rear frame damper.
- 2 Clean and inspect its interior and exterior.
- 3 Recondition air springs.
- 4 Replace airtight seals on air springs.
- 5 Change oil.
- 6 Replace dust wipers.



8.5.9.1 FOX component-specific maintenance

FOX Service must perform maintenance on suspension forks, rear frame dampers and suspension seat posts.

- ▶ Maintenance includes a complete inspection of interiors/exterior.
- ▶ All dampers are reconditioned.
- ▶ The airtight seals are replaced in air suspension forks.
- ▶ The air spring is reconditioned.
- ▶ The oil is changed.
- ▶ The dust wipers are replaced.

More information at:

www.foxracingshox.de/service

9 Troubleshooting, fault clearance and repair

9.1 Troubleshooting and fault clearance

The components of the drive system are constantly checked automatically. If an error is detected, an error message appears on the *on-board computer*. The drive may be shut off automatically, depending on the type of error.

9.1.1 Drive system or on-board computer does not start up

If the display and/or the drive system do not start up, proceed as follows:

- 1 Check whether the battery is switched on. If not, start the battery.
- ⇒ Contact your specialist dealer if the battery level indicator LEDs do not light up.
- 2 If the LEDs on the battery level indicator light up, but the drive system does not start up, remove the battery.
- 3 Insert the battery.
- 4 Start the drive system.
- 5 If the drive system won't start, remove the battery.
- 6 Clean all the contacts with a soft cloth.
- 7 Insert the battery.
- 8 Start the drive system.
- 9 If the drive system does not start up, remove the battery.
- 10 Charge battery fully.
- 11 Insert the battery.
- 12 Start the drive system.
- 13 Contact your specialist dealer if the drive system does not start up.

9.1.2 Error message

If an error message is displayed, run through the following actions:

- 1 Make a note of the system message. There is a table containing all system messages in [Section 6.3.1](#).
- 2 Shut off and re-start the drive system.
- 3 If the system message is still displayed, remove the battery and then re-insert.
- 4 Re-start the drive system.
- 5 If the system message is still displayed, contact your specialist dealer.

9.1.3 Errors in assistance function

| Symptom | Cause | Remedy |
|---|---|--|
| Assistance is not available. | Is the battery charged sufficiently? | <ol style="list-style-type: none"> 1 Check battery is charged. 2 Recharge the battery if it is almost flat. |
| | Is the system switched on? | <ul style="list-style-type: none"> ▶ Press On-Off button (battery). ⇒ The drive system starts. |
| | Is the level of assistance set to [OFF]? | <ol style="list-style-type: none"> 1 Set the assistance mode to a different level of assistance than [OFF]. 2 Contact your specialist dealer if you still feel that the no assistance is being supplied. |
| | The rechargeable battery, on-board computer or assistance switch may be connected incorrectly, or one or more of them may have a problem. | <ul style="list-style-type: none"> ▶ Contact your specialist dealer. |
| | Are the pedals being pushed? | <p>The pedelec is not a motorbike.</p> <ul style="list-style-type: none"> ▶ Push the pedals. |
| | Is the speed too high? | <p>The electronic gear assistance is only active up to a maximum speed of 25 km/h.</p> <ul style="list-style-type: none"> ▶ Check on-board computer indicators. |
| | Is the lock function activated? | <ul style="list-style-type: none"> ▶ Use suitable on-board computer. |
| | The battery may become too hot during rides at high temperatures, up long inclines or when carrying a heavy load for a long time. | <ol style="list-style-type: none"> 1 Switch off the drive system. 2 Leave pedelec to cool down. 3 Start the drive system. |
| The assisted journey distance is too short. | Is the battery fully charged? | <ol style="list-style-type: none"> 1 Check charge level. 2 Recharge the battery if it is almost flat. |
| | The battery does not perform as well in winter weather. | This does not indicate a problem. |
| | The journey distance can be shorter depending on the road conditions, the gear level and the entire light usage time. | This does not indicate a problem. |
| | The battery is a consumable. Repeated charging and long periods of use cause the battery to degrade (loss of power). | <p>If the distance covered with a fully charged battery has become shorter, the battery may be affected.</p> <ul style="list-style-type: none"> ▶ Replace old battery with new one. |
| It is difficult to pedal. | Are the tyres pumped to an adequate pressure? | <ol style="list-style-type: none"> 1 Pump up tyres. |
| | Is the level of assistance set to [OFF]? | <ol style="list-style-type: none"> 1 Set level of assistance to [HIGH], [STD], [ECO] or [AUTO]. 2 Contact your specialist dealer if the pedals are still stiff. |
| | Is the battery fully charged? | <ol style="list-style-type: none"> 1 Check charge level. 2 Recharge the battery if it is almost flat. |
| | Have you switched on the system with your foot on the pedal? | <ol style="list-style-type: none"> 1 Switch system on again without applying pressure to the pedal. 2 Contact your specialist dealer if the pedals are still stiff. |

Table 49: Error solution for assistance system

9.1.4 Battery errors

| Symptom | Cause | Remedy |
|--|---|--|
| The battery discharges quickly. | The battery may be at the end of its useful life. | ► Replace old battery with new one. |
| The battery cannot be recharged. | Is the charger mains plug firmly connected to the socket? | <ol style="list-style-type: none"> 1 Disconnect the charger mains plug and plug it in again. 2 Start charging. 3 If the battery still won't recharge, contact your specialist dealer. |
| | Is the charger plug firmly connected to battery? | <ol style="list-style-type: none"> 1 Disconnect the charger plug and plug it in again. 2 Start charging. 3 If the battery still won't recharge, contact your specialist dealer. |
| | Is the adapter firmly connected to the charger plug or the battery's charging port? | <ol style="list-style-type: none"> 1 Connect the adapter firmly to the charger plug or the battery charging port. 2 Start charging. 3 If the battery still won't recharge, contact your specialist dealer. |
| | Is the connection terminal for the charger, charger adapter or batteries dirty? | <ol style="list-style-type: none"> 1 Wipe with a dry cloth to clean the connection terminals. 2 Start charging. 3 If the battery still won't recharge, contact your specialist dealer. |
| The battery does not start charging when the charger is connected. | The battery may be at the end of its useful life. | ► Replace old battery with new one. |
| The battery and charger become hot. | Has the battery or charger temperature exceeded the operating temperature range? | <ol style="list-style-type: none"> 1 Interrupt charging process. 2 Leave battery and charger to cool down. 3 Start charging. <p>⇒ If the battery becomes too hot to touch, there might be a problem with the battery.</p> <ol style="list-style-type: none"> 4 Contact your specialist dealer. |
| The charger is hot. | If the charger is used continuously to charge batteries, it may become hot. | <ol style="list-style-type: none"> 1 Interrupt charging process. 2 Leave charger to cool down. 3 Start charging. |
| The LED on the charger does not light up. | The LED on the charger will go out when the battery is fully charged. | This is not a malfunction. |
| | Is the charger plug firmly connected to battery? | <ol style="list-style-type: none"> 1 Check connection for any contaminants. 2 Insert charger plug. 3 If the battery still won't recharge, contact your specialist dealer. |
| | Is the battery fully charged? | <ol style="list-style-type: none"> 1 Disconnect charger mains plug. 2 Insert mains plug again. 3 Start charging. 4 Contact your specialist dealer if the LED on the charger still doesn't light up. |
| The battery cannot be removed. | | ► Contact your specialist dealer. |
| The battery cannot be inserted. | | ► Contact your specialist dealer. |
| Fluid is leaking from the battery. | | ► Observe all the warnings in Section 2 Safety. |

Table 50: Error solution for battery

| Symptom | Cause | Remedy |
|-------------------------------------|-------|--|
| There is an unusual smell. | | <ol style="list-style-type: none"> 1 Remove from the battery immediately. 2 Contact the fire service immediately. 3 Observe all the warnings in Section 2 Safety. |
| Fumes are emitted from the battery. | | <ol style="list-style-type: none"> 1 Remove from the battery immediately. 2 Contact the fire service immediately. 3 Observe all the warnings in Section 2 Safety. |

Table 50: Error solution for battery

9.1.5 On-board computer errors

| Symptom | Cause | Remedy |
|---|--|--|
| No data is shown on the monitor when the On-Off button (battery) is pressed. | The battery charge level may be insufficient. | ► Charge the battery. |
| | Is the power switched on? | ► Press the On-Off button (battery) to switch the power on. |
| | Is the battery charged? | ► If the battery is fitted to the pedelec and is being charged, it cannot be switched on. Interrupt charging process. |
| | Is the connector fitted to the power cable correctly? | <ol style="list-style-type: none"> 1 Check that the power cable connector has not been disconnected. 2 Contact your specialist dealer if this is not the case. |
| | A component may be connected which the system is unable to recognise. | ► Contact your specialist dealer. |
| The gear level is not shown on the display screen. | The gear level is only shown if the electronic gear shift is used. | <ol style="list-style-type: none"> 1 Check whether the power cable plug has been disconnected. 2 Contact your specialist dealer if this is not the case. |
| The settings menu cannot be opened while you are pedalling. | The product is designed in such a way that the settings menu cannot be opened if the system detects that someone is riding the pedelec. This is not a malfunction. | <ol style="list-style-type: none"> 1 Stop the pedelec. 2 Change settings when stationary only. |
| The time display is flashing "0:00". | The battery in the on-board computer has come to the end of its service life. | ► Replace on-board computer battery. |

Table 51: Display error solution

9.1.6 Lighting does not work

| Symptom | Cause | Remedy |
|--|--|---|
| Front lamp or rear lamp does not go on, even when the switch is pressed. | The basic settings in the electric drive system have probably been configured incorrectly. | <ol style="list-style-type: none"> 1 Take pedelec out of service immediately. 2 Contact your specialist dealer. |
| | The light is defective. | |

Table 52: Lighting error solution

9.1.7 Other errors

| Symptom | Cause | Remedy |
|--|--|--|
| Two beeps will sound if a switch is pressed but the switch cannot be operated. | Pressed switch mode has been deactivated. | ▶ This is not a malfunction. |
| Three beeps are sounded. | A fault or warning has occurred. | ▶ This occurs when a warning or an error is shown on the on-board computer. Follow the instructions for the code indicated on screen in Section 6.2 System Messages. |
| If an electronic gear shift is used, pedal assistance becomes weaker when the gear is changed. | This is because the computer sets the pedal assistance to the optimum level. | ▶ This is not a malfunction. |
| A noise can be heard after switching. | | ▶ Contact your specialist dealer. |
| It is normal to hear a noise coming from the rear wheel when cycling as normal. | The gear shift setting may not have been made properly. | ▶ Contact your specialist dealer. |
| If the pedelec is brought to a stop the pedelec, the gear transmission does not switch to the position pre-configured in the functional feature. | You may have applied too much pressure on the pedals. | ▶ Press on the pedals only gently to make it easier to change the transmission. |

Table 53: Other drive system errors

9.2 Repair

Special expertise and tools are required for many repairs. For this reason, repairs may only be carried out at a specialist dealer. These include:

- Replacing tyres and rims
- Replacing rims, brake linings and brake discs
- Replacing and tensioning the chain.

9.2.1 Original parts and lubricants

The individual pedelec parts have been carefully selected and matched to one other.

Only original parts and lubricants must be used for maintenance and repair.

The constantly updated accessory approval and parts lists are in Section 11, Documents and Drawings.

- ▶ Follow the operating instructions for the new components.

9.2.2 Replacing the lighting

- ▶ Only use components of the respective power class for replacement.

9.2.3 Setting the front light

- ▶ The *front light* must be set so that its light beam shines on the road 10 m in front of the pedelec.

9.2.4 Checking tyre clearance

The tyre needs to be checked each time a suspension fork tyre is changed to another size.

- 1 Release pressure from the fork.
- 2 Press fork together fully.
- 3 Measure the gap between the top of the tyre and the crown's lower surface. The gap must not be less than 10 mm. If the tyre is too large, the tyre will touch the crown's lower surface if the fork is fully pressed together.
- 4 Release pressure on fork and pump it up again if it is an air suspension fork.
- 5 Take into account the fact that the gap will be smaller if there is a guard. Check again to ensure that there is sufficient clearance for the tyre.

10 Recycling and disposal



This device is marked according to the European Directive 2012/19/EU on waste electrical and electronic equipment – WEEE and the European Directive 2006/66/EC on accumulators. The directive provides the framework for the return and recycling of used devices

across the EU. Consumers are legally required to return all used batteries of any type. It is forbidden to dispose of batteries in domestic waste.

The battery manufacturer is legally obliged to take back used and old batteries free of charge according to Section 9 German Batteries Act. The pedelec frame, battery, motor, on-board computer and charger are recyclable materials. You must dispose of and recycle them separately from the domestic waste in compliance with applicable statutory regulations. Separate collection and

recycling saves reserves of raw materials and ensures that all the regulations for protection of health and the environment are adhered to when recycling the product and/or the battery.

- ▶ Never dismantle the pedelec, battery or charger for disposal.

The pedelec, on-board computer, the unopened and undamaged battery and the charger can be returned to any specialist dealer free of charge. Further disposal options may be available, depending on the region.

- ▶ Store the individual parts of the decommissioned pedelec in a dry place, free from frost, where they are protected from direct sunlight.

10.1 Removal of waste guidelines

| Waste type | Disposal |
|--|---|
| Non-hazardous waste | |
| Recycling | |
| Waste paper, cardboard | Return paper collection bin, paper container, undamaged transport packaging to suppliers |
| Scrap metal and aluminium | Take to municipal collection points or have collected by waste disposal companies |
| Tyres, tubes | Tyre manufacturers' collection points, collection forms and fax templates available from tyre manufacturers Otherwise, residual waste bin (grey bin) |
| Fibre composite components (e.g. carbon, GRP) | Large carbon components such as defective frames and carbon rims can be sent to special collection points for recycling; see www.cfk-recycling.de/index.php?id=57 |
| Dual system sales packaging made of plastic, metal and composite material, lightweight packaging | Collection by waste disposal firm where applicable; return transport packaging to suppliers Plastic waste bin (yellow bin) |
| CDs, DVDs | Take to municipal collection points since they are made of high-grade plastic and are easy to recycle Otherwise, residual waste bin (grey bin) |
| Dispose of | |
| Residual waste | Residual waste bin (grey bin) |
| Biodegradable lubricants Biodegradable oils Biodegradable cleaning cloths daubed in oil | Residual waste bin (grey bin) |

Table 54: Removal of waste guidelines


| Waste type | Disposal |
|--|--|
| Filament lamps, halogen lamps | Residual waste bin (grey bin) |
| Hazardous waste | |
|  Recycling | |
| Batteries, rechargeable batteries | Return to the battery manufacturer |
| Electric devices: Motor Display Control panel Wiring | Take to a municipal collection point for electronic waste |
| Dispose of | |
| Waste oil Cleaning cloths daubed in oil Lubrication oil Gear oil Lubricating grease Cleaning fluids Kerosene White spirit Hydraulic fluid Brake fluid | Never mix different oil fluids. Store in original container Small quantities (usually <30 kg) Take to municipal collection points for hazardous waste (e.g. mobile toxic waste collection service) Larger quantities (>30 kg) Collection by waste disposal companies |
| Paints Varnishes Thinners | Take to municipal collection points for hazardous waste (e.g. mobile toxic waste collection service) |
| Neon lights, energy-saving lamps | Take to municipal collection points for hazardous waste (e.g. mobile toxic waste collection service) |

Table 54: Removal of waste guidelines



11 Documents

11.1 Assembly report

Date:

Frame number:

| Components | Description | Tests | Criteria | | Measures if rejected |
|-----------------------------------|--|---------------------|------------|------------------------------------|---|
| | | | Acceptance | Rejection | |
| Front wheel | Assembly | | O.K. | Loose | Adjust quick release |
| Kickstand | Check mount fastening | Functional check | O.K. | Loose | Retighten screws |
| Tyres | | Tyre pressure check | O.K. | Tyre pressure too low/ too high | Adjust tyre pressure |
| Frame | Check for damage – fracture, scratches | | O.K. | Damage detected | <i>Take out of operation</i> , new frame |
| Handles, coverings | Check mount fastening | | O.K. | Not provided | Retighten screws, new handles and coverings as specified in parts list |
| Handlebars, stem | Check mount fastening | | O.K. | Loose | Retighten screws; new stem as specified in parts list if necessary |
| Steering headset | Check for damage | Functional check | O.K. | Loose | Retighten screws |
| Saddle | Check mount fastening | | O.K. | Loose | Retighten screws |
| Seat post | Check mount fastening | | O.K. | Loose | Retighten screws |
| Guard | Check mount fastening | | O.K. | Loose | Retighten screws |
| Pannier rack | Check mount fastening | | O.K. | Loose | Retighten screws |
| Attachments | Check mount fastening | | O.K. | Loose | Retighten screws |
| Bell | | Functional check | O.K. | No ring, too quiet, missing | New bell as specified in the parts list |
| Suspension elements | | | | | |
| Fork, suspension fork | Check for damage | | O.K. | Damage detected | New fork as specified in the parts list |
| Rear frame damper | Check for damage | | O.K. | Damage detected | New fork as specified in the parts list |
| Suspension seat post | Check for damage | | O.K. | Damage detected | New fork as specified in the parts list |
| Brake system | | | | | |
| Brake lever | Check mount fastening | | O.K. | Loose | Retighten screws |
| Brake fluid | Check fluid level | | O.K. | Too little | Refill with brake fluid; new brake hoses if damaged |
| Brake linings | Check brake linings, brake discs and rims for damage | | O.K. | Damage detected | New brake linings, brake discs and rims |
| Back-pedal brake braking armature | Check mount fastening | | O.K. | Loose | Retighten screws |
| Lighting system | | | | | |
| Rechargeable battery | First examination | | O.K. | Error message | <i>Take out of service</i> ; contact battery manufacturer, new battery |
| Light cabling | Connections, correct wiring | | O.K. | Cable defective, no light | New cabling |
| Rear light | Side light | Functional check | O.K. | No constant light | <i>Take out of service</i> ; new rear light as specified in parts list; replace if necessary |
| Front light | Side light, daytime riding light | Functional check | O.K. | No constant light | <i>Take out of service</i> ; new front light as specified in parts list; replace if necessary |
| Reflectors | All complete, state, fastening | | O.K. | Damaged or not all complete | New reflectors |



| Drive/gear shift | | | | | |
|--|------------------------------------|-------------------|-------------------|---|--|
| Chain/cassette/pinion/chainring | Check for damage | | O.K. | Damage | Refasten if necessary or replace as specified in parts list |
| Chain guard/spoke guard | Check for damage | | O.K. | Damage | Replace as specified in parts list |
| Bottom bracket axle/crank | Check mount fastening | | O.K. | Loose | Retighten screws |
| Pedals | Check mount fastening | | O.K. | Loose | Retighten screws |
| Shifter | Check mount fastening | Functional check | O.K. | Loose | Retighten screws |
| Shift cables | Check for damage | Functional check | O.K. | Loose and defective | Adjust shift cables; new shift cables if necessary |
| Front derailleur | Check for damage | Functional check | O.K. | Switching gears difficult or not possible | Adjust |
| Rear derailleur | Check for damage | Functional check | O.K. | Switching gears difficult or not possible | Adjust |
| Electric drive | | | | | |
| On-board computer | Check for damage | Functional check | O.K. | No screen, defective screen display | Restart, test battery, new software or new on-board computer, <i>take out of service</i> |
| Electric drive control panel | Drive Check for damage | Functional check | O.K. | No response | Restart; contact control panel manufacturer, new control panel |
| Tachometer | | Speed measurement | O.K. | Pedelec travelling 10 % too fast/slow | Take pedelec out of service until the source of the error is found |
| Cabling | Visual inspection | | O.K. | Failure in system, damage, kinked cables | New cabling |
| Battery mount | Firmly in position, lock, contacts | Functional check | O.K. | Loose; lock doesn't close, no contacts | New battery mount |
| Motor | Visual inspection and mount | | O.K. | Damage, loose | Refasten motor, contact motor manufacturer, new motor |
| Software | Check version | | In latest version | Not latest version | Import update |

Technical inspection, checking safety, test ride

| Components | Description | | Criteria | | Measures if rejected |
|--|---------------------|------------------|-------------------|--|--|
| | Assembly/inspection | Tests | Acceptance | Rejection | |
| Brake system | | Functional check | O.K. | No full braking; braking distance too long | Locate defective part in brake system and correct |
| Gear shift under operating load | | Functional check | O.K. | Problems when shifting gear | Readjust gear shift |
| Suspension components (fork, shock absorber, seat post) | | Functional check | O.K. | Suspension too deep or no longer exists | Locate defective component and correct |
| Electric drive | | Functional check | O.K. | Loose connection, problems when riding, accelerate | Locate defective part in electric drive and correct |
| Lighting system | | Functional check | O.K. | No continuous light, not bright enough | Locate defective part in lighting system and correct |
| Test ride | | | No strange noises | Strange noises | Locate source of noise and correct |

| | |
|---|--|
| Date: | |
| Fitter's name: | |
| Final inspection by workshop manager | |



11.2 Maintenance log

Diagnosis and documentation of current status

Date:

Frame number:

| Components | Frequency | Description | | | Criteria | | Measures if rejected |
|----------------------------|-----------------------------------|--|---------------------|--|------------|---------------------------------|--|
| | | Inspection | Tests | Maintenance | Acceptance | Rejection | |
| Front wheel | 6 months | Assembly | | | O.K. | Loose | Adjust quick release |
| Kickstand | 6 months | Check mount fastening | Functional check | | O.K. | Loose | Retighten screws |
| Tyres | 6 months | | Tyre pressure check | | O.K. | Tyre pressure too low/ too high | Adjust tyre pressure |
| Frame | 6 months | Check for damage – fracture, scratches | | | O.K. | Damage detected | Take pedelec out of service, new frame |
| Handles, coverings | 6 months | Wear; check if fastened securely | | | O.K. | Not provided | Retighten screws, new handles and coverings as specified in parts list |
| Handlebars, stem | 6 months | Check mount fastening | | | O.K. | Loose | Retighten screws; new stem as specified in parts list if necessary |
| Steering headset | 6 months | Check for damage | Functional check | Lubricating and adjustment | O.K. | Loose | Retighten screws |
| Saddle | 6 months | Check mount fastening | | | O.K. | Loose | Retighten screws |
| Seat post | 6 months | Check mount fastening | | | O.K. | Loose | Retighten screws |
| Guard | 6 months | Check mount fastening | | | O.K. | Loose | Retighten screws |
| Pannier rack | 6 months | Check mount fastening | | | O.K. | Loose | Retighten screws |
| Attachments | 6 months | Check mount fastening | | | O.K. | Loose | Retighten screws |
| Bell | 6 months | | Functional check | | O.K. | No ring, too quiet, missing | New bell as specified in the parts list |
| Suspension elements | | | | | | | |
| Fork, suspension fork | To manufacturer's specifications* | Check for damage, corrosion, fracture | | Maintenance as specified by manufacturer Lubrication, oil change as specified by manufacturer | O.K. | Damage detected | New fork as specified in the parts list |
| Rear frame damper | To manufacturer's specifications* | Check for damage, corrosion, fracture | | Maintenance as specified by manufacturer Lubrication, oil change as specified by manufacturer | O.K. | Damage detected | New fork as specified in the parts list |
| Suspension seat post | To manufacturer's specifications* | Check for damage | | Maintenance as specified by manufacturer | O.K. | Damage detected | New fork as specified in the parts list |



| Components | Frequency | Description | | | Criteria | | Measures if rejected |
|--|-----------|--|------------------|---------------------------|------------|---|--|
| | | Inspection | Tests | Maintenance | Acceptance | Rejection | |
| Brake system | | | | | | | |
| Brake lever | 6 months | Check mount fastening | | | O.K. | Loose | Retighten screws |
| Brake fluid | 6 months | Check fluid level | | Depending on time of year | O.K. | Too little | Top up brake fluid; <i>take Pedelec out of service</i> if damaged; new brake hoses |
| Brake linings | 6 months | Check brake linings, brake discs and rims for damage | | | O.K. | Damage detected | New brake linings, brake discs and rims |
| Back-pedal brake braking armature | 6 months | Check mount fastening | | | O.K. | Loose | Retighten screws |
| Brake system | 6 months | Check mount fastening | | Functional check | O.K. | Loose | Retighten screws |
| Lighting system | | | | | | | |
| Rechargeable battery | 6 months | First examination | | | O.K. | Error message | Contact battery manufacturer; <i>take out of service</i> , new battery |
| Light cabling | 6 months | Connections, correct wiring | | | O.K. | Cable defective, no light | New cabling |
| Rear light | 6 months | Side light | Functional check | | O.K. | No constant light | New rear light as specified in parts list; replace if necessary |
| Front lamp | 6 months | Side light, daytime riding light | Functional check | | O.K. | No constant light | New front light as specified in parts list; replace if necessary |
| Reflectors | 6 months | All complete, state, fastening | | | O.K. | Damaged or not all complete | New reflectors |
| Drive/gear shift | | | | | | | |
| Chain/cassette/pinion/chainring | 6 months | Check for damage | | | O.K. | Damage | Refasten if necessary or replace as specified in parts list |
| Chain guard/spoke guard | 6 months | Check for damage | | | O.K. | Damage | Replace as specified in parts list |
| Bottom bracket axle/crank | 6 months | Check mount fastening | | | O.K. | Loose | Retighten screws |
| Pedals | 6 months | Check mount fastening | | | O.K. | Loose | Retighten screws |
| Shifter | 6 months | Check mount fastening | Functional check | | O.K. | Loose | Retighten screws |
| Shift cables | 6 months | Check for damage | Functional check | | O.K. | Loose and defective | Adjust shift cables; new shift cables if necessary |
| Front derailleur | 6 months | Check for damage | Functional check | | O.K. | Switching gears difficult or not possible | Adjust |
| Rear derailleur | 6 months | Check for damage | Functional check | | O.K. | Switching gears difficult or not possible | Adjust |



| Components | Frequency | Description | | | Criteria | | Measures if rejected |
|-------------------------------------|-----------|------------------------------------|-------------------|-------------|-------------------|--|--|
| | | Inspection | Tests | Maintenance | Acceptance | Rejection | |
| Electric drive | | | | | | | |
| On-board computer | 6 months | Check for damage | Functional check | | O.K. | No screen, defective screen display | Restart, test battery, new software or new on-board computer; <i>take out of service</i> |
| Electric drive control panel | 6 months | Drive Check for damage | Functional check | | O.K. | No response | Restart; contact control panel manufacturer, new control panel |
| Tachometer | 6 months | | Speed measurement | | O.K. | Pedelec travelling 10 % too fast/slow | Take pedelec out of service until the source of the error is found |
| Cabling | 6 months | Visual inspection | | | O.K. | Failure in system, damage, kinked cables | New cabling |
| Battery mount | 6 months | Firmly in position, lock, contacts | Functional check | | O.K. | Loose; lock doesn't close, no contacts | New battery mount |
| Motor | 6 months | Visual inspection and mount | | | O.K. | Damage, loose | Refasten motor; contact motor manufacturer, new motor; <i>take out of service</i> |
| Software | 6 months | Check version | | | In latest version | Not latest version | Import update |

Technical inspection, checking safety, test ride

| Components | Description | | Criteria | | Measures if rejected |
|--|---------------------|------------------|-------------------|--|--|
| | Assembly/inspection | Tests | Acceptance | Rejection | |
| Brake system | 6 months | Functional check | O.K. | No full braking; braking distance too long | Locate defective part in brake system and correct |
| Gear shift under operating load | 6 months | Functional check | O.K. | Problems when shifting gear | Readjust gear shift |
| Suspension components (fork, shock absorber, seat post) | 6 months | Functional check | O.K. | Suspension too deep or no longer exists | Locate defective component and correct |
| Electric drive | 6 months | Functional check | O.K. | Loose connection, problems when riding, accelerate | Locate defective part in electric drive and correct |
| Lighting system | 6 months | Functional check | O.K. | No continuous light, not bright enough | Locate defective part in lighting system and correct |
| Test ride | 6 months | Functional check | No strange noises | Strange noises | Locate source of noise and correct |

| | |
|--------------------------------------|--|
| Date: | |
| Fitter's name: | |
| Final inspection by workshop manager | |



Notes

11.3 Parts list

11.3.1 Twenty 6 EVO

22-26-1002

| | | |
|----------------------------|---|-----------------------------------|
| Frame | ... | Aluminium |
| Fork | SR SUTOUR, XCR LO DS | Deflection: 100 mm |
| Damper | ... | ... |
| Steering headset | FSA | |
| Handlebars | Bulls Alloy | Aluminium |
| Handles | Bulls | ... |
| Stem | MONKEYLINK, AS-ML3 | ... |
| Saddle | SELLE ROYAL | ... |
| Seat post | STYX | 30.9 mm |
| Saddle clamp | MONKEYLINK, QR-ML-3 | ... |
| Crank bearing | FSA | 165 mm |
| Pedals | VP, VP-992A | ... |
| Rear derailleur | SHIMANO, Alivio RD-4000-SGS | 9-speed derailleur gears |
| Shifter | SHIMANO, Altus SL-M2010 | Shifter |
| Front derailleur | ... | ... |
| Cassette/cassette sprocket | SHIMANO, Altus CS-HG200-9 | 11-36T |
| Chain | ... | ... |
| Belt | ... | ... |
| Front brake | TEKTRO, HD-M282 | Hydraulic disc brake |
| Rear brake | TEKTRO, HD-M282 | Hydraulic disc brake |
| Brake lever, front/rear | TEKTRO, HD-M282 | ... |
| Disc, front | ... | 180 mm, 6-bolt |
| Disc, rear | ... | 160 mm, 6-bolt |
| Wheel set | ... | ... |
| Rim, front/rear | Bulls, DDM-2 | ... |
| Hub, front | FORMULA | ... |
| Hub, rear | FORMULA, DC-25RQR | Aluminium, 6-BOLT TYPE, 13G x 32H |
| Spokes | ... | ... |
| Tyres | SCHWALBE, Billy Bonkers, Active Line, K-Guard | 54-559, 26 x 2.10 |
| Tube | ... | ... |
| Front lamp | ... | ... |
| Rear lamp | ... | ... |
| Dynamo | ... | ... |
| Pannier rack | ... | ... |
| Guard | ... | ... |
| Chain guard | ... | ... |

| | | |
|-----------------------------|--------------------------------|--------------------|
| Lock | ABUS | ... |
| Stand/stand mount | ... | Aluminium, black |
| Motor | BOSCH, Active Line, BDU350 | 250 Watt, 50 Nm |
| Rechargeable battery | BOSCH, PowerPack 400, BBP282 | Horizontal, 400 Wh |
| Display | BOSCH | ... |
| Charger | BOSCH, Compact Charger, BCS230 | 2 A |

...not available

11.3.2 Twenty4 E 24

22-26-1001

| | | |
|----------------------------|---|-----------------------------------|
| Frame | ... | Aluminium |
| Fork | SR SUTOUR, XCT JR L | Deflection: 80 mm |
| Damper | ... | ... |
| Steering headset | FSA | |
| Handlebars | STYX, Junior Alloy | Aluminium |
| Handles | Bulls | ... |
| Stem | MTB- S | with CCS slot |
| Saddle | SELLE ROYAL | ... |
| Seat post | STYX | 30.9 mm |
| Saddle clamp | ... | Aluminium |
| Crank bearing | FSA | 155 mm |
| Pedals | VP, VP-992A | ... |
| Rear derailleur | SHIMANO, Alivio RD-4000-SGS | 8-speed derailleur gears |
| Shifter | SHIMANO, Altus SL-M315 | Shifter |
| Front derailleur | ... | ... |
| Cassette/cassette sprocket | SHIMANO, Altus CS-HG31-8 | 11-34T |
| Chain | KMC, X8 | ... |
| Belt | ... | ... |
| Front brake | TEKTRO, HD-J285 | Hydraulic disc brake |
| Rear brake | TEKTRO, HD-J285 | Hydraulic disc brake |
| Brake lever, front/rear | TEKTRO, HD-J285 | ... |
| Disc, front | ... | 160 mm, 6-bolt |
| Disc, rear | ... | 160 mm, 6-bolt |
| Wheel set | ... | ... |
| Rim, front/rear | STYX, DDM-2 | ... |
| Hub, front | FORMULA | ... |
| Hub, rear | FORMULA, DC-25RQR | Aluminium, 6-BOLT TYPE, 13G x 32H |
| Spokes | ... | ... |
| Tyres | SCHWALBE, Billy Bonkers, Active Line, K-Guard | 54-507, 24 x 2 125 |
| Tube | ... | ... |
| Front lamp | FUXON, FS-30 EB | 30 lx |
| Rear lamp | FUXON, ML-009 | ... |
| Dynamo | ... | ... |
| Pannier rack | ... | ... |
| Guard | ... | ... |
| Chain guard | ... | ... |
| Lock | ABUS | ... |
| Stand/stand mount | ... | Aluminium, black |

| | | |
|-----------------------------|--------------------------------|-----------------|
| Motor | BOSCH, Active Line, BDU310 | 250 Watt, 40 Nm |
| Rechargeable battery | BOSCH, PowerPack 400, BBS265 | 400 Wh |
| Display | BOSCH | ... |
| Charger | BOSCH, Compact Charger, BCS230 | 2 A |


...not available

11.4 Charger operating instructions



Charger


BCS220 | BCS230 | BCS250

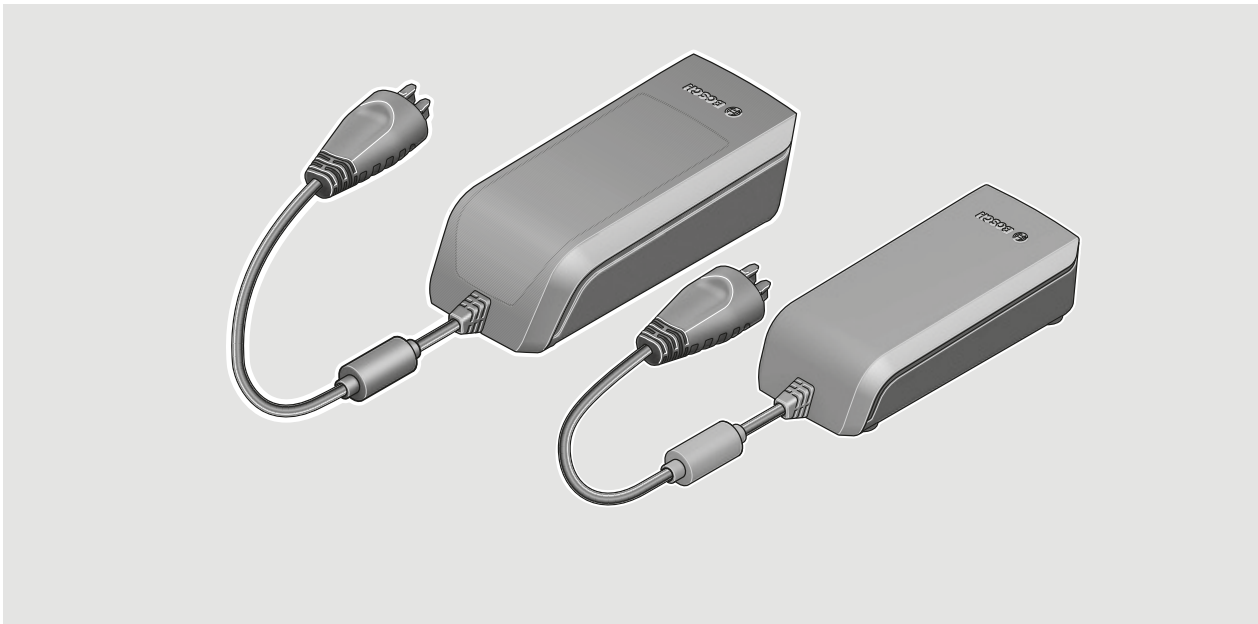

- de** Originalbetriebsanleitung
- en** Original operating instructions
- fr** Notice d'utilisation d'origine
- es** Instrucciones de servicio originales
- pt** Manual de instruções original
- it** Istruzioni d'uso originali
- nl** Oorspronkelijke gebruiksaanwijzing
- da** Original brugsanvisning
- sv** Originalbruksanvisning
- no** Original bruksanvisning
- fi** Alkuperäinen käyttöopas
- el** Πρωτότυπες οδηγίες λειτουργίας




2 |


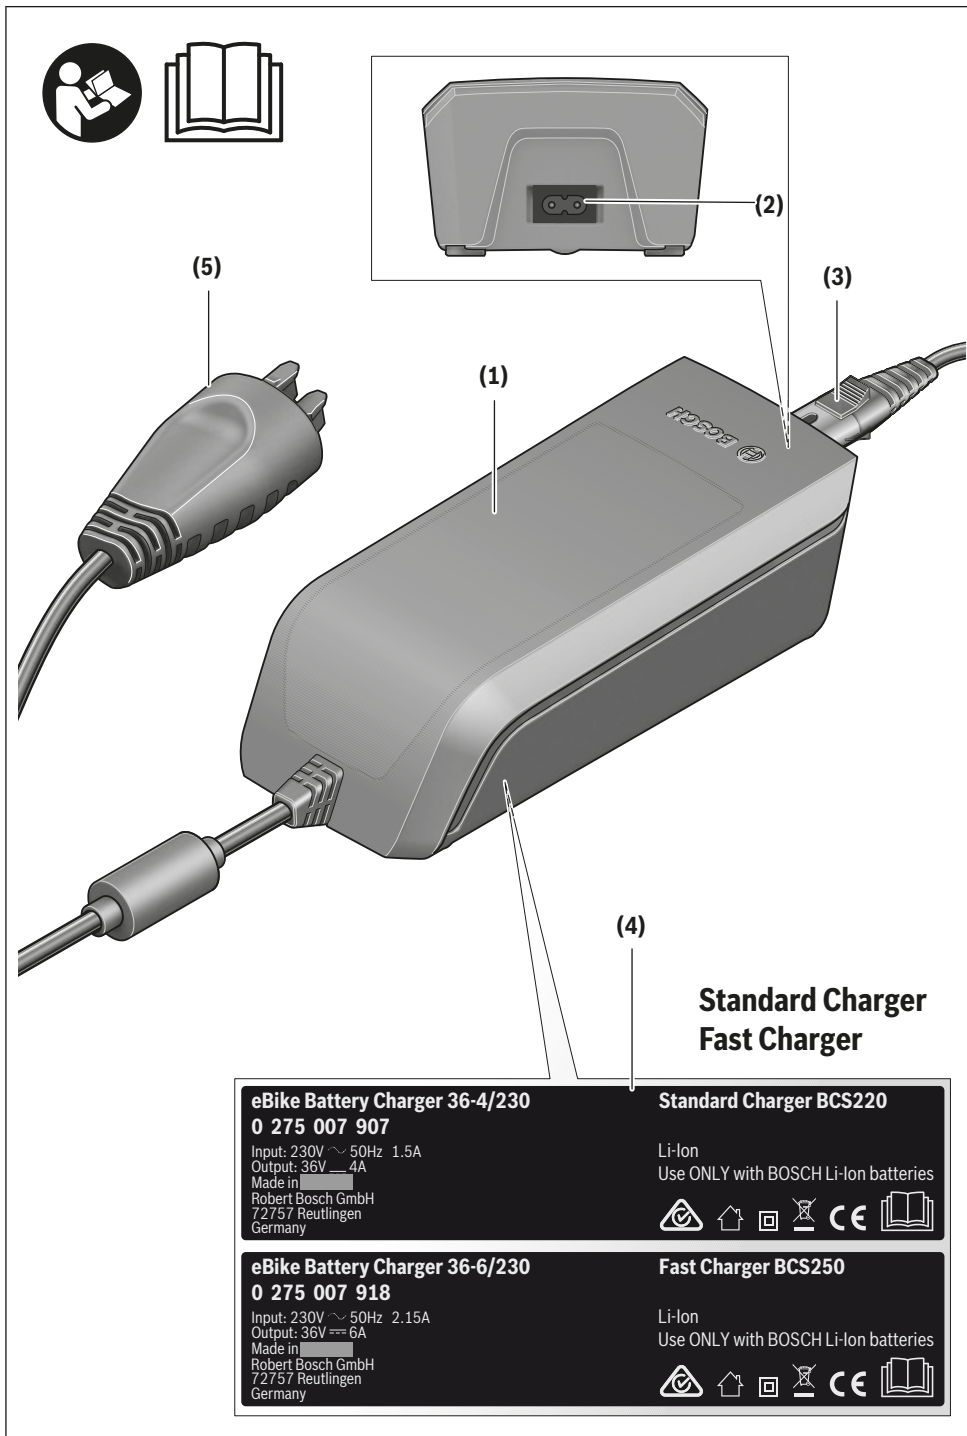



0 275 007 XCX | (13.03.2020)

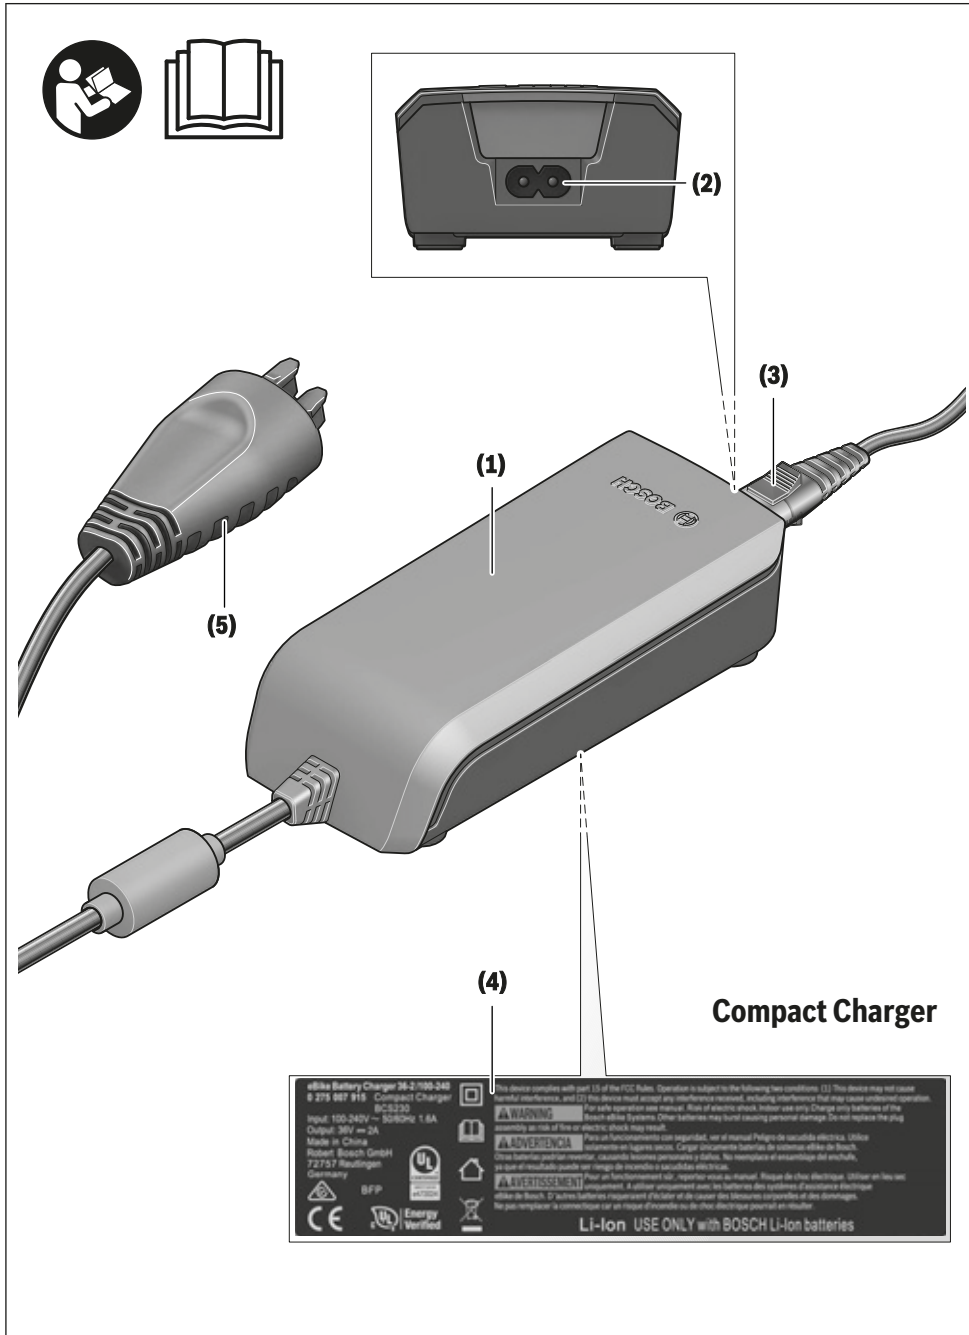Bosch eBike Systems




4 |

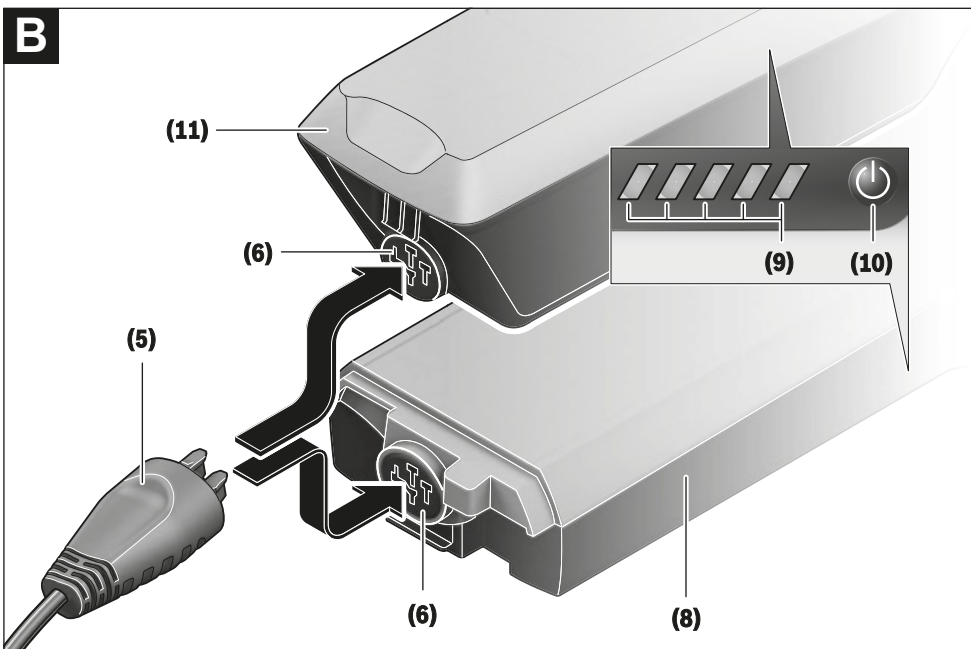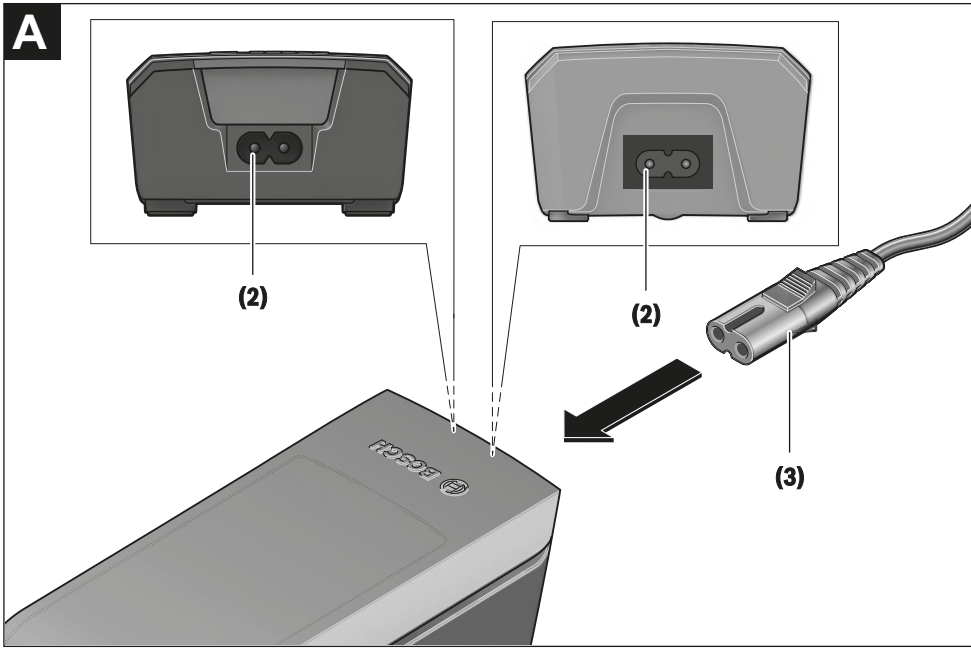

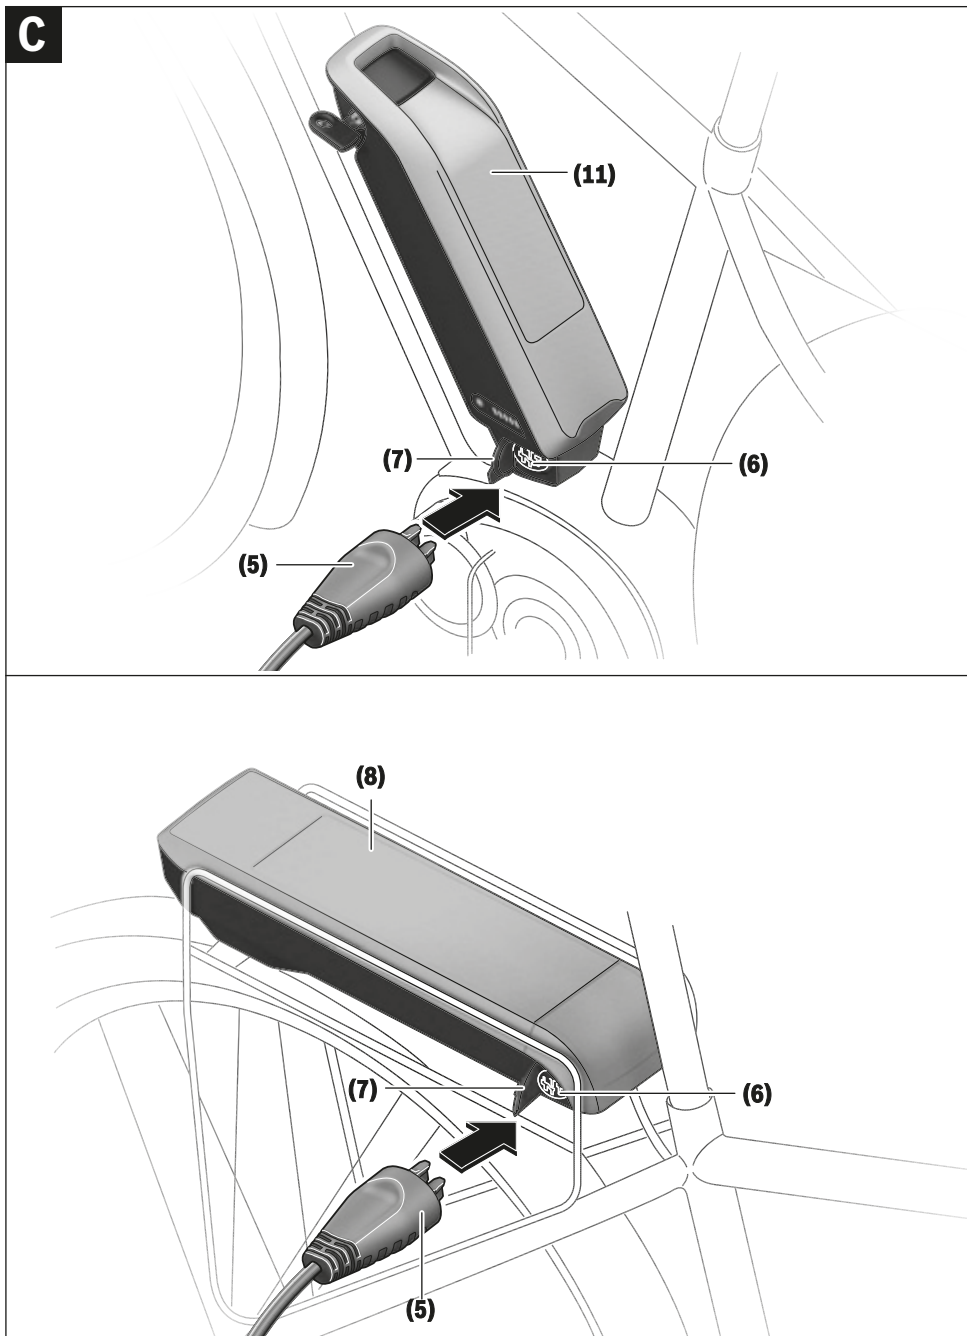

6 |

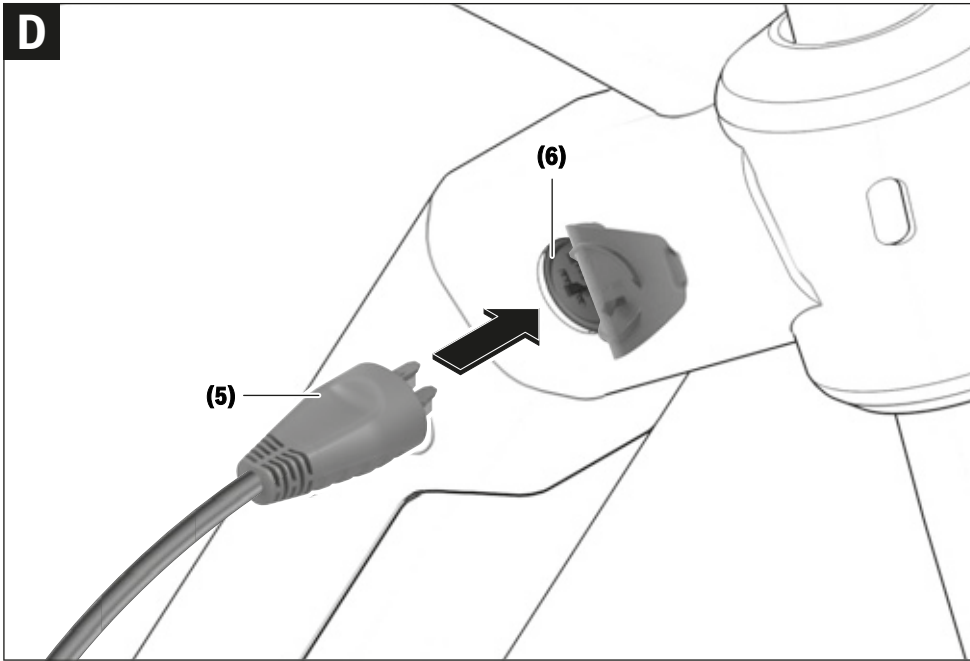

Safety instructions



Read all the safety and general instructions. Failure to observe the safety and general instructions may result in electric shock,

fire and/or serious injury.

Save all safety warnings and instructions for future reference.

The term **battery** is used in these instructions to mean all original Bosch eBike rechargeable battery packs.



Do not expose the charger to rain or wet conditions. If water enters a charger, there is a risk of electric shock.

- ▶ **Charge only Bosch lithium-ion batteries that are approved for use in eBikes. The battery voltage must match the battery charging voltage of the charger.** Otherwise there is a danger of fire and explosion.
- ▶ **Keep the charger clean.** Dirt poses a risk of electric shock.
- ▶ **Always check the charger, cable and plug before use. Stop using the charger if you discover any damage. Do not open the charger.** Damaged chargers, cables and plugs increase the risk of electric shock.
- ▶ **Do not operate the charger on an easily ignited surface (e.g. paper, textiles, etc.) or in a flammable environment.** There is a risk of fire due to the charger heating up during operation.
- ▶ **Take care if you touch the charger while it is charging. Wear protective gloves.** The charger can get very hot, especially when the ambient temperature is high.
- ▶ **The battery may give off fumes if it becomes damaged or is used incorrectly. Ensure the area is well ventilated and seek medical attention should you experience any adverse effects.** The fumes may irritate the respiratory system.
- ▶ **The eBike battery must not be left unattended while charging.**
- ▶ **Supervise children during use, cleaning and maintenance.** This will ensure that children do not play with the charger.
- ▶ **Children or persons who, owing to their physical, sensory or mental limitations or to their lack of experience or knowledge, are not capable of safely operating the charger may only use this charger under supervision or after having been instructed by a responsible person.** Otherwise, there is a danger of operating errors and injuries.
- ▶ **Read and observe the safety warnings and directions contained in all the eBike system operating instructions and in the operating instructions of your eBike.**
- ▶ A sticker in English is adhered to the bottom of the charger (marked **(4)** in the diagram on the graphics page). This says: Use ONLY with BOSCH lithium-ion batteries.

Product description and specifications

Intended Use

In addition to the functions shown here, changes to software relating to troubleshooting and functional modifications may be introduced at any time.

The Bosch eBike chargers are intended exclusively for charging Bosch eBike batteries and must not be used for any other purpose.

Product features

The numbering of the components shown refers to the illustrations on the graphics pages at the beginning of the manual.

Individual illustrations in these operating instructions may differ slightly from the actual conditions depending on the equipment of your eBike.

- (1) Charger
- (2) Device socket
- (3) Device connector
- (4) Charger safety instructions
- (5) Charging connector
- (6) Socket for charging connector
- (7) Charging socket cover
- (8) Rack-mounted battery
- (9) Operation/state of charge indicator
- (10) Battery on/off button
- (11) Standard battery

English – 2

Technical data

| Charger | | Standard charger (36-4/230) | Compact charger (36-2/100-230) | Fast charger (36-6/230) |
|--------------------------|-----|--------------------------------|-----------------------------------|----------------------------|
| Product code | | BCS220 | BCS230 | BCS250 |
| Rated voltage | V~ | 207 to 264 | 90 to 264 | 207 to 264 |
| Frequency | Hz | 47 to 63 | 47 to 63 | 47 to 63 |
| Battery charging voltage | V= | 36 | 36 | 36 |
| Charging current (max.) | A | 4 | 2 | 6 ^{A)} |
| Charging time | | | | |
| – PowerPack 300, approx. | hrs | 2.5 | 5 | 2 |
| – PowerPack 400, approx. | hrs | 3.5 | 6.5 | 2.5 |
| – PowerPack 500, approx. | hrs | 4.5 | 7.5 | 3 |
| Operating temperature | °C | 0 to +40 | 0 to +40 | 0 to +40 |
| Storage temperature | °C | +10 to +40 | +10 to +40 | +10 to +40 |
| Weight, approx. | kg | 0.8 | 0.6 | 1.0 |
| Protection rating | | IP 40 | IP 40 | IP 40 |

A) The charging current is limited to 4 A for the PowerPack 300 and for Classic+ Line batteries.

The specifications apply to a rated voltage [U] of 230 V. These specifications may vary at different voltages and in country-specific models.

Operation

Start-up

Connecting the charger to the mains (see figure A)

- ▶ **Pay attention to the mains voltage.** The voltage of the power source must match the voltage specified on the rating plate of the charger. Chargers marked 230 V can also be operated at 220 V.

Plug the device connector **(3)** of the power cable into the device socket **(2)** on the charger.

Connect the power cable (country-specific) to the mains.

Charging the removed battery (see figure B)

Switch the battery off and remove it from its holder on the eBike. When doing so, read and observe the operating instructions of the battery.

- ▶ **Ensure the battery is placed on clean surfaces only.** Avoid getting dirt, e.g. sand or soil, in the charging socket and contacts in particular.

Plug the charging connector **(5)** of the charger into the socket **(6)** on the battery.

Charging the battery on the bike (see figures C and D)

Switch the battery off. Clean the cover of the charging socket **(7)**. Avoid getting dirt, e.g. sand or soil, in the charging socket and contacts in particular. Lift the cover of the charging socket **(7)** and plug the charging connector **(5)** into the charging socket **(6)**.

- ▶ **There is a risk of fire due to the charger heating up during charging. Ensure the battery on the bike is completely dry and placed on a fireproof surface before charging.** If this is not possible, remove the battery from the holder and charge it in a more suitable location.

When doing so, read and observe the operating instructions of the battery.

Charging process for two batteries

If two batteries are fitted to an eBike, both batteries can be charged using the uncovered connection. To begin with, both batteries are charged one after the other until they reach approx. 80–90 % capacity, then they are both fully charged at the same time (the LEDs flash on both batteries).

When the bike is in operation, power is drawn from both batteries on an alternating basis.

If you take the batteries out of the holders, you can charge each one individually.

Charging process

The charging process begins as soon as the charger is connected to the battery or charging socket on the bike and to the mains.

Note: The charging process is only possible when the temperature of the eBike battery is within the permitted charging temperature range.

Note: The drive unit is deactivated during the charging process.

The battery can be charged with and without the on-board computer. When charging without the on-board computer, the charging procedure can be observed on the battery charge indicator.

When the on-board computer is connected, a charging notification appears on the display.

The state of charge is displayed by the battery charge indicator **(9)** on the battery and by the bars on the on-board computer.

The LEDs on the battery charge indicator **(9)** flash during the charging process. Each solid illuminated LED represents ap-

proximately 20 % of the charging capacity. The flashing LED indicates the next 20 % currently charging.

Once the eBike battery is fully charged, the LEDs go out immediately and the on-board computer is switched off. The charging process is terminated. The state of charge can be displayed for three seconds by pressing the on/off button (10) on the eBike battery.




Disconnect the charger from the mains and the battery from the charger.

When the battery is disconnected from the charger, the battery is automatically switched off.

Note: If you have charged the battery on the bike, carefully close the charging socket (6) with the cover (7) after charging, so that no dirt or water can get in.

If the charger is not disconnected from the battery after charging, after a few hours the charger will switch itself back on, check the state of charge of the battery and begin the charging procedure again if necessary.

Errors – causes and corrective measures

| Cause | Corrective measures |
|---|--|
|  <p>Battery defective</p> | <p>Two LEDs flash on the battery.</p> <p>Contact an authorised bike dealership.</p> |
|  <p>Battery too warm or too cold</p> | <p>Three LEDs flash on the battery.</p> <p>Disconnect the battery from the charger until the charging temperature range has been reached.</p> <p>Do not reconnect the battery to the charger until it has reached the correct charging temperature.</p> |
|  <p>The charger is not charging.</p> | <p>No LEDs flashing (one or more LEDs will remain permanently lit depending on the state of charge of the eBike battery).</p> <p>Contact an authorised bike dealership.</p> |
| Charging not possible (no indicator on battery) | |
| Connector not attached properly | Check all connections. |
| Battery contacts dirty | Carefully clean the battery contacts. |
| Plug socket, cable or charger defective | Check the mains voltage, have the charger checked over by a bike dealership. |
| Battery defective | Contact an authorised bike dealership. |

Maintenance and servicing

Maintenance and cleaning

If the charger fails, please contact an authorised bike dealership.

After-sales service and advice on using products

If you have any questions about the charger, contact an authorised bike dealership.

For contact details of authorised bike dealerships, please visit www.bosch-ebike.com.

Disposal

Chargers, accessories and packaging should be recycled in an environmentally friendly manner.

Do not dispose of chargers along with household waste.

Only for EU countries:



According to the European Directive 2012/19/ EU on Waste Electrical and Electronic Equipment and its implementation into national law, chargers that are no longer usable must be collected separately and disposed of in an environmentally friendly manner.

Subject to change without notice.

12 Glossary

Bicycle for young adults

Source: ISO 4210-2: pedelec designed for use on public roads by a young adult whose weight is less than 40 kg, with maximum saddle height of 635 mm or more and less than 750 mm (see ISO 4210).

Brake lever

Source: EN 15194:2017: lever used to apply the brake.

Braking distance

Source: EN 15194:2017: distance travelled by a pedelec between the commencement of braking and the point at which the pedelec comes to rest.

Cargo bike

Source: DIN 79010: pedelec mainly designed to carry goods.

CE marking

Source: Directive on Machinery: the manufacturer uses the CE marking to declare that the pedelec complies with the applicable requirements.

City and trekking bicycles

Source: EN-ISO 4210 - 2: pedelec designed for use on public roads primarily for means of transportation or leisure.

Consumables

Source: EN 82079-1: any part or material that is needed to continue using or maintain the product.

Continuous power rating

Source: ISO 15194:2017, output power specified by the manufacturer at which the motor reaches its thermal equilibrium under the specified ambient conditions.

Decommissioning

Source: DIN 31051: intentional, unlimited interruption in an object's functional capability.

Disc brake

Source: EN 15194:2017: brake in which brake pads are used to grip the lateral faces of a thin disc attached to or incorporated into the wheel hub.

Drive belt

Source: EN 15194:2017: seamless ring belt which is used as a means of transmitting drive force.

Electrical control system

Source: EN 15194:2017: electronic and/or electrical component or an assembly of components provided for installation into a vehicle, together with all electrical connections and associated wiring for the motor electrical power assistance.

Electrically power assisted pedelec, pedelec

Source: EN 15194:2017: electrically power assisted cycle pedelec EPAC bicycles, equipped with pedals and an auxiliary electric motor, which cannot be propelled exclusively by means of the auxiliary electric motor, except in start-up assistance mode.

Emergency stop

Source: ISO 13850:2015, function or signal, designed: — to avert arising or reduce existing hazards to persons, damage to machinery or to work in progress; – to be initiated by a single human action.

Fault

Source: EN 13306:2018-02, 6.1: state of an item (4.2.1) characterized by inability to perform a required function (4.5.1), excluding the inability during preventive maintenance or other planned actions, or due to lack of external resources.

Folding bicycle

Source: ISO 4210-2: pedelec designed to fold into a compact form, making it easy to transport and store.

Fork steerer

Source: EN 15194:2017: part of a fork that rotates around the steering axis of a pedelec frame head tube. It is normally connected to the fork crown or directly to the fork legs, and is normally the point of connection between the fork and the handlebar stem.

Fracture

Source: EN 15194:2017: unintentional separation into two or more parts.

Maintenance

Source: DIN 31051: maintenance is generally performed at regular intervals and often carried out by trained technical staff. This ensures a maximum service life and low wear and tear for the maintained items. Proper maintenance is often also a pre-requisite for providing a warranty.

Manufacturer

Source: Directive 2006/42/EC on Machinery, 17.05.2006 Any natural or legal person who designs and/or manufactures machinery or partly completed machinery covered by this Directive and is responsible for the conformity of the machinery or the partly completed machinery with this Directive with a view to its being placed on the market, under his own name or trademark or for his own use.

Maximum continuous power rating

Source: ZEG: the maximum continuous power rating is the maximum power for the electric motor output shaft during 30 minutes.

Maximum permitted total weight

Source: EN 15194:2017: weight of the fully assembled pedelec plus the rider and baggage, as specified by the manufacturer.

Maximum saddle height

Source: EN 15194:2017: vertical distance from the ground to the point where the top of the seat surface is intersected by the seat-post axis, measured with the saddle in a horizontal position and with the seat-post set to the minimum insertion-depth mark.

Maximum tyre pressure

Source: EN 15194:2017: maximum tyre pressure recommended by the tyre or rim manufacturer for a safe and efficient performance. If the rim and tyre both indicate a maximum tyre pressure, the maximum inflation pressure is the lower of the two pressures indicated.

Minimum insertion depth

Source: EN 15194:2017: mark indicating the minimum insertion depth of handlebar stem into fork steerer (fork stem) or seat post into frame.

Model year

Source: ZEG: the model year refers to the first production year that the series-manufactured pedelec was manufactured in the version in question and is not always identical with the year of manufacture. The year of manufacture may be before the model year in some cases. If no technical modifications are introduced to the series, production may continue of pedelecs from a previous model year.

Mountain bike

Source: ISO 4210 - 2: pedelec designed for use off-road on rough terrain, on public roads, and on public pathways, equipped with a suitably strengthened frame and other components, and, typically, with wide-section tyres with coarse tread patterns and a wide range of transmission gears.

Negative deflection

Negative deflection or sag is fork compression caused by body weight and gear (e.g. a backpack), their sitting position and the frame geometry.

Off-road rough terrain

Source: EN 15194:2017: rough gravel tracks, forest trails and other generally off-road tracks where tree roots and rocks are likely to be encountered.

Operating instructions

Source: ISO/DIS 20607:2018: part of the user information that machine manufacturers provide to machine operators; it contains guidance, instructions and tips related to the use of the machine in all its life cycle phases.

Placing on the market

Source: Directive 2006/42/EC on Machinery, 17.05.2006, Making available for the first time in the Community machinery or partly completed machinery with a view to distribution or use, whether for reward or free of charge.

Pressure point

Source: ZEG: the pressure point on a brake is the point on the brake lever where the brake disc and brake pads respond and the braking process is initiated.

Quick-release device, quick release

Source: EN 15194:2017: lever actuated mechanism that connects, retains or secures a wheel or any other component.

Racing bicycle

Source: ISO 4210-2: pedelec designed for amateur rides at high speed and for use on public roads having a control and steering assembly with multiple grip positions to provide an aerodynamic posture Bicycle multi-speed transmission system and a tyre width not greater than 28 mm with the fully assembled bicycle having a maximum mass of 12 kg.

Rebound

The rebound defines the speed at which the fork rebounds after being loaded.

Rechargeable battery, battery

Source: DIN 40729:1985-05: a rechargeable battery is an energy storage device that can store supplied electrical energy as chemical energy (charging) and release it as electrical energy when required (discharging).

Seat post

Source: EN 15194:2017: component that clamps the saddle (with a bolt or assembly) and connects it to the frame.

Serial number

Source – ZEG: each pedelec has an eight-digit type number which is used to specify the design model year, the type and the version.

Shut-off speed

Source: EN 15194:2017: speed reached, by the pedelec, at the moment the current has dropped to zero or to the no load current value.

Slippage

Source: DIN 75204-1:1992-05: the difference in relation to vehicle speed between the vehicle speed and the speed of its wheels at their circumference.

Spare part

Source: EN 13306:2018-02, 3.5: item intended to replace a corresponding item in order to retain or maintain the original required function of the item.

Suspension fork

Source: EN 15194:2017: front wheel fork incorporating controlled, axial flexibility to reduce the transmission of road-shocks to the rider.

Suspension frame

Source: EN 15194:2017: frame incorporating controlled, vertical flexibility to reduce the transmission of road-shocks to the rider.

Total deflection

Source: Benny Wilbers, Werner Koch: Neue Fahrwerkstechnik im Detail (New chassis technology in detail): The distance that the wheel travels between an unloaded and a loaded position is called total deflection. When at rest, the vehicle's mass is applied to the springs and reduces the total deflection by the *negative deflection* to the positive deflection.

Wear

Source: DIN 31051: reduction in useful life (4.3.4), caused by chemical and/or physical processes.

Weight of ready-to-ride pedelec

Source: ZEG: the indicated weight for a ready-to-ride pedelec refers to the weight of a pedelec at the time of sale. The weight of each additional accessory must be added to this weight

Wheel

Source: ISO 4210 - 2: unit or combination of hub, rim and spokes or disc, but excluding tyre assembly.

Work environment

Source: ISO 9000:2015: set of conditions under which work is performed.

Year of manufacture

Source: ZEG: the year of manufacture is the year in which the pedelec was manufactured. The production period is always from May to July the following year.

12.1 Abbreviations

ABS = anti-blocking system

ECP = electronic cell protection

12.2 Simplified terms

The following terms are used for better legibility:

| Term | Meaning |
|------------------------|---------------------------------|
| Operating instructions | Original operating instructions |
| Damper | Rear frame damper |
| Specialist dealer | Bicycle specialist dealer |
| Motor | Drive motor, sub-system |
| Belt drive | Toothed belt drive |

Table 55: Simplified terms

13 Appendix

I. Translation of the original EC/EU Declaration of Conformity

Manufacturer

ZEG Zweirad-Einkaufs-Genossenschaft eG
 Longericher Strasse 2
 50739 Köln, Germany

Authorised representative for documentation*

Janine Otto
 c/o ZEG Zweirad-Einkaufs-Genossenschaft eG
 Longericher Strasse 2
 50739 Köln, Germany

The machine, pedelec types:

| | | |
|------------|------------------|--------------------------|
| 22-26-1001 | Twenty 4 E 24" | Bicycle for young adults |
| 22-26-1002 | Twenty 6 EVO 26" | Bicycle for young adults |

Year of manufacture 2021 and year of manufacture 2022, complies with the following applicable EU provisions:

- Machinery Directive 2006/42/EC
- RoHS Directive 2011/65/EU
- Electromagnetic Compatibility Directive 2014/30/EU.

The safety objectives in the Low Voltage Directive 2014/35/EU have been met in compliance with Appendix I, No. 1.5.1 of the Machinery Directive 2006/42/EC.

The following harmonised standards have been applied:

- ISO 20607:2018 Safety machinery – Instruction handbook – General drafting principles
- EN 15194:2017, Cycles – Electrically power assisted cycles – EPAC Bicycles

The following other technical standards have been applied:

- EN 11243:2016: Cycles – Pannier racks for bicycles – Requirements and test methods



ZWEIRAD

EXPERTEN

GRUPPE

Cologne, 19/04/2021

.....
 Egbert Hageböck, Chairman, ZEG Zweirad-Einkaufs-Genossenschaft eG

* Community member who is authorised to compile the technical documentation

II. Declaration of conformity for incomplete machine

eBike Systems



Assembly confirmation

Declaration of the manufacturer for the partly completed machinery

Manufacturer:

Robert Bosch GmbH
Gerhard-Kindler-Straße 3
72770 Reutlingen
GERMANY

Robert Bosch GmbH
Bosch eBike Systems
Postfach 1342
72703 Reutlingen
www.bosch-ebike.de

List of valid Drive Unit numbers:

| | | | |
|--------------|--------------|--------------|--------------|
| 0275 007 020 | 0275 007 030 | 0275 007 040 | 0275 007 049 |
| 0275 007 022 | 0275 007 032 | 0275 007 041 | 0275 007 060 |
| 0275 007 023 | 0275 007 033 | 0275 007 042 | 0275 007 063 |
| 0275 007 024 | 0275 007 034 | 0275 007 043 | 0275 007 062 |
| 0275 007 025 | 0275 007 035 | 0275 007 045 | 0275 007 065 |
| 0275 007 027 | 0275 007 037 | 0275 007 046 | 0275 007 071 |
| 0275 007 028 | 0275 007 038 | 0275 007 047 | 0275 007 072 |
| 0275 007 029 | 0275 007 039 | 0275 007 048 | 0275 007 074 |
| | | | 0275 007 075 |

List of the applied and observed basic requirements of the "Declaration of Incorporation to appendix I, Machinery Directive 2006/42/EC" (OJ L 157, 09.06.2006, p.24):

| No. | Essential Requirements |
|------------|--|
| | |
| 1.1 | GENERAL REMARKS |
| 1.1.2 | Principles of safety integration |
| 1.1.3 | Materials and products |
| 1.1.5 | Design of machinery to facilitate its handling |
| 1.1.6 | Ergonomics |
| | |
| 1.2 | CONTROL SYSTEMS |
| 1.2.1 | Safety and reliability of control systems |
| 1.2.3 | Starting |
| 1.2.4 | Stopping |
| 1.2.4.1 | Normal stop |
| 1.2.4.2 | Operational stop |
| 1.2.5 | Selection of control or operating modes |
| 1.2.6 | Failure of the power supply |
| | |
| 1.3 | PROTECTION AGAINST MECHANICAL HAZARDS |
| 1.3.2 | Risk of break-up during operation |
| 1.3.4 | Risks due to surfaces, edges or angles |
| 1.3.7 | Risks related to moving parts |
| 1.3.9 | Risks of uncontrolled movements |

| No. | Essential Requirements |
|------------|---|
| 1.5 | RISKS DUE TO OTHER HAZARDS |
| 1.5.1 | Electricity supply |
| 1.5.2 | Static electricity |
| 1.5.4 | Errors of fitting |
| 1.5.5 | Extreme temperatures |
| 1.5.6 | Fire |
| 1.5.8 | Noise |
| 1.5.9 | Vibrations |
| 1.5.10 | Radiation |
| 1.5.11 | External radiation |
| 1.6 | MAINTENANCE |
| 1.6.2 | Access to operating positions and servicing points |
| 1.6.3 | Isolations of energy sources |
| 1.6.4 | Operator intervention |
| 1.7 | INFORMATION |
| 1.7.1 | Information and warnings on the machinery |
| 1.7.1.1 | Information and information devices |
| 1.7.2 | Warning of residual risks |
| 1.7.3 | Marking of machinery |
| 1.7.4 | Instructions |
| 1.7.4.1 | General principles for the drafting of instructions |
| 1.7.4.2 | Contents of the instructions |
| 1.7.4.3 | Sales literature |

The technical documents are generated as required in appendix VII B.

We undertake to transmit relevant information of the partly completed machinery in response to a reasoned request by the appropriate national authorities.

The technical documents may be reviewed at the following contact:

Robert Bosch GmbH
EB/ECA
Gerhard-Kindler-Straße 3
72770 Reutlingen
GERMANY

The product conforms to the following regulations:

| | |
|---|---------|
| Regulation (EC) No 1907/2006, (OJ L 396, 30.12.2006, p.1) | REACH |
| Regulation (EC) No 850/2004, (OJ L 158, 30.04.2004, p.7) | POP |
| Directive 2011/65/EU, (OJ L 174, 01.07.2011, p.88) | RoHS II |
| Directive 2014/30/EU, (OJ L 96, 29.03.2014, p.79) | EMC |

eBike Systems



Page 3 of 3

The machinery is incomplete and must not be put into service until the machinery into which it is to be incorporated has been declared in conformity with the provisions of the directive.

Bosch eBike Systems
Reutlingen, 26.03.2020

A handwritten signature in blue ink, appearing to read 'i.v. h.' followed by a stylized flourish.

Gunter Flinspach (EB/NE)
Vice President

A handwritten signature in blue ink, appearing to read 'Thomas Raica' followed by a long, sweeping flourish.

Thomas Raica (EB/ECA)
Director

14 Keyword index

- A**
 Air valve, 32
 Articulated shaft,
 - caring for 134
 Axle, 32
- B**
 Basic cleaning 127
 Battery housing, 40, 41
 Battery key, 40
 Battery level indicator (battery),
 40, 41
 Battery level indicator, 48
 Battery lock, 40
 Battery, 39
 - charging, 108, 111
 - checking, 57
 - cleaning, 127
 - disposing of, 184
 - inserting, 106
 - remove, 111
 - removing, 106, 107, 108
 - shipping 54
 - transporting, 54
 - waking, 109
 Frame battery, 40
 Integrated battery, 41
 Pannier rack battery, 40
 Technical data 50
 Belt guard 17
 Belt pulley, 38
 Belt tension,
 - check 145
 Belt, 38
 - cleaning, 130
 Bike headset, see steering
 headset
 Bowden cable 35
 Brake cable, 35
 Brake calliper, 36
 Brake disc, 36
 - checking 141
 - cleaning, 130
 Brake lever
 - cleaning, 130
 Brake lever,
 - caring for, 135
 Brake lining, 36
 Brake, 35
 - checking brake cables 144
 - checking the brake disc
 141
 - checking the pressure
 point 140
 - cleaning, 126
 - securing during transport
 54
 Cable clip, 35
 Cover cap, 35
 hydraulic 35
 Insert pin, 35
 Knob, 35
 mechanical 35
 Union nut 35
 Break in operation, 55
 - carrying out, 55
 - preparing, 55
 Button,
 Minus, 44, 99, 111
 On-Off (battery) 40, 41
 On-Off (display), 44, 99, 111
 Plus, 44, 99, 111
 Push assist, 44, 99, 111
- C**
 Carbon seat post
 - caring for, 133
 Cassette,
 - cleaning, 129
 Chain guard 17
 - cleaning, 130
 Chain tension,
 - checking 145
 Chain wheel, 38
 Chain wheels,
 - cleaning, 129
 Chain, 26, 38
 - caring for, 134
 - cleaning, 130
 - maintaining, 137, 146
 Charger, 41
 - disposing of, 184
 Charging port cover, 40
 Charging port, 40
 Chassis, 27
 Child seat, 100
 Clamping force,
 - Adjusting the quick
 releases, 64
 - Checking the quick
 releases, 64
 Compression adjustment, 31
 Compression damper, 32
 Control panel,
 - cleaning, 127
 Crown, 32
- D**
 Dimensions, 53
 Direction of travel, 38
 Disc brake, 36
 Drive system, 38
 - switching off, 110
 - switching on, 110
 Electric, 39
 mechanical 38
 Dust seal, 32
- E**
 Electrical cable,
 - checking 144
 Emergency stop system 18
- F**
 Fork end, 28, 32
 Fork leg 28
 Fork steerer, 28, 32
 Fork, 28
 - caring for, 131
 - cleaning, 128
 - Rigid fork 29
 - servicing, 126
 - SR Suntour structure, 32
 - Suspension fork, 29
 Position 26
 Frame battery,
 - inserting, 106
 Frame, 27
 - caring for, 131
 - cleaning, 128
 - servicing, 126
 Position 26
 Front derailleur, 38
 - cleaning, 129
 Front light, 39
 Front wheel brake, 36
 - braking, 114
 Front wheel, see Wheel
- G**
 Gear shift,
 - switching, 117, 118
- H**
 Handle,
 - caring for, 132
 Handlebars, 26, 28
 - caring for, 132
 - cleaning, 128
 Position 26
 Handles,
 - cleaning, 128
 Headset, see steering headset

- Hub, 33
 – caring for, 133
 - cleaning, 129
- I**
- Indicator,
 Battery level, position 44
 Display 44
 Function 44
 Level of assistance 45
 Level of assistance, position 44
 Lighting, position 44
 RANGE 45
 RANGE, position 44
 Service, position 44
 Tachometer 44
 Tachometer, position 44
 TOTAL 45
 TOTAL, position 44
 TRIP 45
 TRIP, position 44
 Unit 44
 Unit, position 44
 Initial commissioning, 57
- J**
- Jockey wheel,
 - caring for 134
- Journey information, 45
 - switching, 112
- K**
- Kickstand,
 – caring for, 132
 - cleaning, 128
- L**
- Leather handle,
 – caring for, 133
- Leather handles,
 - cleaning, 128
- Leather saddle,
 – caring for, 133
 - cleaning, 129
- Level of assistance, 45, 48
 - selecting, 112
 ECO, 45
 eMTB 45
 OFF, 45
 SPORT 45
 SPORT, 45
 TOUR, 45
 TURBO, 45
- M**
- Minimum insertion depth marking, 81
- Minus button, 44, 99, 111
- Motor cover 17
- Motor, 39
 - cleaning, 127
 Technical data 49, 50
- Mudguard 17
 – caring for, 132
 - cleaning, 128
- O**
- On-board computer,
 - cleaning, 127
- On-Off button (battery), 40
- On-Off button,
 Display, 44, 99, 111
- On-screen indicator, 101
- Operating status indicator, 48
- P**
- Pannier rack battery,
 - remove, 111
 - removing, 106, 107, 108
- Pannier rack,
 – caring for, 132
 - changing, 105
 - cleaning, 128
 - using, 104
- Patent seat post, 37
- Pedal, 38
 – caring for, 134
 - cleaning, 126
- Pedelec,
 - shipping 54
 - transporting, 54
- Plus button, 44, 99, 111
- Push assist button, 44, 99, 111
- Push assist,
 - using, 112
- Q**
- Q-Loc, 32
- R**
- Rear derailleur, 38
 – caring for, 134
- Rear light, 39
- Rear wheel brake, 36
- Rebound adjuster, 32
- Rebound damping 31
- Retainer guard, 41
- Rim brake locking lever 35
- Rim, 33
 – caring for, 133
- S**
- Saddle, 105
 - changing the saddle tilt, 80
 - changing the seat length, 82
 - cleaning, 128
- determining the saddle height, 80, 82
 - using, 105
 Position 26
- Sag,
 Setting wheel, 32
- Seat post, 37
 – caring for, 133
 - cleaning, 128
 Position 26
- Securing hook, 41
- Shifter,
 – caring for, 134
 - cleaning, 129
- Spoke nipples, 34
 – caring for, 133
- Spoke, 33
- Stanchion, 32
- Steering headset 27
- Steering system, 27
- Stem, 27
 – caring for, 132
 - checking 145
 - cleaning, 128
 Position 26
- Suspension fork,
 - cleaning, 126
 – servicing, 126
- Suspension seat post, 37
 – caring for, 133
 - cleaning, 126
- Switching elements,
 - cleaning, 129
- System message, 45, 72
- T**
- Trailer, 101
- Transporting, 53
- Transporting, see
- Transportation
- Tyre pressure, 33
- Tyre size, 33
- Tyres, 33
 - checking 138
 - cleaning, 129
 - converting 102
 Airless 102
 Tubeless 102
- U**
- USB port, 44, 99, 111
- V**
- Valve, 33
 Dunlop valve, 34
 Presta valve, 34
 Schrader valve, 34

Vehicle,
 Technical data 49

W

Weight,
 – Shipping weight, 53
 – Weight, 53

Wheel, 33
 - installing, 63, 66

Winter break, see Break in
operation